



Open the cabinet door to the right of the door


Remove the lower access panel from the bottom to access wire location.

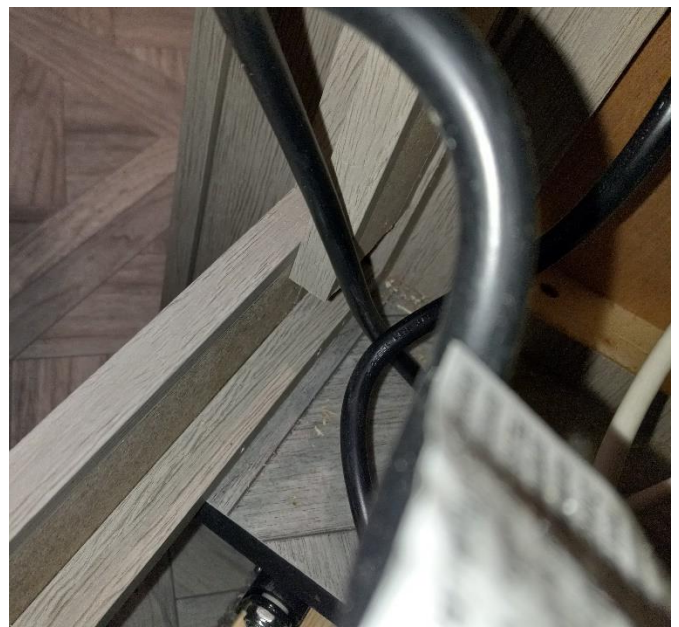

Remove any screws that attach the wall to the floor face.

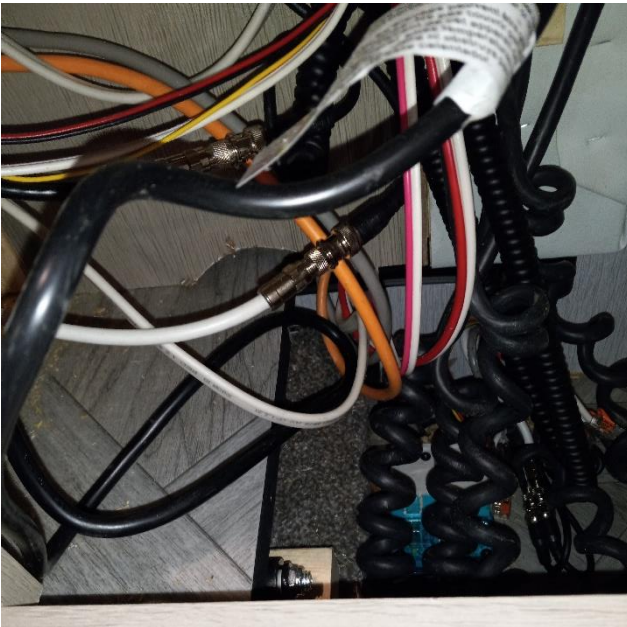

Loosen the interior panel on the wall to access bottom screws. Panel removal not needed.

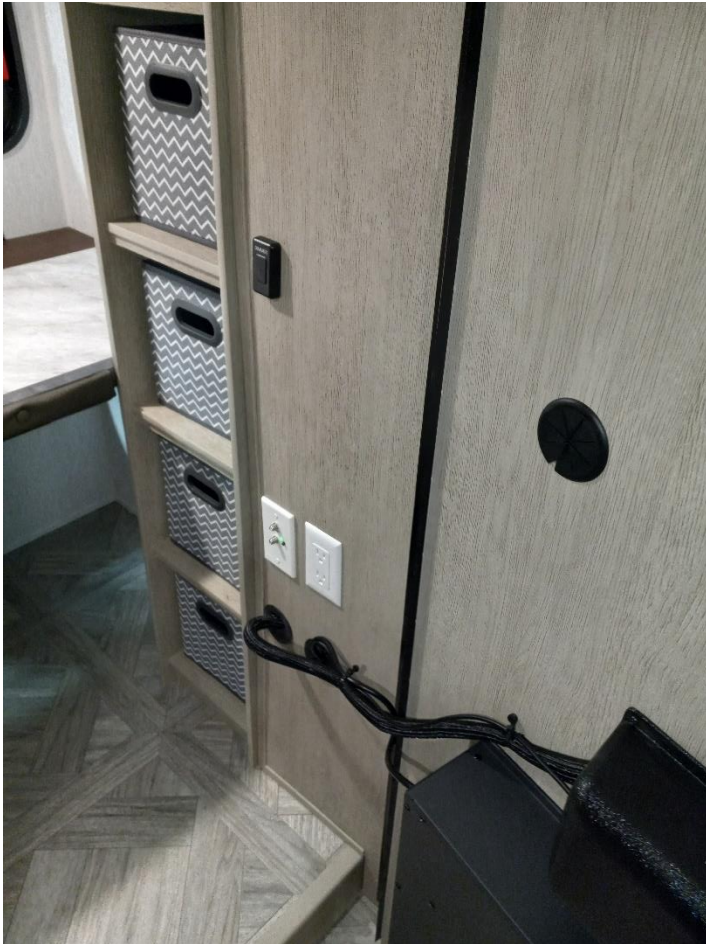

Loosen the bunk/entertainment door. Complete removal not required.

Support while adjusting.

Loosen the screws in the wiring access location.

Adjust the wall to make the door square. +/- ¼ inch

Tighten all screws and reattach door.