



FIELD KIT

Vermeer Corporation

Environmental
Pella, Iowa 50219 USA

FIELD CAMPAIGN KIT #:	IK004532	DATE:	18 April 2024
For Dealer Reference: Service Bulletin #: SVC2024-057			

Updated Manual Shutdown Procedure


CAMPAIGN TYPE:	Mandatory
CAMPAIGN CATEGORY:	Kit and Bulletin

MACHINE/ ATTACHMENT MODEL(S):	SERIAL NUMBERS:		
	Included	Excluded	Kit version
BC700XL	53004, 53008, 53009, 53012, 53013, 53018, 53026, 53030, 53032, 53042, 53043, 53047, 53061, 53062, 53066, 53067, 53070	None	IK01
BC700XL	53005, 53027, 53048, 53050, 53052 – 53054, 53058 – 53060, 53065, 53068, 53071 – 53076, 53078, 53079, 53104, 53117, 53118	None	IK02
BC700XL	53020, 53048, 53049, 53054, 53055, 53065, 53079, 53084, 53116, 53125, 53138	None	IK03

Purpose: This kit includes parts and instructions to update incorrect shutdown procedure.

Special tools and conditions:

- None

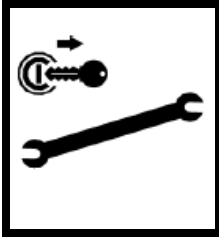

WARNING: Failure to use shutdown procedure can result in unexpected hazard(s). Death or serious injury could result due to entanglement, crushing, cutting, or other hazardous contact. Follow shutdown procedure after operating, before performing any service or maintenance, and before transporting.

BC700XL shutdown procedure:

For your safety and the safety of others, use shutdown procedure before working on machine for any reason, including servicing, cleaning, unclogging, inspecting or transporting the chipper.


A variation of the above procedure may be used if instructed within this manual or if an emergency requires it.

1. Return upper feed control bar to neutral.
2. Reduce engine speed to idle.
 - For machines equipped with centrifugal clutch, cutter disc will disengage.
 - For machines equipped with manual clutch, use clutch handle (2) to disengage cutter disc.
 - Whenever practical and safe, allow engine to idle for one to five minutes before shutting down after operating at full power. Please consult machine's engine manual for details.
3. Shut off engine and remove key.
4. Wait for cutter disc and belt to stop.



NOTICE: Cutter disc rotation can be checked by looking through slots (1) on belt housing shield. Cutter disc will continue to turn for a short time after engine has stopped.

5. Close and latch feed table.

Centrifugal clutch

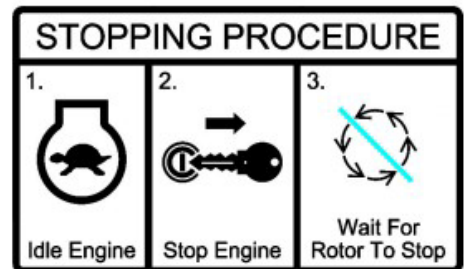


Manual clutch

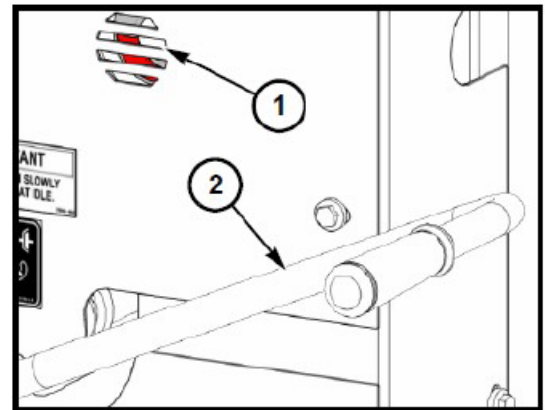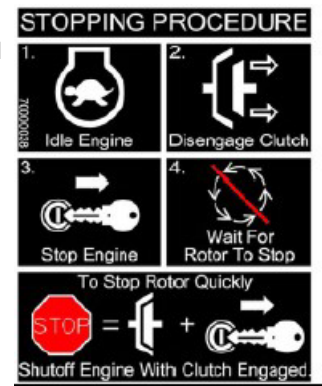

Unless indicated, new parts from kit have callouts with numbers. Callouts with letters indicate existing parts or general items.


Procedure 1: BC700XL Manual Shutdown Procedure Update - IK01

1. Remove and discard existing operator's manual, maintenance manual, and parts manual.
2. Replace with new operator's manual (1), maintenance manual (2), and parts manual (3).

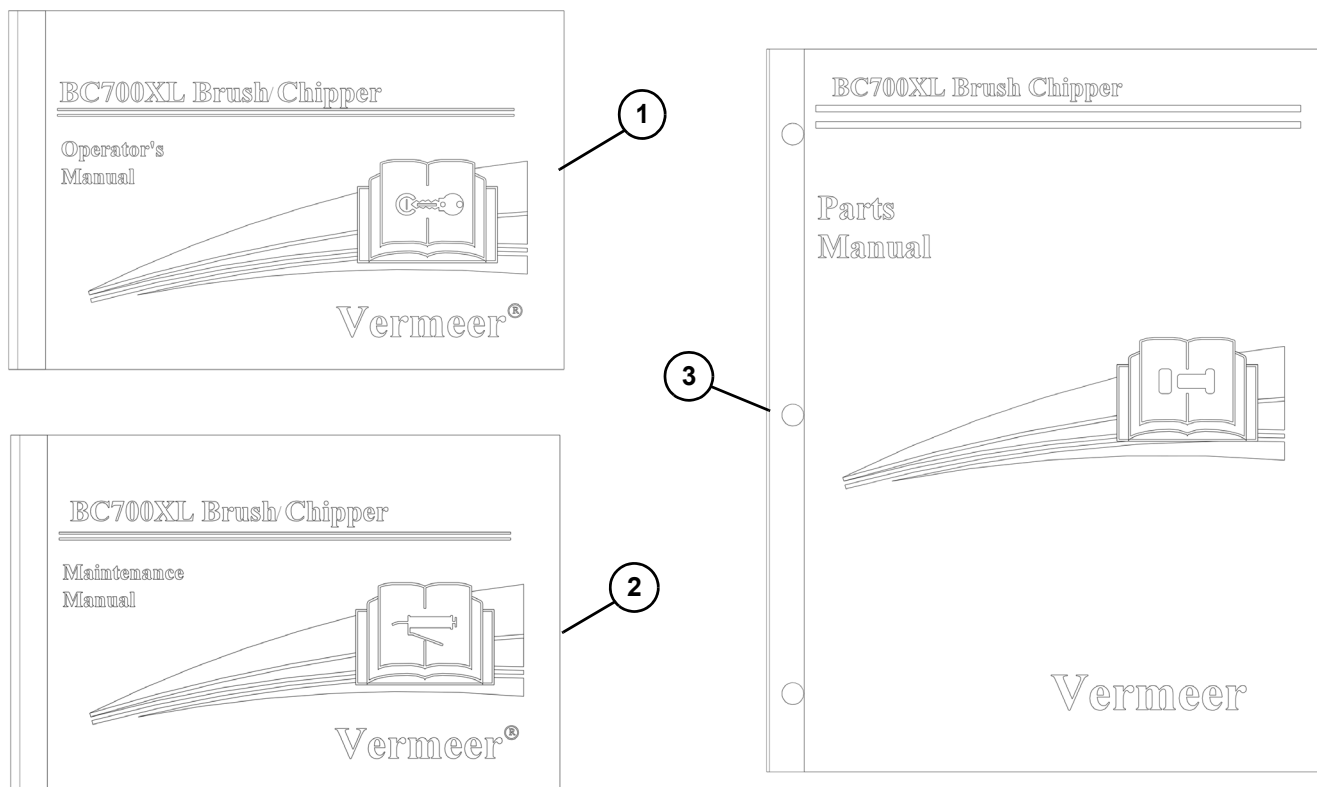


Procedure 1:BC700XL Translated Manual Shutdown Procedure Update IK02

1. Cut existing cable with crimps and discard along with operator's manual.
2. Install new operator's manual (4) with new cable (5), and two new crimps (6).

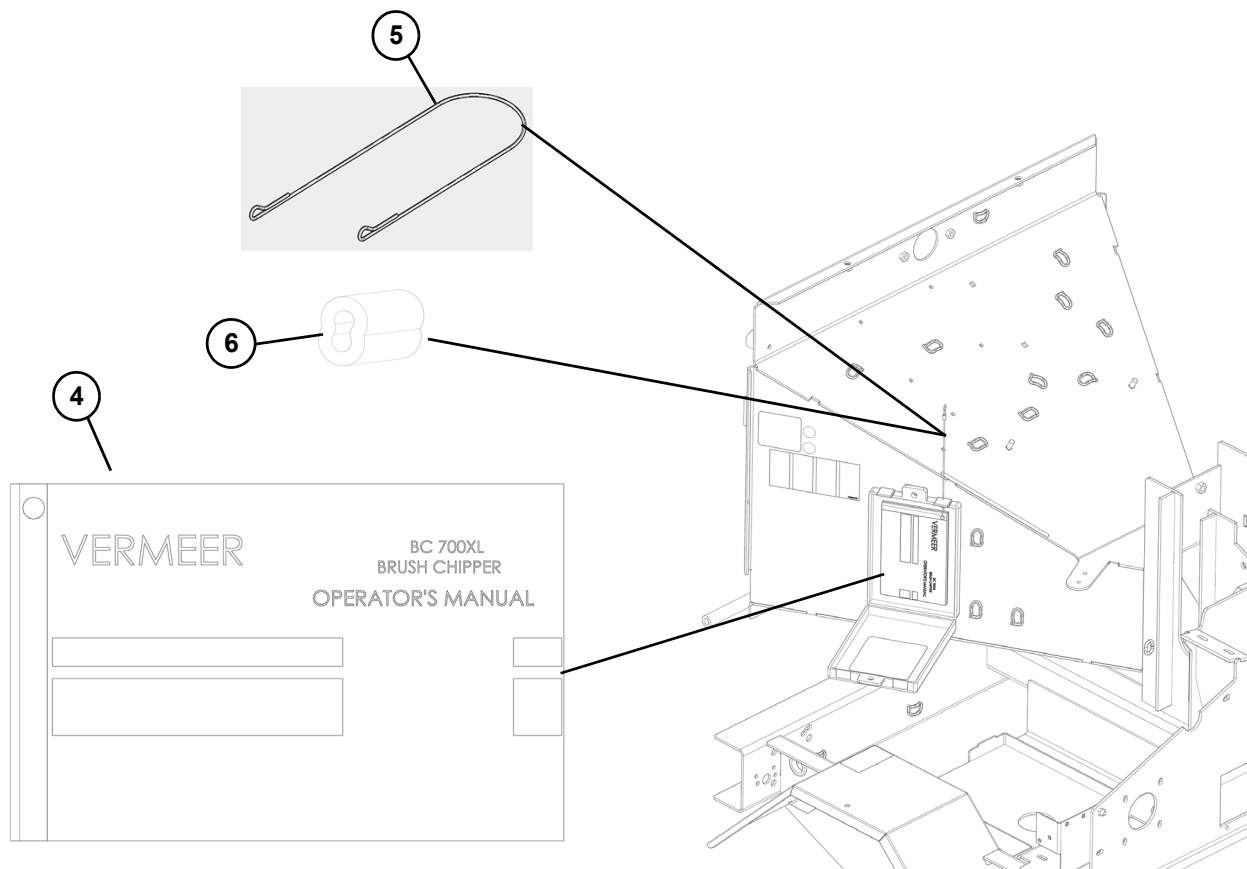

Procedure 1:BC700XL Manual Shutdown Procedure Update IK03

1. Remove and discard existing operator's manual.
2. Replace with new operator's manual **(1)**.

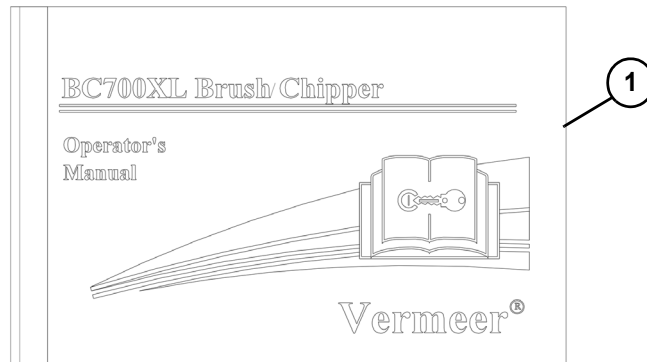

3. Remove Figure 1 and attach to the invoice or place in the manual storage box so unit owner can place with existing parts manual.

Figure 1

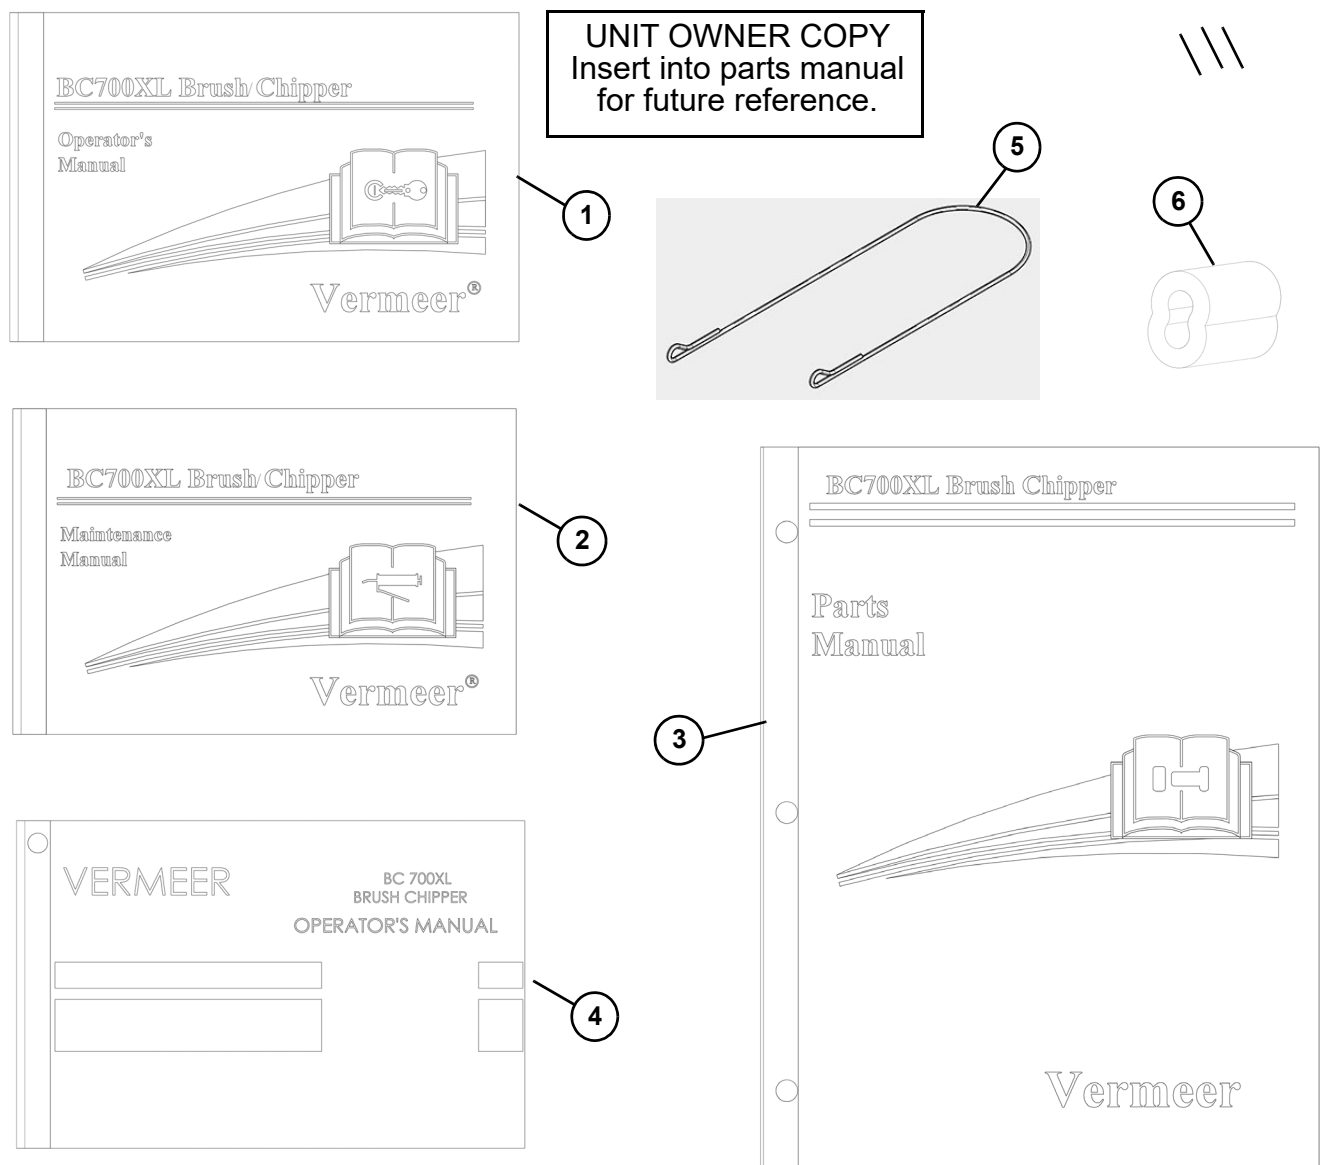


Figure 1 parts list

<u>REF. NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>IK01 QTY.</u>	<u>IK02 QTY.</u>	<u>IK03 QTY.</u>
1	105400JB1	OM-BC700XL (EN) 4TH ED S/N 53001-	1	-	1
2	105400JB2	MM-BC700XL (EN) 3RD ED S/N 53001-	1	-	-
3	105400XGD	BC700XL BRUSH CHIPPER PARTS MANUAL	1	-	-
4	105400JB3	BC700XL CABLED OPERATORS MANUAL	-	1	-
5	142422001	CABLE-NYLON-.068	-	1	-
6	142423001	CRIMP-.068 DIA.CABLE	-	2	-
		Kit includes all items in Figure 1 parts list.			