

How to Winterize Misting System

WARNING: Please refer to your specific RV anti-freeze for all safety precautions including eye, skin and breathing protection.

NOTE: Do not use any pressure that is higher than 100 psi on this water filter.

- 1) Remove filter from water filter canister. (Fig. 1)
- 2) Remove any water from the system via air pressure or low point drains.
- 3) Remove water filter canister and remove any extra water.

NOTE: If you are pumping antifreeze through all the lines, please note that the water filter canister will use that much more antifreeze to be able to go past it.

- 4) Make sure all mister nozzles are free from any moisture.
- 5) If using antifreeze, make sure it sprays out of each nozzle.
- 6) Clean any residual antifreeze to make sure it does not stain.

Fig. 1

