

Service Procedure:

STUI





This TSB includes Repair validation photos. Refer to the latest Warranty Digital Documentation Policy for requirements.

Resetting the DCU Network


1. Turn **ON** the ignition (A).




2. Select **Setup** (B) then **General** (C).

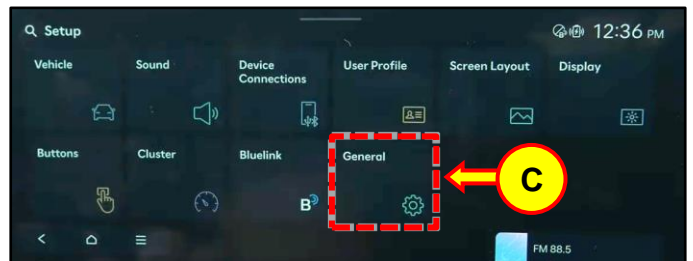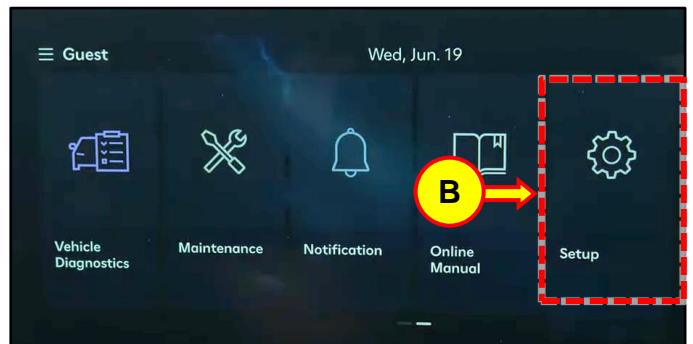

3. Perform the following steps with the radio FM mode **ON**:
 1. Set the volume to **7**.
 2. Tap on the designated area (D).
 3. Set the volume to **3**.
 4. Tap on the designated area (D).
 5. Set the volume to **1**.
 6. Touch the designated area (D).

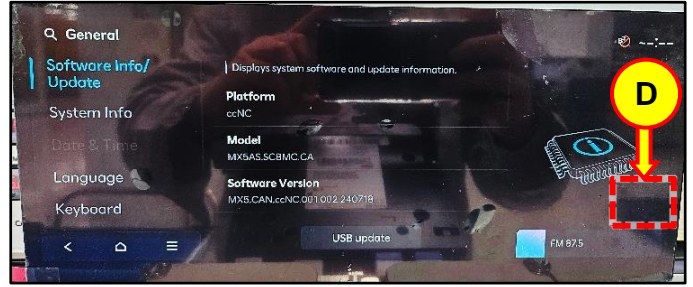

4. Enter **2400** as the password, then select **OK** (E) to enter the Dealer Mode.

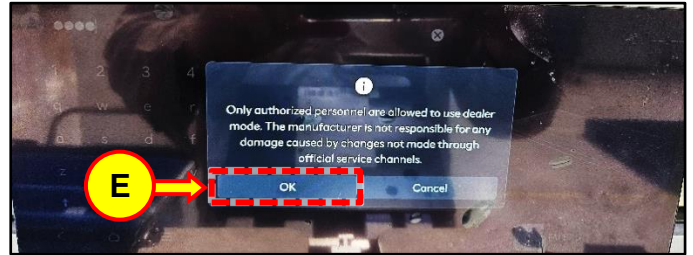


5. Select **Connected Car Service** (F).




6. Select **Reset Network** (G) and wait **30 seconds**.

i Information


After selecting Reset Network you will **NOT** see any confirmation. The module will reset in the background and will not show any status on the screen.

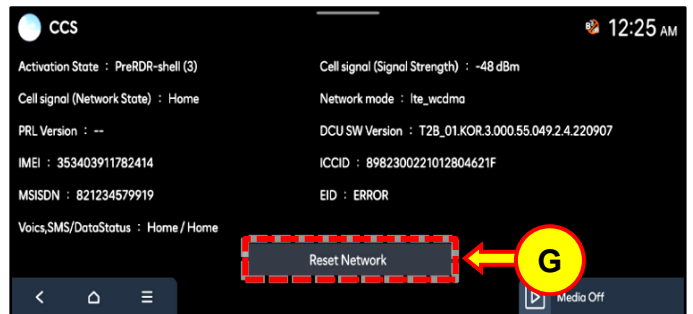

7. Exit the Dealer Mode by selecting the **Home** Icon (H).

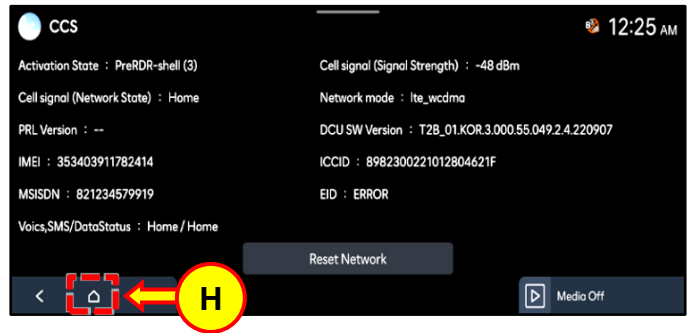


8. Select **Setup** (I).

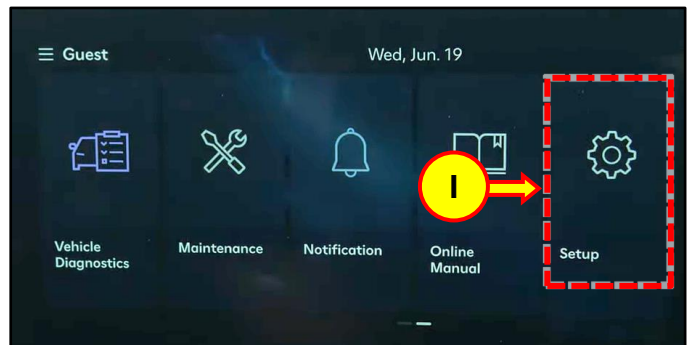

9. Select **BlueLink** (J).

Proceed with **BlueLink Activation** in the next section.

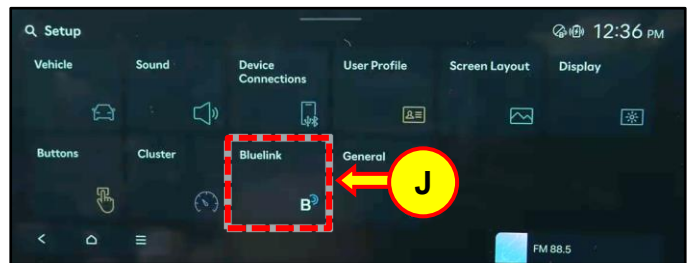

Bluelink Activation



1. Select **Activate** (A) to activate Bluelink.

i**Information**

A loading screen will appear while Bluelink activation is in progress.



2. Verify if Bluelink activation is successful:
 - Select **OK** (B) if Bluelink is activated.
 - If the activation was unsuccessful (C), then restart the vehicle and repeat the Bluelink Activation step 1 on page 4.

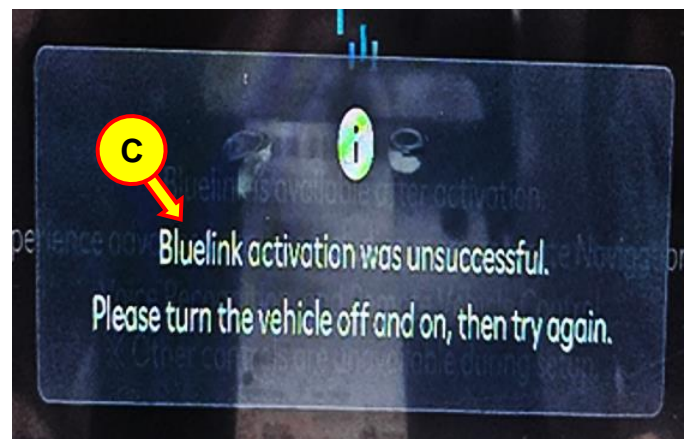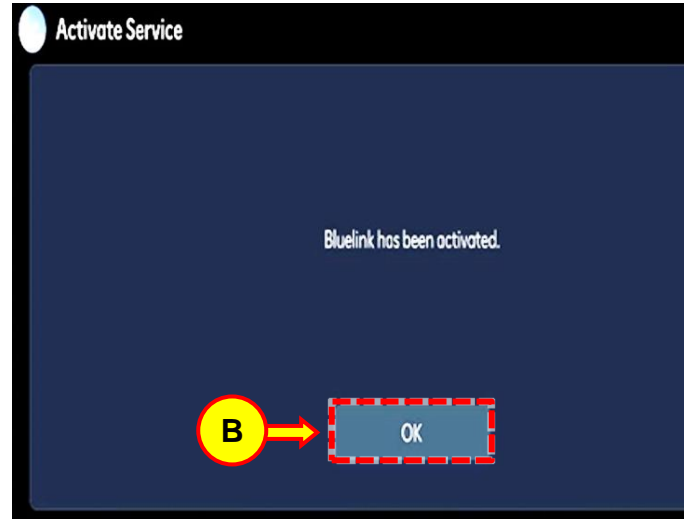

3.


STUI 

Take a photo of the Bluelink activation using your tablet and upload to STUI.

i Information

For retailed vehicles, the customer will now be able to proceed with normal Bluelink enrollment.

For non-retailed vehicles, this screen confirms the modem is in proper status for future enrollment.

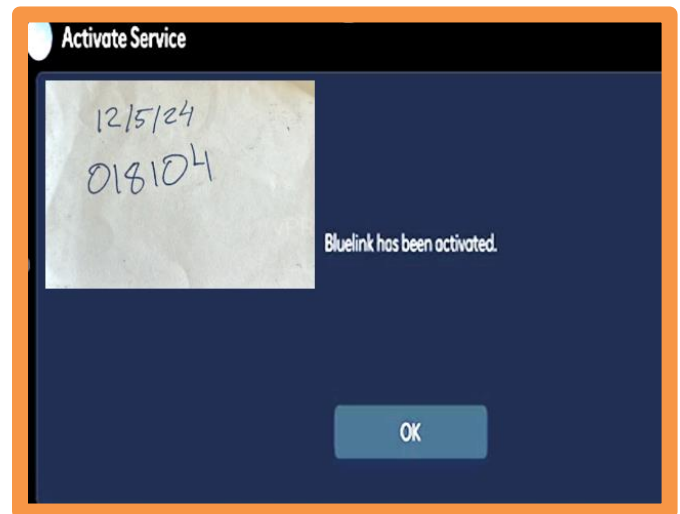

4. The service procedure is now complete.