



Pleasure-Way

phone 306.934.6578
fax 306.934.7085
toll free 1.800.364.0189

Pleasure-Way Industries Ltd. | 302 Portage Avenue | Saskatoon, SK | S7J 4C6

DCM3 RESET PROCEDURE:

1. Make sure you are not connected to shore power, generator is not running and engine is not running.
2. Turn off battery disconnect switch on touch screen by sliding door. Remove charge line disconnect (red key) at back of coach under the power sofa on top of battery box.



3. Remove “ECO-ION” battery cover then open battery box door.



4. Each battery has a status button below the metal strap that secures them in place. Press and hold both buttons at the same time for 10 seconds and release, you will then see the LED lights button flash on and off to confirm reset. Once both batteries have been reset, test the systems to see if they’re functioning normally.

Note*** you will lose the DC % on your touch screen when resetting the batteries. It will automatically update back onto the screen once batteries reach 100% charge.

