

- ATTENTION:**
- GENERAL MANAGER
 - PARTS MANAGER
 - CLAIMS PERSONNEL
 - SERVICE MANAGER

IMPORTANT - All Service Personnel Should Read and Initial in the boxes provided, right.

© 2025 Subaru of America, Inc. All rights reserved.



QUALITY DRIVEN® SERVICE

SERVICE INFORMATION BULLETIN

APPLICABILITY: 2025MY Forester
2024MY Impreza & Crosstrek

NUMBER: 18-226-25R

DATE: 02/12/25

SUBJECT: DTC B2A16 (Immobilizer Key Collation Diagnosis) Service Manual Correction

REVISED: 06/09/25

INTRODUCTION:

This Service Information Bulletin provides the Service Manual Correction to the diagnostic procedure for DTC B2A16 (Immobilizer Key Collation Diagnosis). The immobilizer re-registration process must be completed during the diagnosis and repair procedure. Refer to the procedures outlined in this bulletin when diagnosing DTC B2A16. This correction will be added to the Service Manual at a later date.

SERVICE PROCEDURE / INFORMATION:

Listed below, is a section of the current Service Manual with the correction outlined in **RED**. This information is to be used in conjunction with the current Service Manual.

Refer to STIS: DIAGNOSTICS > TELEMATICS SYSTEM (DIAGNOSTICS) > Diagnostic Procedure with Diagnostic Trouble Code (DTC) > DTC B2A16 IMMOBILIZER KEY COLLATION

1		BASIC INSPECTION.
Work	Before performing the diagnosis, perform basic inspection. Refer to TELEMATICS SYSTEM (DIAGNOSTICS)>General Description>INSPECTION NOTE: - Check the battery and its installation condition. - Check the related fuse. Refer to WIRING SYSTEM>Telematics System>WIRING DIAGRAM - Visually check that the related connectors are properly connected. Also, check the related ground terminal for looseness and corrosion.	
Check	Is the check result OK?	
Yes	Go to 2.	
No	Repair the defective part. After the repair, go to 5.	

CAUTION: VEHICLE SERVICING PERFORMED BY UNTRAINED PERSONS COULD RESULT IN SERIOUS INJURY TO THOSE PERSONS OR TO OTHERS.

Subaru Service Bulletins are intended for use by professional technicians ONLY. They are written to inform those technicians of conditions that may occur in some vehicles, or to provide information that could assist in the proper servicing of the vehicle. Properly trained technicians have the equipment, tools, safety instructions, and know-how to do the job correctly and safely. If a condition is described, DO NOT assume that this Service Bulletin applies to your vehicle, or that your vehicle will have that condition.

Subaru of America, Inc. is ISO 14001 Compliant

ISO 14001 is the international standard for excellence in Environmental Management Systems. Please recycle or dispose of automotive products in a manner that is friendly to our environment and in accordance with all local, state and federal laws and regulations.

Continued...

2	CHECK DTC.	
	Work	1. Turn the ignition switch to ON. 2. Read the DTC of [Telematics] using the Subaru Select Monitor. Refer to TELEMATICS SYSTEM (DIAGNOSTICS)>Diagnostic Trouble Code (DTC)
	Check	Is DTC B2A16 displayed? (Current code)
	Yes	Go to 3.
	No	Even if DTC is displayed, the circuit has returned to a normal condition at this time. Reproduce the failure, and then perform the diagnosis again. • NOTE: In this case, temporary poor contact of connector, temporary open or short circuit of harness may be the cause

3	CHECK DCM POWER SUPPLY.	
	Work	Using the Subaru Select Monitor, check the following items in the [Data monitor] of [Telematics]. Refer to TELEMATICS SYSTEM (DIAGNOSTICS)>Data Monitor. • Battery voltage
	Check	Is the voltage 9 - 16 V?
	Yes	Go to 4.
	No	Replace the battery and go to 4. Refer to STARTING/CHARGING SYSTEMS(H4D0)>Battery.

4	PERFORM IMMOBILIZER SYSTEM RE-REGISTRATION.	
	Work	Perform re-registration of immobilizer system for DCM using the Subaru Select Monitor. Refer to the "REGISTRATION MANUAL FOR IMMOBILIZER" for more details. NOTE: "Telematics CM," described in "REGISTRATION MANUAL FOR IMMOBILIZER", is described as "DCM" in the Service Manual.
	Check	Is registration complete?
	Yes	Go to 5.
	No	Refer to "Correspondence table when registration is not possible" in the "REGISTRATION MANUAL FOR IMMOBILIZER."

5	CHECK DTC.	
	Work	1. Cycle the ignition Off and wait 1 minute. 2. Turn ignition on clear all DTCs 3. Cycle ignition off and wait 1 minute. 4. Turn ignition on Read the DTC of [Telematics] using the Subaru Select Monitor. TELEMATICS SYSTEM (DIAGNOSTICS)>Diagnostic Trouble Code (DTC).
	Check	Is DTC B2A16 displayed?
	Yes	Replace the DCM. Refer to ENTERTAINMENT & MONITORING>Data Communication Module.
	No	Go to 6.

Continued...

6	CHECK DTC.	
	Work	Turn ignition on using the Subaru Select Monitor, read the value of Immobilizer Key Registration Status
	Check	Is the Value of [Immobilizer Key Registration Status] Registered?
	Yes	Go to 7.
No	Go to 4.	

7	CHECK DTC.	
	Work	Test all function of telematics system
	Check	Is the telematics system working as designed
	Yes	Function returned to normal.
No	Go to 1.	

Note: For in-depth testing of telematics functions and operations, refer to TSB 15-266-20R.

IMPORTANT REMINDERS:

- SOA strongly discourages the printing and/or local storage of service information as previously released information and electronic publications may be updated at any time.
- Always check for any open recalls or campaigns anytime a vehicle is in for servicing.
- Always refer to STIS for the latest service information before performing any repairs.