

Field Fix for the Nuisance Light Fluttering issue

To correct the light fluttering issue when the Water Pump surges, on units that have the LCI Unity Board in them, you need to install the pre-wired relay kit. All wires are clearly marked on the relay so perform the following steps.

- 1) Turn off power to the RV.
- 2) Locate the Unity Board. Splice in the pre-labeled Relay negative wire to the Unity Board VDC negative power supply wire. Splice in the end of the fuse holder wire to the Unity Board VDC positive power supply wire.
- 3) Disconnect the Water Pump signal wire on the output spade on the Unity Board and connect it to the pre-labeled wire coming off the relay.
- 4) Connect the pre-labeled wire from the Relay to the Water Pump signal spade on the Unity Board. Test Water Pump function.