

 Preview Solution CBR-2512-1

Volvo Chassis - Air-Valve Cover Popping Off Seat - VN (4)

Published 7 October 2025

Valid For

Volvo Chassis - VN (4)

Model Year - 2025 to current

Only trucks with leather seats

Overview

- There have been reports of the air valve control cover becoming loose or detaching when operating the seat controls. An updated trim panel has been introduced to prevent this issue from occurring. Please follow the steps below to perform the seat repair.


Repair

Parts Needed


Part number	Part description	QTY
24037179	Seat Side Cover	1

Repair Steps


1. Drain the air tanks.
2. Remove the two air-valve covers. (Highlighted orange below)

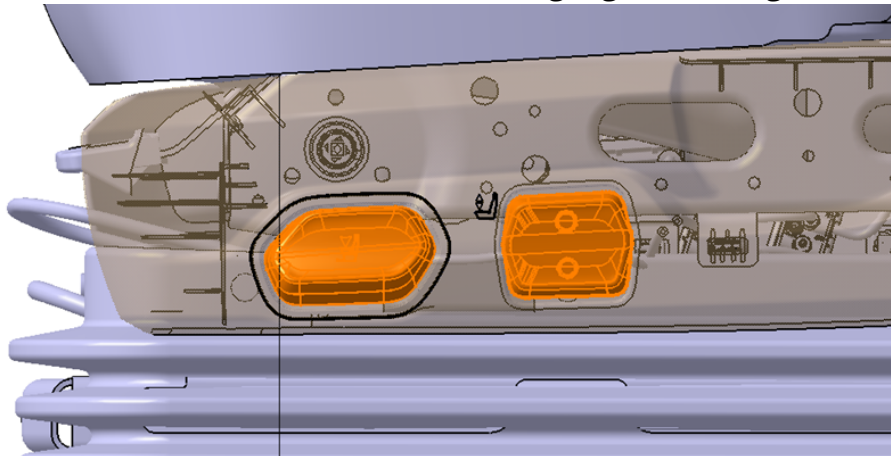


3. Remove the two screws that hold the forward dump valve to the side cover. (Highlighted orange below)

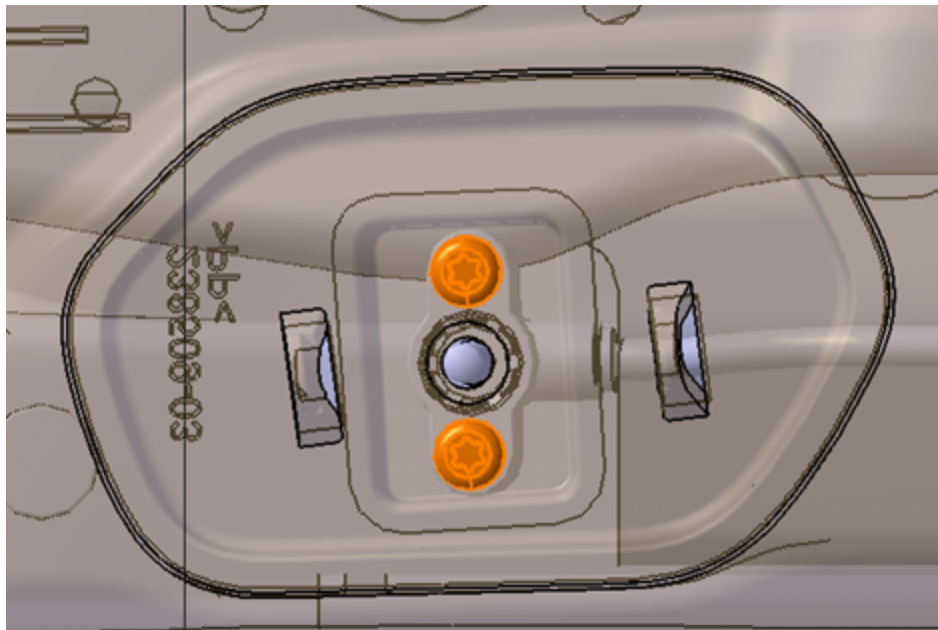


4. Snap the rear dump valve cover out of the seat side cover and detach the airline.

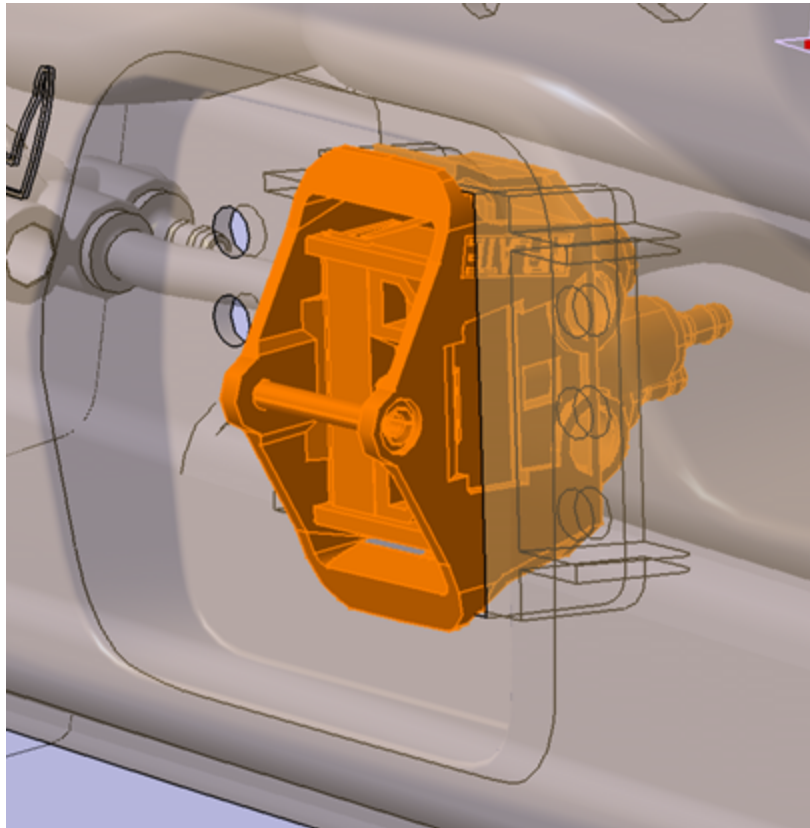

5. Retain all parts and hardware for reuse.
6. Remove the push-pin and Torx screw that holds the front of the cover to the seat.

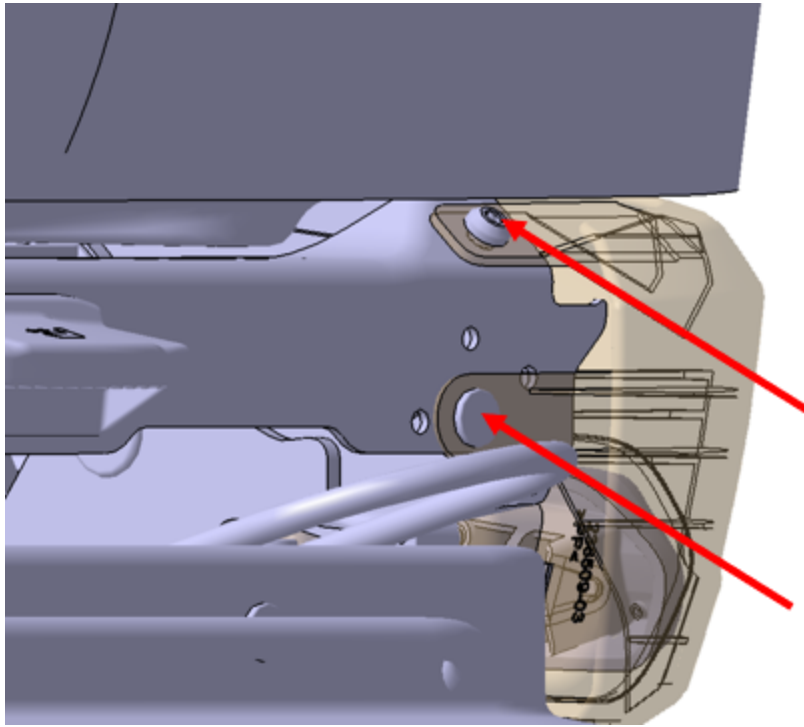


7. Remove the Torx screws that are at the rear of the cover.

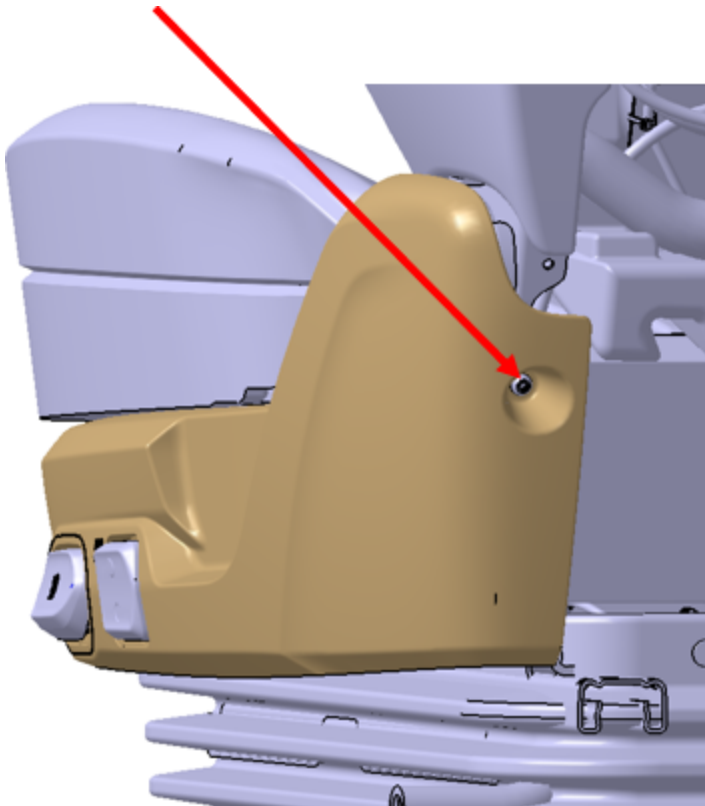

8. Pull the cover off the seat.

9. Unhook the spring from the cover.

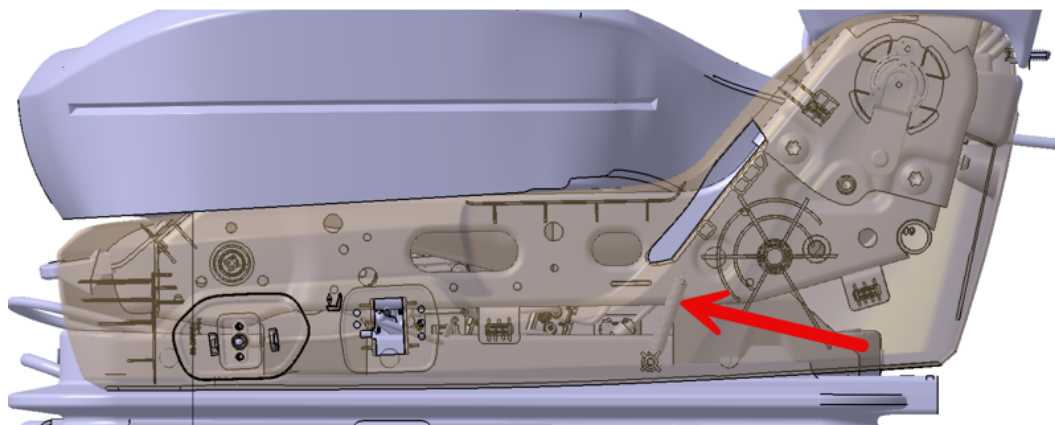

10. Install the replacement cover in the reverse order.

Related links and attachments

No links or attachments available



Share

to others that might find it helpful



Feedback

[Give feedback](#)

to help improve the content of this article