




Pleasure-Way

phone 306.934.6578
fax 306.934.7085
toll free 1.800.364.0189

Pleasure-Way Industries Ltd. | 302 Portage Avenue | Saskatoon, SK | S7J 4C6

Charge line key replacement – Rekon

Locate the screw cap covers securing the partition in place. Remove the Robertson #6 screws from beneath the covers to remove the partition panel. With the partition removed, locate the screw cap covers securing the base of the shelf and remove to access the back of the charge line switch.

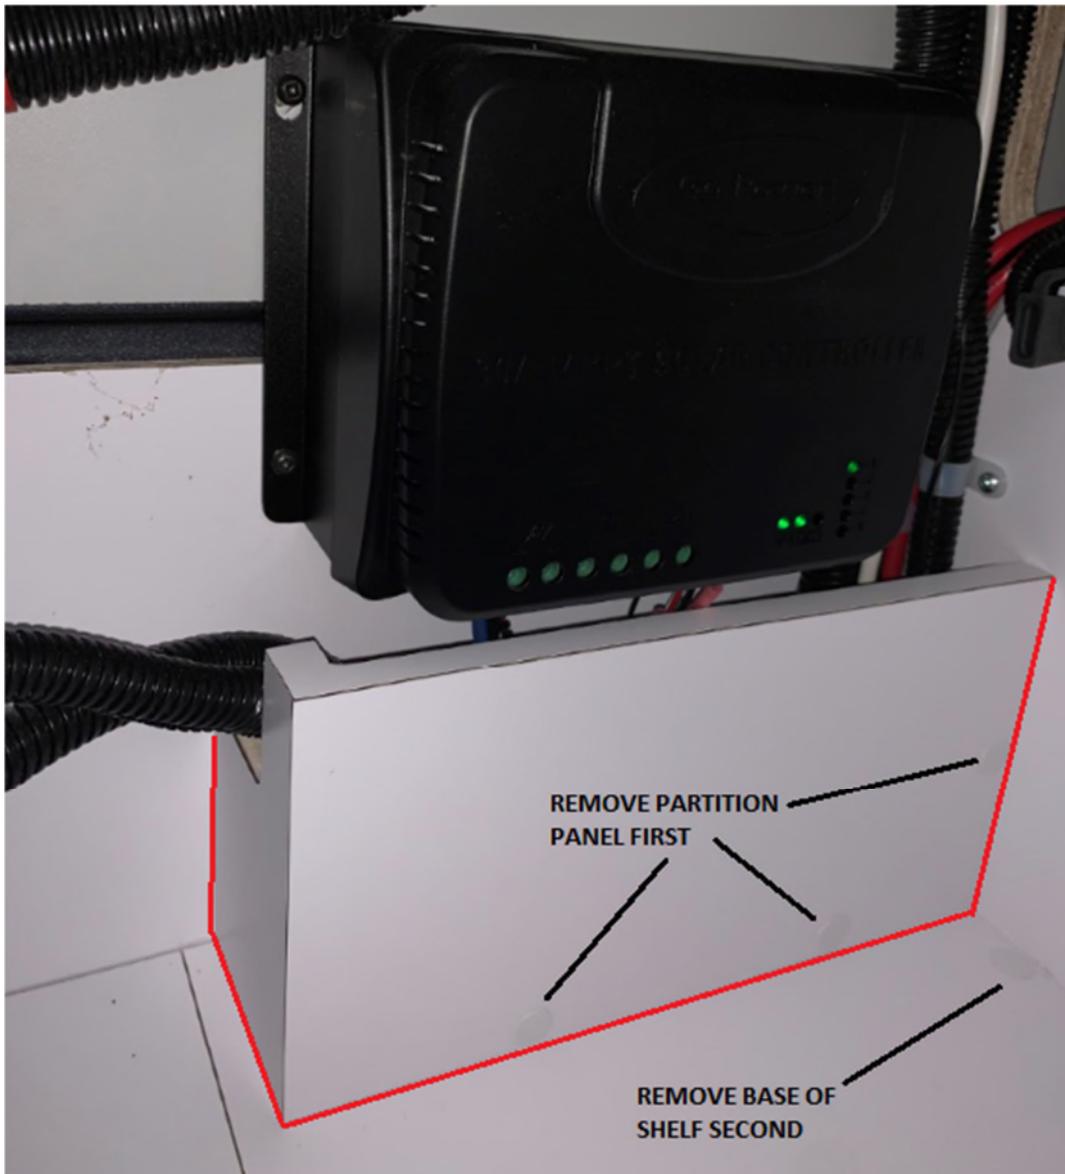

With access to the back of the switch, remove the 2 lines connected to the input side of the disconnect and tape the ends to prevent short to ground. Then remove the single output line from the switch and tape the end as well.



The disconnect switch is held in place with 2 screws from this rear side, remove the mounting screws and pull the switch from the cabinet. Place the new switch into position and secure using the mounting screws. Re-secure the input lines onto 1 post and the output onto the other and re-install the cabinet components to finalize the repair.

