



Pleasure-Way

phone 306.934.6578
fax 306.934.7085
toll free 1.800.364.0189

Pleasure-Way Industries Ltd. | 302 Portage Avenue | Saskatoon, SK | S7J 4C6

DCM3 RESET PROCEDURE REKON:

1. Make sure you're not connected to shore power and engine not running.
2. Turn off battery disconnect switch on touch screen. Remove charge line disconnect (red key) under the inside of the P/S first cabinet.



3. Remove the plexi-glass on the 2nd P/S rear cabinet where the 4 batteries are located. The Plexi-glass is held on by spring loaded bolts. Turn each bolt ¼ turn counter clockwise to disengage.



4. Each battery has a status button as seen below. Press and hold all 4 buttons at the same time for 10 seconds and release, you will then see the LED lights button flash on and off to confirm reset. Once all batteries have been reset, test the systems to see if they're functioning normally.

Note*** you will lose the DC % on your touch screen when resetting the batteries. It will automatically update back onto the screen once batteries reach 100% charge. Plug in to shore power until lithium batteries are fully charged to regain the battery percentage.