

GPOP - Issue Review System

Part Number: 68593596A\$, 68720588A\$, 68720589A\$

Part Description: POWER DRIVE UNIT LT

Issue Description: If the Power Liftgate (PLG) does not operate following battery drainage or when DTCs B2199-16 or B21DD-16 are active, perform the following steps:

1. Verify Battery Voltage:
Ensure battery voltage is at nominal value (minimum 12.5 V). Charge the battery, if necessary before proceeding.
2. Confirm Low Voltage DTCs:
After charging, verify that any low battery voltage DTCs are stored.
3. Check PLGM Proxi Alignment:
 4. If PLGM is not aligned:
 - Perform Proxi Alignment - Reset the module - Perform module recalibration.
 5. If Proxi Is Correct:
 - Reset the module. - Perform module calibration.
 6. Diagnose Active DTCs
 7. Inspect wiring and related components associated with those DTCs. Repair as necessary and clear DTCs.
 8. Module Replacement:
If the module does not accept Proxi alignment, Module reset, or Calibration.