



SIB 65 04 26

ALARM SYSTEM MALFUNCTIONING (CONVERTIBLES)

2026-03-16

<input checked="" type="checkbox"/>	THIS REPAIR IS MOBILE FRIENDLY
<input type="checkbox"/>	THIS REPAIR IS REMOTE SOFTWARE UPGRADE (RSU) FRIENDLY

MODEL

E-Series	Model Description	Production Date	Affected Option Code
F91	(M8 Convertible)	SOP	302
G14	(8 Series Convertible)		
G23	(4 Series Convertible)		
G29	(Z4 Roadster)		
G83	(M4 Convertible)		

SITUATION

Customers may report issues with the alarm system not functioning correctly. These concerns may include one or more of the following:

- Missing confirmation sound (function cannot be selected or deselected in the Central Information Display (CID) menu).
- Alarm system deactivated (interior mirror light off).
- Alarm does not function.
- DWA LED without function after locking (no flashing/flashing).
- Acoustic acknowledgement is unavailable or cannot be enabled/disabled via the CID menu under doors/windows.
- Tilt alarm sensor "SINE" cannot be reached via diagnostics.


CORRECTION


Remove alarm system fuse to reset the Siren and tilt alarm sensor (SINE).

PROCEDURE

Proceed as follows:

1. Remove the flap (1) from the luggage compartment wheel arch trim panel at right (2).

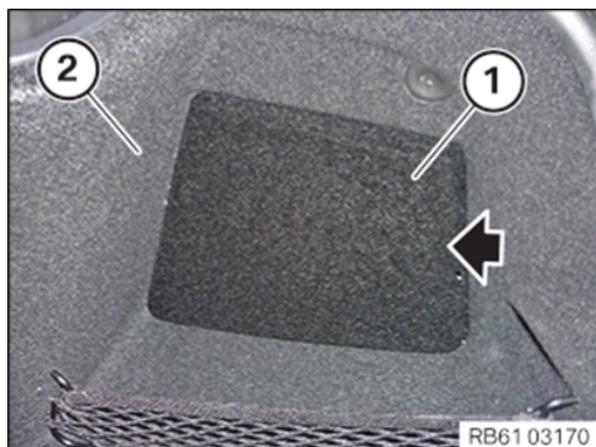

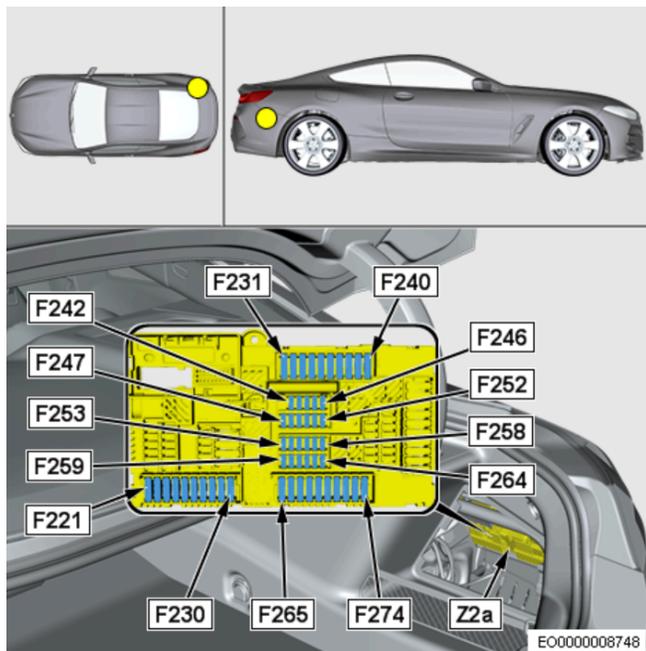

2. Remove (5A) fuse F244 of the Power distribution box, rear. After waiting approximately 10 seconds re-install it.

3. The alarm system Siren and tilt alarm sensor should now be reset.

4. If functionality has not been restored, please continue diagnosis with ISTA.

Note: A software solution is in development.

PARTS INFORMATION

A parts exchange will not provide a solution.

CLAIM INFORMATION

Covered under the terms of the BMW New Vehicle Limited Warranty for Passenger Cars and Light Trucks as described below.

Repair Code:	6575401500	Horn / emergency current siren / antitheft tilt alarm sensor (DWA) Permanent malfunction
---------------------	-------------------	---

Obtain the flat rate unit (FRU) allowances for the following that applies.

Labor Operation	Description	Labor Allowance
00 00 006	Carrying out vehicle test (Main work)	As applicable
Or:		
00 00 556	Carrying out vehicle test (Plusposition)	As applicable
And:		
61 21 528	Supporting voltage of the vehicle electrical system (For ICEV and PHEV Models only)	As applicable
And, as needed:		
65 75 005*	Checking alarm system for function (with vehicle diagnosis system (Work time))	Up to 2 FRU WT Max. WT FRU
Or:		
00 58 500*	Diagnosis Worktime Flat Rate	2 FRU
And:		
61 99 000	Perform a reset the siren and tilt alarm sensor by removing fuse F244 (5A) in the Power distribution box (rear), and re-	1 FRU

	install it after waiting approximately 10 seconds	
--	---	--

If you are using a Main labor code for another repair, use the Plus code labor operation 00 00 556 instead of 00 00 006, or exclude them (including 61 21 528) when the Vehicle Test is included in another repair.

Work time labor operation codes 65 75 005, 00 58 500, and 61 99 000 are not considered Main labor operations.

(* Based on which one applies to your center, please refer to **SI B01 01 20** or **B01 07 20** for the applicable procedure for documenting, claiming, and explaining, on the RO and in the claim comments, your diagnosis work time (WT), job/repair work time (WT), and the vehicle repairs your center performed, unless otherwise required by State law.

Other Repairs (The Reset Procedure did not work)

If other eligible and covered work is performed because of performing the ISTA diagnostics, related test plans, and/or other approved diagnosis procedures, claim this work with the applicable Repair Code listed in AIR together with the corresponding labor operation codes and their flat rate unit (FRU) allowance(s), including the diagnosis* that applies.

BMW Group's AIR Application Resource for Flat Rate Labor Operation Codes

To obtain the corresponding flat rate unit (FRU) allowance information from the BMW Group AIR application resource, start by entering the Chassis Number (last seven (7) characters of the VIN), and click on the "Search" icon. If the "Vehicle Selection" window displays two or more model possible vehicle choices, select the applicable Model, or enter the full VIN (17 characters) instead to proceed. Click on the "Flat Rate Units" button and enter a flat rate labor operation code number "without spaces" in the field to the right, click on the "Search" icon to display the corresponding listing of "Flat rate unit group details" that are available and their corresponding FRU allowances.

FEEDBACK REGARDING THIS BULLETIN

Technical Feedback	To submit feedback for the technical topic of this bulletin: Submit your feedback in the rating box at the top of this bulletin
Warranty Feedback	To submit feedback for the CLAIMS section of this bulletin: Submit an IDS ticket to the Warranty Department, or use the chat available in the Warranty Documentation Portal
Parts Feedback	To submit feedback for the PARTS section of this bulletin: Submit an IDS ticket to the Parts Department