



Hood Lamps Update

This document contains two model specific instructions. Before you start the work, make sure that you use the correct instruction. Refer to the information in the heading on the pages that follow.

Situation

The engine bay and luggage compartment lamps may crack and fall during vehicle lifetime.

Action

Replace the lamps using new washers and updated torque.





Hood Lamps Update

This instruction refers to other documents that are necessary to do the procedure.



WARNING

Always refer to the manufacturer's safety data sheet for the chemicals and use the necessary PPE. The chemicals can cause injury or death.

PARTS	REFERENCE	QUANTITY
Hella 0681 foam gasket	1098316	4
Hella Courtesy foam gasket	1098343	2
Hella lamp plastic washer	1098362	8
Hella lamp rubber washer	1098290	8
Lamp Unit Hella 0681 White Assy	1035378	2
Lamp unit Hella Courtesy Assy (Clear)	1043811	2
M4x20-0,70 Ti Dome head bolt	130-149-0421	8

TOOLS	SPECIFICATION	QUANTITY
General mechanical tools	–	–


CONSUMABLES	REFERENCE	QUANTITY
AC isolation tape	130-873-9014	4x 150 mm
Isopropanol, 99%	–	–
Loctite 480	1018501	–
Tesa fleece tape 15x19	3718-012	–


Prepare

1. Open the front hood with the key fob or from the center console.
2. Open the rear hood with the key fob or from the center console. If the 12 V is set to off, open the rear hood manually, refer to [WOM-00223](#).
3. Disconnect the 12 V system, refer to [WOM-00082](#).

Remove the Rear-Hood Side Lamps

1. Remove 4x H3 (M4x15) bolts **A** from the LH and RH side lamps.

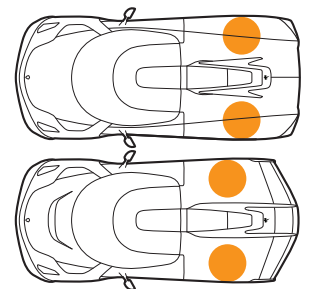

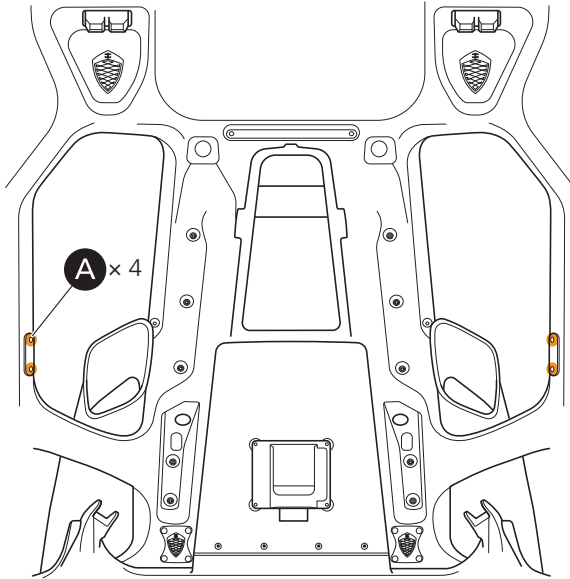

2. Discard 4x H3 (M4x15) bolts **A**
3. Remove 2x side lamps.
4. Remove the protection tape together with AC tape from 2x side lamp connectors.
5. Disconnect 2x side lamp connectors.
 - Connector X36 from the LH side.
 - Connector X37 from the RH side.

Install the Rear-Hood Side Lamps



WARNING

Always refer to the manufacturer's safety data sheet for the chemicals and use the necessary PPE. The chemicals can cause injury or death.

1. Put on the necessary personal protective equipment.
2. Use isopropanol to clean the plastic surfaces of the new 2x side lamps.

Part: 1043811




CAUTION

Make sure that the gasket is on the contact surface and does not extend outside shape. If the gasket is outside of the shape, the gasket will not bond correctly.

3. Attach the gasket on the contact surface of each of 2x side lamps.

Part: 1098343

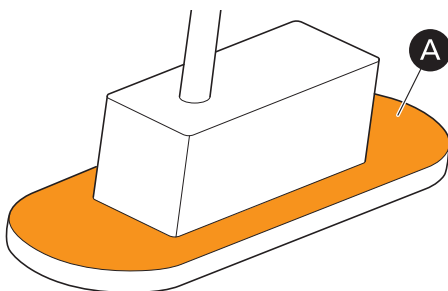




Note

Do not remove the gasket that is already installed. Install one more gasket on top of the installed gasket.

4. Connect 2× side lamp connectors.
 - ° Connector X36 from the LH side.
 - ° Connector X37 from the RH side.
5. Wind AC isolation tape **B** around the connected connectors X36 and X37.

Part: 130-873-9014

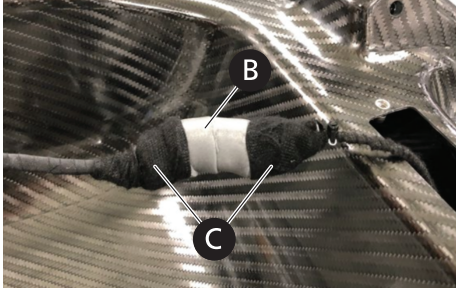

6. Attach protection tape **C** to the ends of AC tape to prevent the AC tape ends to loosen.


Part: 3718-012

7. Install 2× side lamps, each with new 2× H3 (M4×20) bolts **D**, plastic **E** and rubber **F** washers.

Part: 130-149-0421, 1098362, 1098290


Consumable: Loctite 480


Torque: 1 Nm

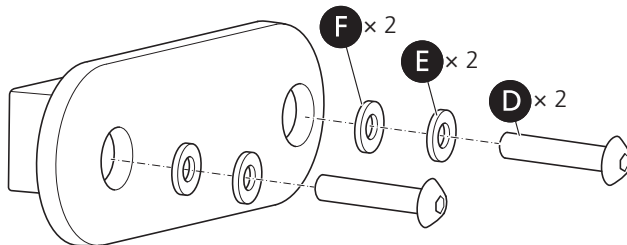

Remove the Rear-Hood Lamp

1. Remove 2× H3 (M4×15) bolts **A** from the rear-hood lamp.

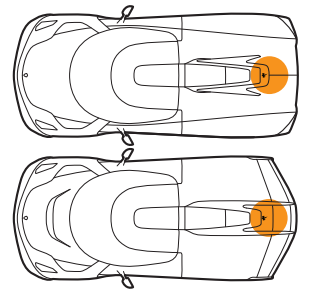

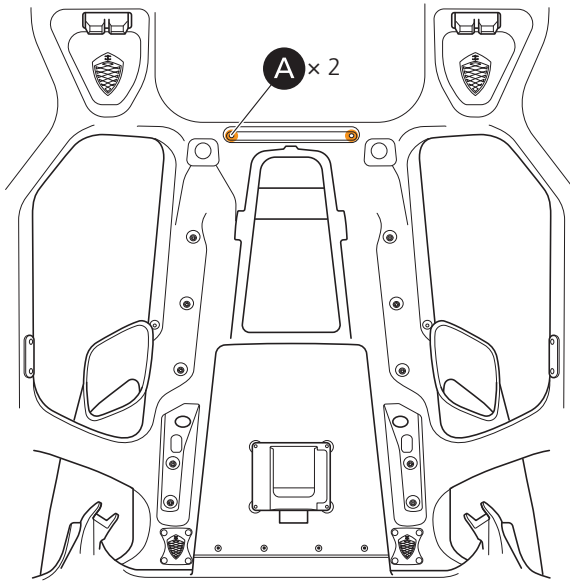

2. Remove the rear-hood lamp.

Note

The bracket that holds the lamp can become loose and be removed together with the lamp.

3. Remove the protection tape together with AC tape from the rear-hood lamp connectors.
4. Disconnect the rear-hood lamp connector.


Install the Rear-Hood Lamp



WARNING

Always refer to the manufacturer's safety data sheet for the chemicals and use the necessary PPE. The chemicals can cause injury or death.

1. Put on the necessary personal protective equipment.
2. Use isopropanol to clean 2x contact surfaces **A** on the rear hood.

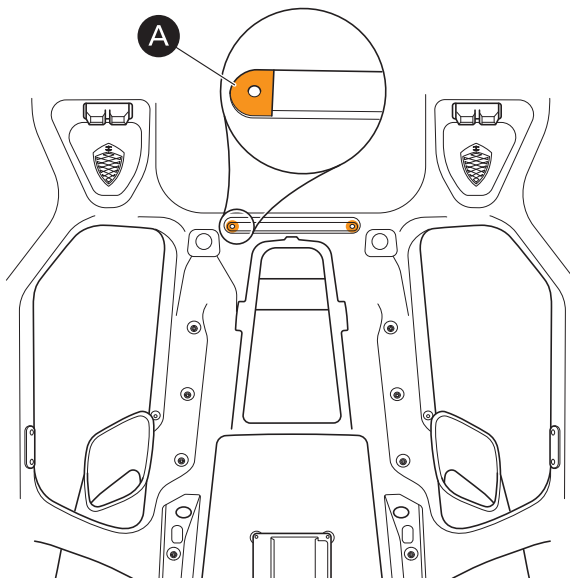



CAUTION

Make sure that the gasket is on the contact surface and does not extend outside shape. If the gasket is outside of the shape, the gasket will not bond correctly.


3. Attach the gasket on each of 2x contact surface **A** on the rear hood.

Part: 1035378

4. Connect the rear-hood lamp connector.

5. Wind AC isolation tape **B** around the connected rear-hood lamp connector.

Part: 130-873-9014

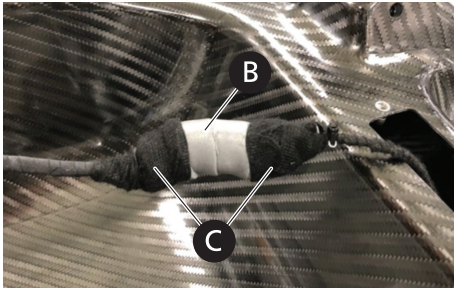

6. Attach protection tape **C** to the ends of AC tape to prevent the AC tape ends to loosen.


Part: 3718-012

7. Install the new rear-hood lamp with new 2x H3 (M4x20) bolts **B**, plastic **C** and rubber **D** washers.

Part: 130-149-0421, 1098362, 1098290


Consumable: Loctite 480


Torque: 1 Nm

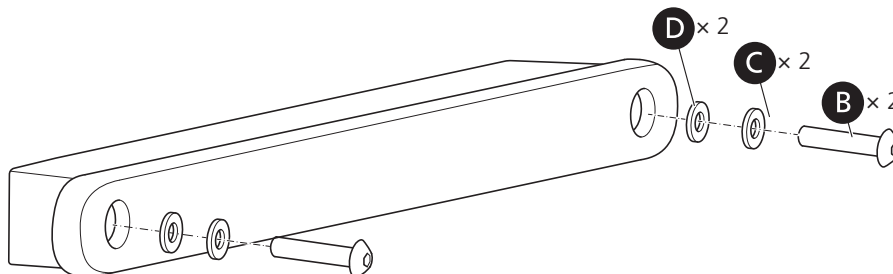

Remove the Front-Hood Lamp

1. Remove the access panel of the front-hood wash-pipe, refer to [WOM-00642](#).
2. Remove the zip tie that attaches the front-hood lamp connector to the anchor.
3. Remove the protection tape together with AC tape from the front-hood lamp connector.
4. Disconnect the front-hood lamp connector from the front hood harness.
5. Remove 2x H3 bolts **A** from the front-hood lamp.

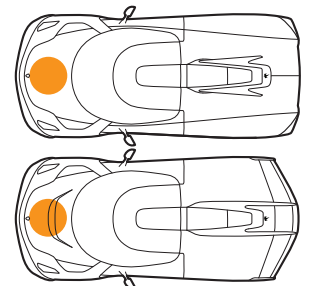

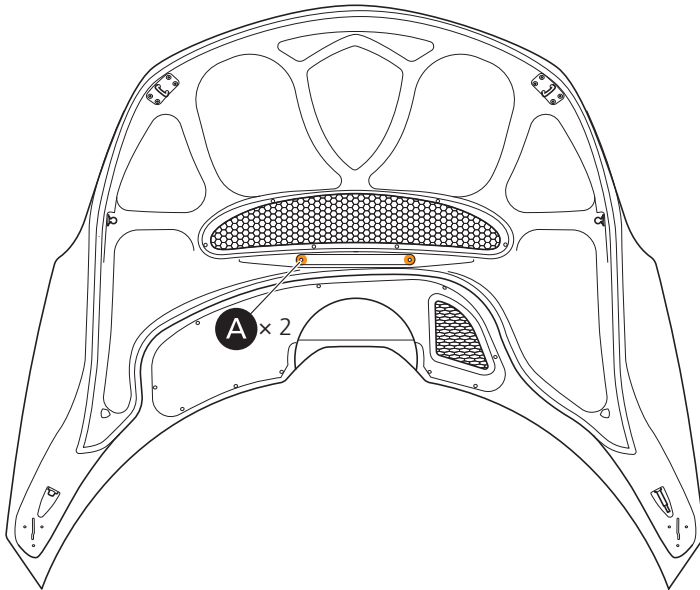

6. Remove the front-hood lamp.

Note

The bracket that holds the lamp can become loose and be removed together with the lamp.


Install the Front-Hood Lamp



WARNING

Always refer to the manufacturer's safety data sheet for the chemicals and use the necessary PPE. The chemicals can cause injury or death.

1. Put on the necessary personal protective equipment.
2. Use isopropanol to clean 2x contact surfaces **A** on the front hood.

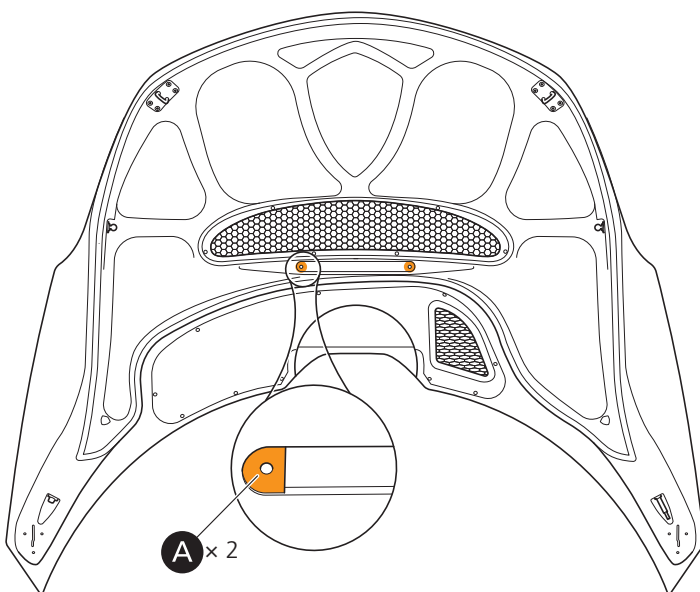



CAUTION

Make sure that the gasket is on the contact surface and does not extend outside shape. If the gasket is outside of the shape, the gasket will not bond correctly.

3. Attach the gasket on each of 2× contact surface **A** on the front hood.


Part: 1035378

4. Install the new front-hood lamp with new 2× H3 (M4×20) bolts **B**, plastic **C** and rubber **D** washers.

Part: 130-149-0421, 1098362, 1098290

Consumable: Loctite 480


Torque: 1 Nm

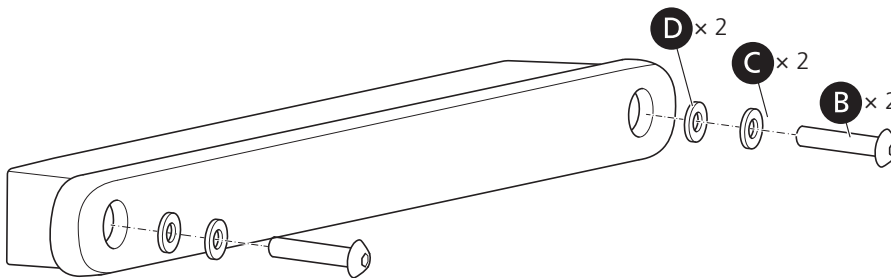

5. Connect the front-hood lamp connector to the front hood harness.

6. Wind AC isolation tape **E** around the connected front-hood lamp connector.

Part: 130-873-9014

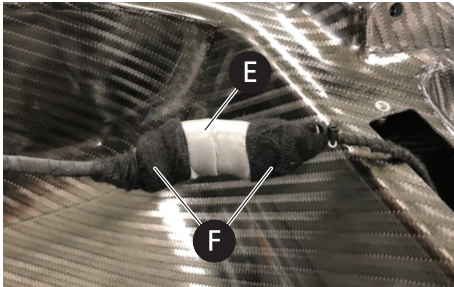

7. Attach protection tape **F** to the ends of AC tape to prevent the AC tape ends to loosen.

Part: 3718-012

8. Attach the front-hood lamp connector to the anchor with a zip tie.

9. Install the access panel of the front-hood wash-pipe, refer to [WOM-00642](#).

Do a Check of the Lamps

Do a check of the lamps.

- If the lamps have cracks or damage around the screw holes, take photos and submit a KATS ticket to contact Koenigsegg.
- If the lamps do not have cracks or damage around the screw holes, do not continue with the procedure that follows.

Warranty Information

If the repair is covered by the warranty terms, refer to Koenigsegg Warranty Process.

OPERATION

KWO621319

PART NO

Refer to the invoiced kit number





Koenigsegg

WORKSHOP MANUAL

Doc. ID TSB-26143-01

Model Jesko

Kit 1101127

DISCARDED PARTS

Any discarded parts mentioned in the TSB must be returned or destroyed according to the Dealer Warranty Manual.





Hood Lamps Update

This instruction refers to other documents that are necessary to do the procedure.

**WARNING**

Always refer to the manufacturer's safety data sheet for the chemicals and use the necessary PPE. The chemicals can cause injury or death.

PARTS	REFERENCE	QUANTITY
Hella 0681 foam gasket	1098316	4
Hella Courtesy foam gasket	1098343	2
Hella lamp plastic washer	1098362	8
Hella lamp rubber washer	1098290	8
Lamp Unit Hella 0681 White Assy	1035378	2
Lamp unit Hella Courtesy Assy (Clear)	1043811	2
M4x20-0,70 Ti Dome head bolt	130-149-0421	8

TOOLS	SPECIFICATION	QUANTITY
General mechanical tools	–	–


CONSUMABLES	REFERENCE	QUANTITY
AC isolation tape	130-873-9014	4x 150 mm
Isopropanol, 99%	–	–
Loctite 480	1018501	–
Tesa fleece tape 15x19	3718-012	–


Prepare

1. Open the front hood with the key fob or from the center console. If the 12 V is set to off, open the front hood manually, refer to **WOM-00748**.
2. Open the rear hood with the key fob or from the center console. If the 12 V is set to off, open the rear hood manually, refer to **WOM-00645**.
3. Disconnect the 12 V system, refer to **WOM-00489**.

Remove the Rear-Hood Side Lamps

1. Remove 4x T20 (M4x15) bolts **A** from the LH and RH side lamps.

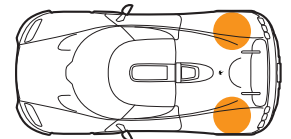

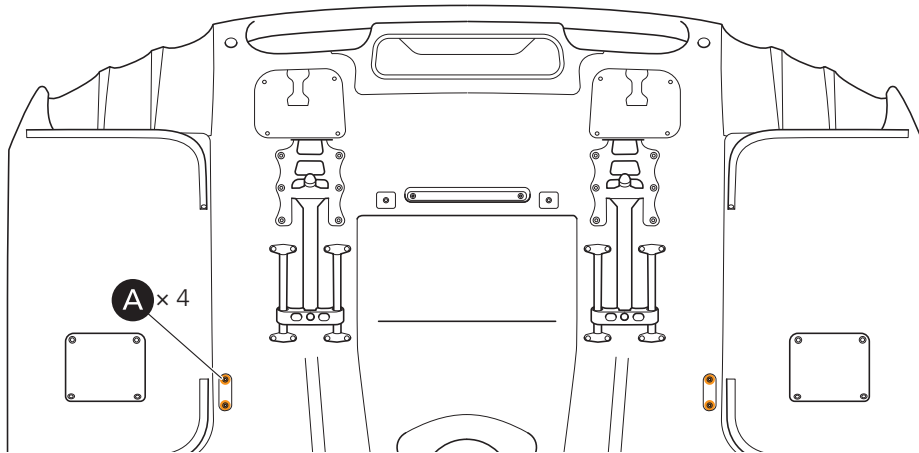

2. Discard 4x T20 (M4x15) bolts **A**
3. Remove 2x side lamps.
4. Remove the protection tape together with AC tape from 2x side lamp connectors.
5. Disconnect 2x side lamp connectors.
 - Connector X36 from the LH side.
 - Connector X37 from the RH side.

Install the Rear-Hood Side Lamps



WARNING

Always refer to the manufacturer's safety data sheet for the chemicals and use the necessary PPE. The chemicals can cause injury or death.

1. Put on the necessary personal protective equipment.
2. Use isopropanol to clean the plastic surfaces of the new 2x side lamps.

Part: 1043811




CAUTION

Make sure that the gasket is on the contact surface and does not extend outside shape. If the gasket is outside of the shape, the gasket will not bond correctly.

3. Attach the gasket on the contact surface of each of 2x side lamps.

Part: 1098343

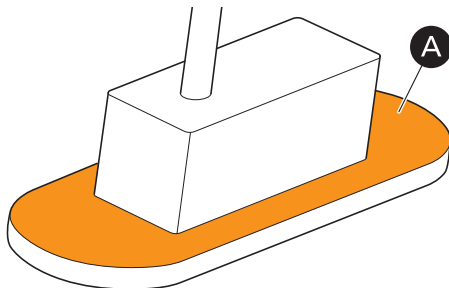

Note

Do not remove the gasket that is already installed. Install one more gasket on top of the installed gasket.


4. Connect 2x side lamp connectors.
 - Connector X36 from the LH side.
 - Connector X37 from the RH side.





5. Wind AC isolation tape **B** around the connected connectors X36 and X37.

Part: 130-873-9014

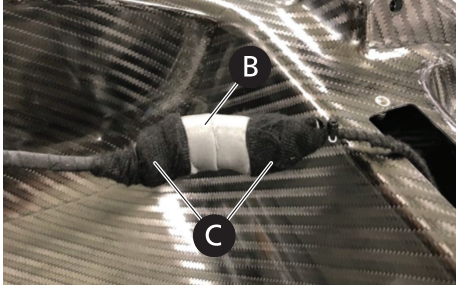

6. Attach protection tape **C** to the ends of AC tape to prevent the AC tape ends to loosen.


Part: 3718-012

7. Install 2x side lamps, each with new 2x H3 (M4x20) bolts **D**, plastic **E** and rubber **F** washers.

Part: 130-149-0421, 1098362, 1098290



Consumable: Loctite 480

Torque: 1 Nm

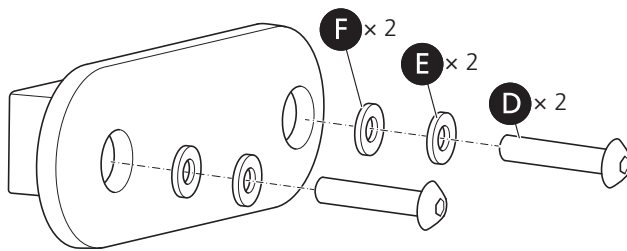

Remove the Rear-Hood Lamp

1. Remove 2x T20 (M4x12) bolts **A** from the rear-hood lamp.

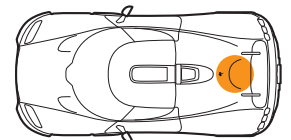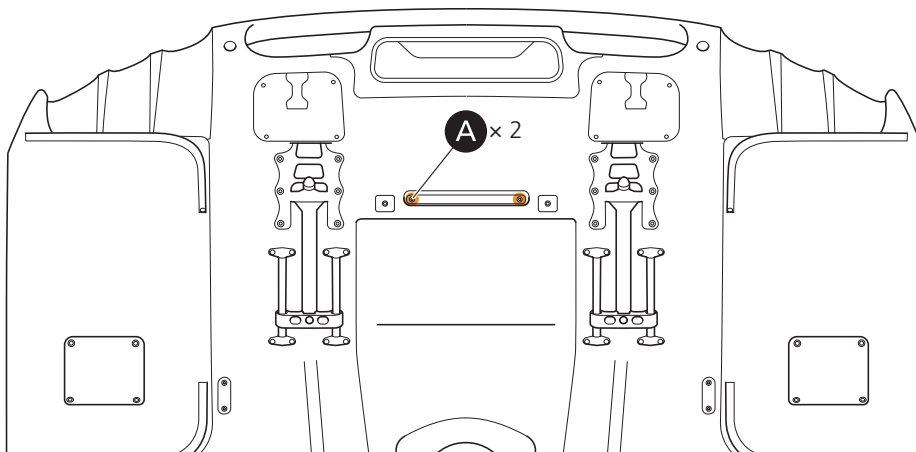

2. Remove the rear-hood lamp.

Note

The bracket that holds the lamp can become loose and be removed together with the lamp.

3. Remove the protection tape together with AC tape from the rear-hood lamp connectors.
4. Disconnect the rear-hood lamp connector.






Install the Rear-Hood Lamp



WARNING

Always refer to the manufacturer's safety data sheet for the chemicals and use the necessary PPE. The chemicals can cause injury or death.

1. Put on the necessary personal protective equipment.
2. Use isopropanol to clean 2x contact surfaces **A** on the rear hood.

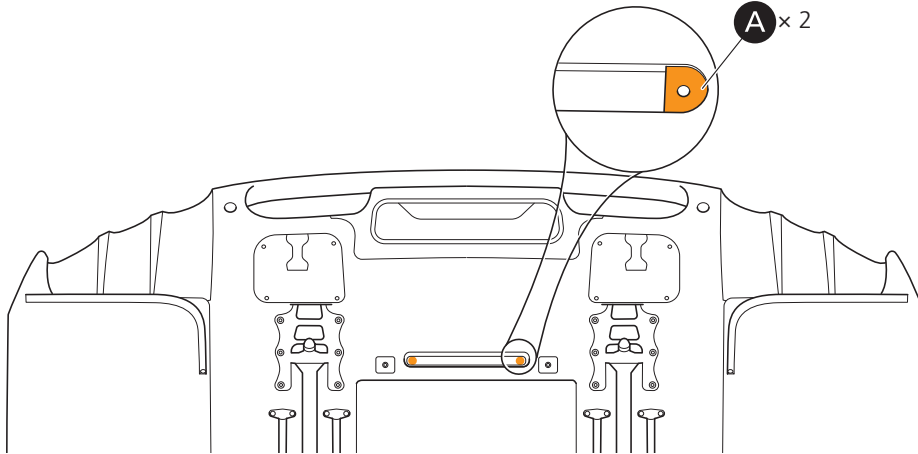


CAUTION

Make sure that the gasket is on the contact surface and does not extend outside shape. If the gasket is outside of the shape, the gasket will not bond correctly.

3. Attach the gasket on each of 2x contact surface **A** on the rear hood.
Part: 1035378
4. Connect the rear-hood lamp connector.
5. Wind AC isolation tape **B** around the connected rear-hood lamp connector.

Part: 130-873-9014

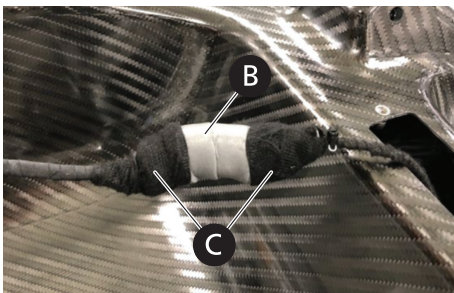


6. Attach protection tape **C** to the ends of AC tape to prevent the AC tape ends to loosen.
Part: 3718-012
7. Install the new rear-hood lamp with new 2x H3 (M4x20) bolts **B**, plastic **C** and rubber **D** washers.

Part: 130-149-0421, 1098362, 1098290

Consumable: Loctite 480



Torque: 1 Nm



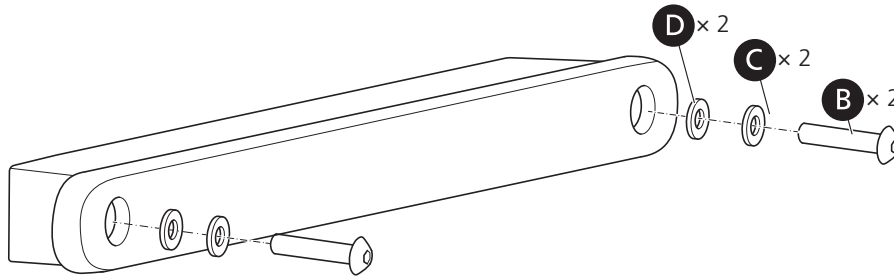

Remove the Front-Hood Lamp

1. Remove the access panel of the front-hood wash-pipe, refer to [WOM-00695](#).
2. Remove the zip tie that attaches the front-hood lamp connector to the anchor.
3. Remove the protection tape together with AC tape from the front-hood lamp connector.
4. Disconnect the front-hood lamp connector from the front hood harness.
5. Remove 2x H3 bolts **A** from the front-hood lamp.

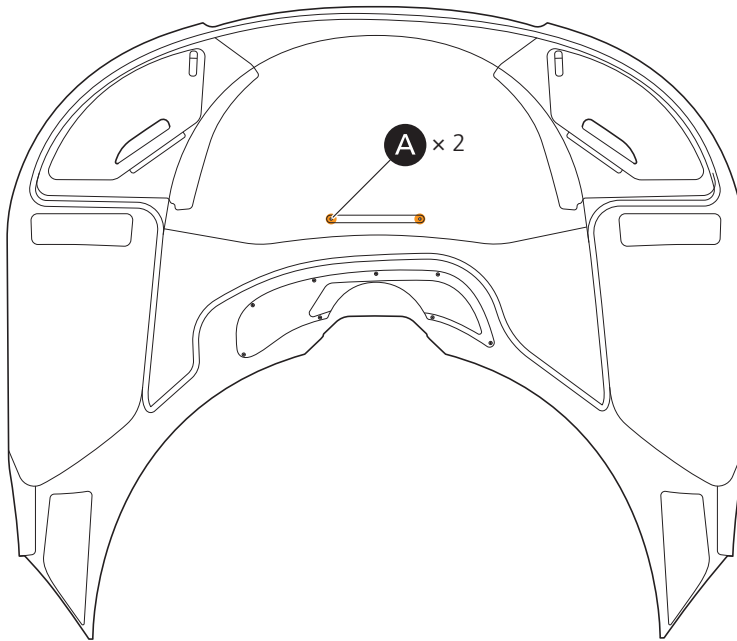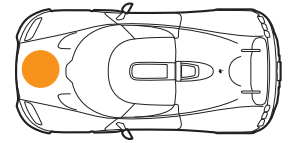

6. Remove the front-hood lamp.

Note

The bracket that holds the lamp can become loose and be removed together with the lamp.

Install the Front-Hood Lamp




WARNING

Always refer to the manufacturer's safety data sheet for the chemicals and use the necessary PPE. The chemicals can cause injury or death.

1. Put on the necessary personal protective equipment.
2. Use isopropanol to clean 2x contact surfaces **A** on the front hood.




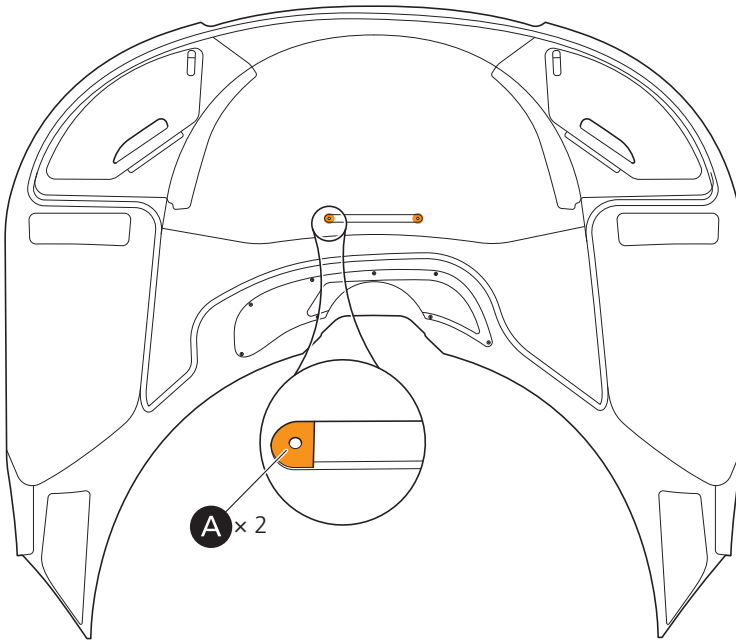

CAUTION


Make sure that the gasket is on the contact surface and does not extend outside shape. If the gasket is outside of the shape, the gasket will not bond correctly.

3. Attach the gasket on each of 2x contact surface **A** on the front hood.
Part: 1035378
4. Install the new front-hood lamp with new 2x H3 (M4x20) bolts **B**, plastic **C** and rubber **D** washers.
Part: 130-149-0421, 1098362, 1098290
Consumable: Loctite 480
Torque: 1 Nm

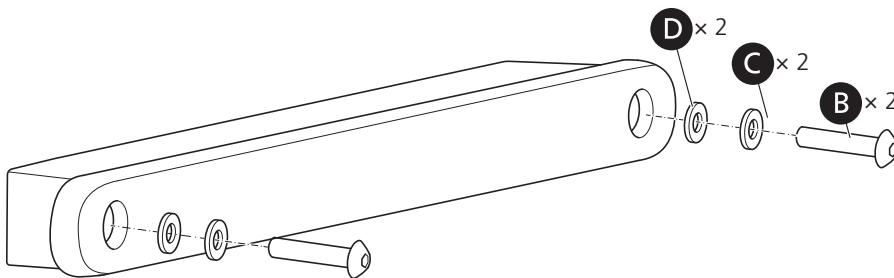

5. Connect the front-hood connector to the front hood harness.
6. Wind AC isolation tape **E** around the connected front-hood lamp connector.
Part: 130-873-9014



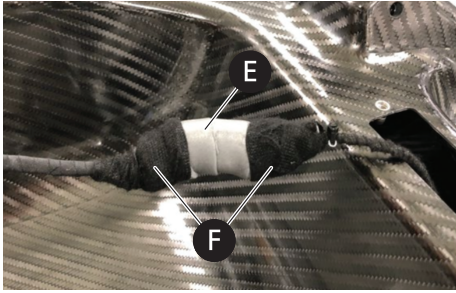

7. Attach protection tape **E** to the ends of AC tape to prevent the AC tape ends to loosen.

Part: 3718-012

8. Attach the front-hood lamp connector to the anchor with a zip tie.
9. Install the access panel of the front-hood wash-pipe, refer to [WOM-00695](#).

Do a Check of the Lamps

Do a check of the lamps.

- If the lamps have cracks or damage around the screw holes, take photos and submit a KATS ticket to contact Koenigsegg.
- If the lamps do not have cracks or damage around the screw holes, do not continue with the procedure that follows.

Warranty Information

If the repair is covered by the warranty terms, refer to Koenigsegg Warranty Process.

OPERATION

KW0621319

PART NO

Refer to the invoiced kit number

DISCARDED PARTS

Any discarded parts mentioned in the TSB must be returned or destroyed according to the Dealer Warranty Manual.

