

## BR 206 Incorrect symbol during cold start

---

|                   |                                                                        |
|-------------------|------------------------------------------------------------------------|
| Topic number      | LI54.30-P-078529                                                       |
| Version           | 2                                                                      |
| Function group    | 54.30 - Instrument cluster, display instruments, hazard warning device |
| Date              | 8/10/26                                                                |
| Validity          | Model series 206 without SA code ME10                                  |
| Reason for change | Damage code revised                                                    |

---

### Complaint

During cold starting, a tortoise symbol may be displayed in the event of reduced engine output.

For "non-hybrid vehicles", the thermostat symbol must be displayed.

| Attachments                                                                                              |             |
|----------------------------------------------------------------------------------------------------------|-------------|
| File                                                                                                     | Description |
| turtle_Symbol.PNG<br> |             |
| thermostate.PNG<br>   |             |

### Cause

Coding N133/1 IC Instrument cluster

### Remedy

Perform N133/1 IC-Instrument-Cluster manual coding.

### Disclaimer

NOTE: The information contained in this document is intended for use by trained, professional technicians with the knowledge to properly and safely perform diagnosis and repairs on Mercedes-Benz vehicles, using Mercedes-Benz approved tools and equipment. It informs service technicians about conditions that could occur in certain vehicles and provides information that could assist in proper vehicle diagnosis, service, or repair. It does not indicate that a defect is present in any vehicle referenced in this document nor does it imply warranty coverage. DO NOT assume that a symptom or condition, or a described cause of a symptom or condition, affects any particular vehicle or groups of vehicles, or that a described repair applies to any particular vehicle or groups of vehicles. There can be multiple causes

resulting in the same or similar symptoms or conditions described in this document, and trained professional service technicians must use their diagnostic skills to make evaluations on a case-by-case basis. The information contained in this document does not guarantee warranty coverage nor does it extend the vehicle's warranty in any way.

|                                                                                                                                                                                                |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Symptoms                                                                                                                                                                                       |
| Communication/information > Information display > Displays > Coolant temperature > Malfunction                                                                                                 |
| Communication/information > Information display > Displays > Multifunction display > Function > Malfunction                                                                                    |
| Communication/information > Information display > Displays > Multifunction display > Multifunction display, error messages > Implausible messages despite properly functioning message systems |

|                                |                |      |             |                         |
|--------------------------------|----------------|------|-------------|-------------------------|
| Operation numbers/damage codes |                |      |             |                         |
| Op. no.                        | Operation text | Time | Damage code | Note                    |
|                                |                | H    | 5456K50     | Please refer to this GI |