

# IMPORTANT UPDATE

## TECHNICAL INSTRUCTIONS FOR SAFETY RECALL DSF FRONT PASSENGER AIRBAG INFLATOR MODULE CERTAIN 2003 – CERTAIN 2004 MODEL YEAR COROLLA CERTAIN 2003 – CERTAIN 2004 MODEL YEAR MATRIX

SSC D0F is no longer valid and has been replaced by SSC DSF

**Updated 5-12-15**

**Updated 5-12-15**

- Updated airbag/inflator scanning information.

All dealership associates involved in the recall process are required to successfully complete E-Learning course SC13A. To ensure that all vehicles have the repair performed correctly; technicians performing this recall repair are required to have successfully completed E-Learning course SC13B, in addition to SC13A, and currently hold at least one of the following certifications levels:


- Toyota Expert (Electrical)
- Master
- Master Diagnostic Technicians

**[Complete DSF Technical Video Supplement](#)**

**NOTE:** The videos in this document still reflect the inspection process under D0F that has been eliminated. For Airbag Assembly and Inflator Serial Number scanning/ recording reference the technical instructions. The videos are currently being edited to reflect the new process and will be posted as soon as they are available.


## I. OPERATION FLOW CHART

The flow chart is for reference only. **DO NOT** use it in place of the full technical instructions. Follow **ALL** steps as outlined in the full technical instructions to confirm the campaign is completed correctly.

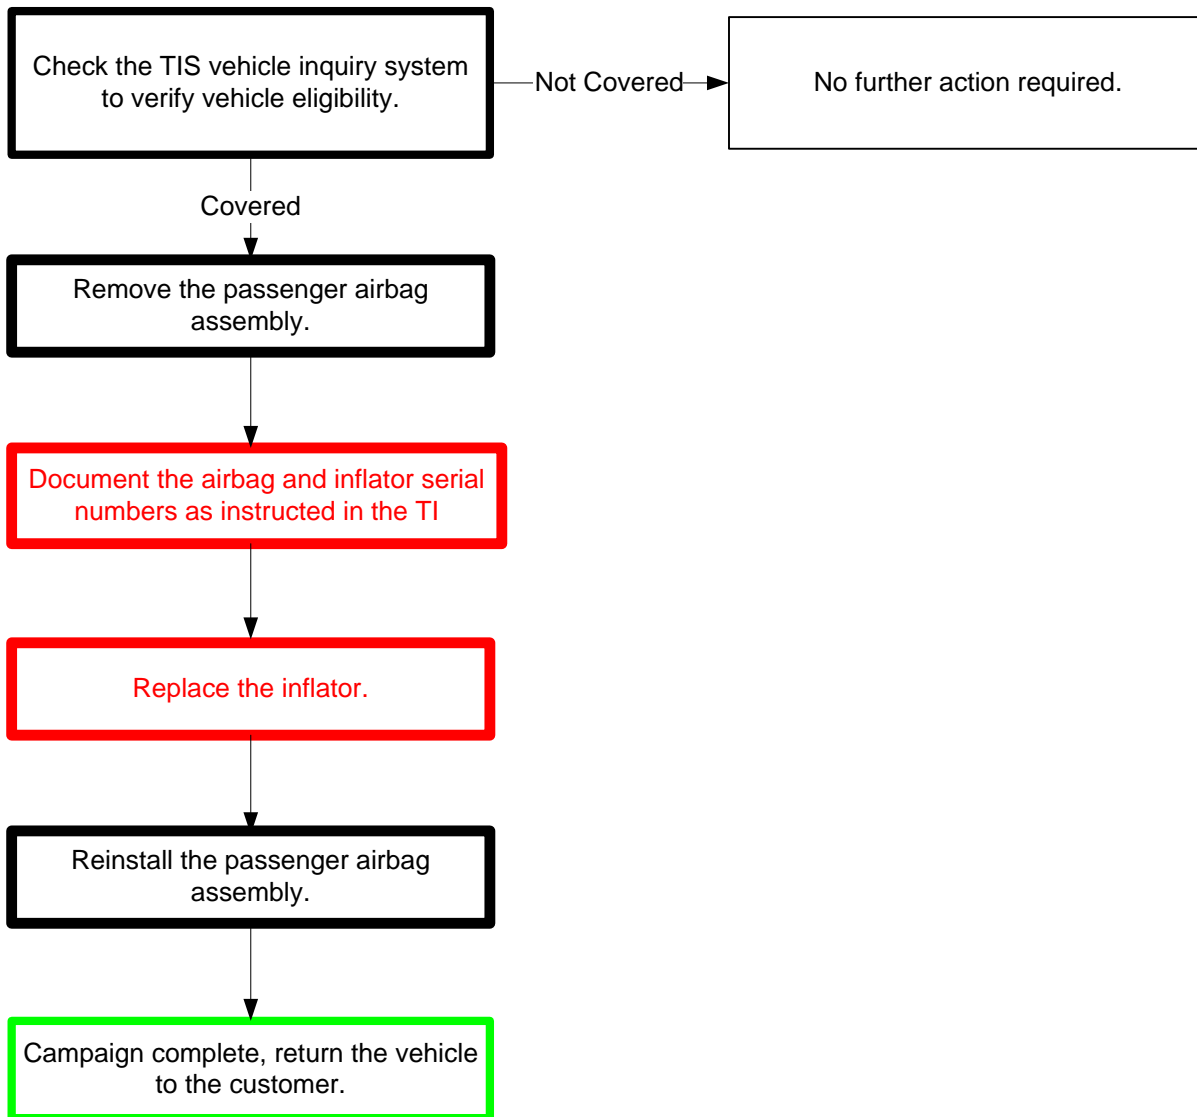

## II. BACKGROUND

The subject vehicles are equipped with front passenger airbag inflators which could have been assembled with improperly manufactured propellant. Improperly manufactured propellant could cause the inflator to rupture. An inflator rupture may result in metal fragments striking and potentially seriously injuring the vehicle occupants in a crash.

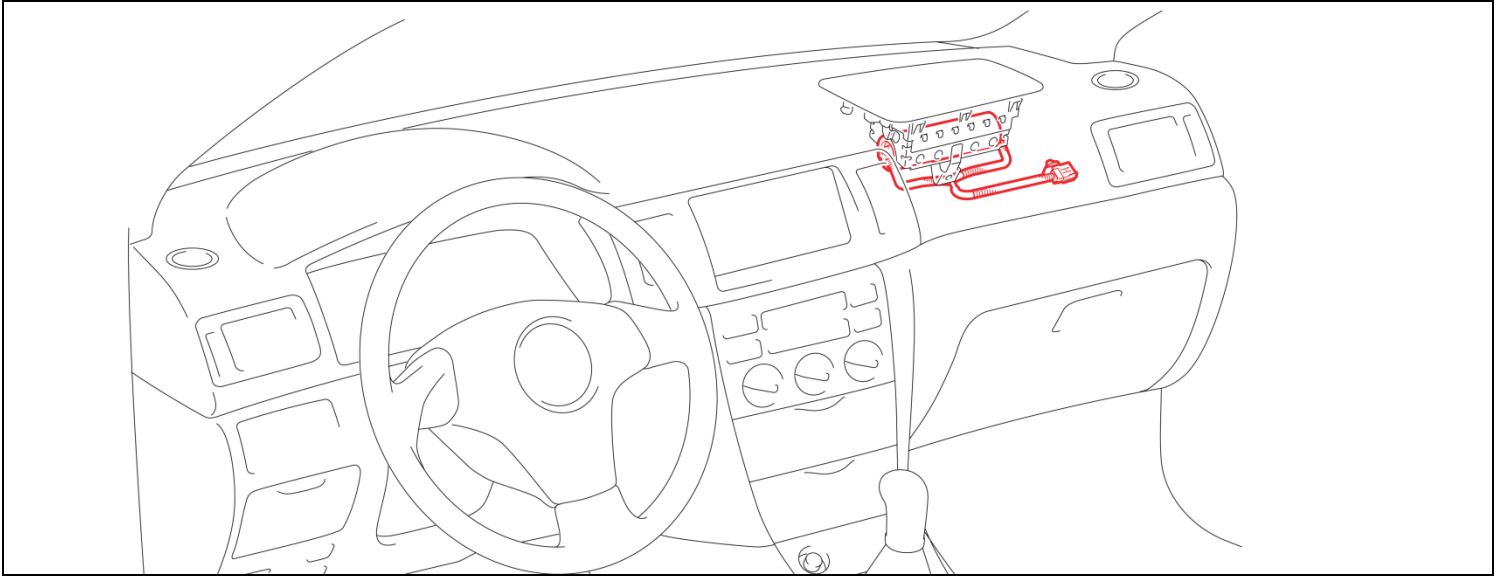

## III. IDENTIFICATION OF AFFECTED VEHICLES

### A. COVERED VIN RANGE

- Check the TIS Vehicle Inquiry System to confirm the VIN is involved in this Safety Recall, and that the campaign has not already been completed prior to dealer shipment or by another dealer.
- **TMS warranty will not reimburse dealers for repairs conducted on vehicles that are not affected or were completed by another dealer.**

## IV. PREPARATION

### A. PARTS

Model	Part Number	Part Description	Quantity
Corolla	04003-28102	Instrument Panel Airbag Inflator Kit*	1
Matrix	04003-28101	Instrument Panel Airbag Inflator Kit*	1

\*The kit above includes the following parts. Both kits include the same components, but because the components are different the kits **ARE NOT** interchangeable.

Inflator	1
Self Locking Nut	4
Stopper Plate	1
Position Determining Plate	1
Electro Tap	1
Felt Tape Strips	2



### B. TOOLS & EQUIPMENT

- Standard hand tools
- Torque wrench
- Molding remover set
- Techstream

**OPTIONAL SST** – This is an essential special service tool that the dealership should have. This tool is not mandatory when performing this repair.

Part Number	Part Name	Quantity
09890-47010-01	Anti-Static Mat Set	1

**DSF CAMPAIGN TOOLS** – These tools were previously provided to the dealership for campaign D0F and will be used for campaign DSF. These tools are required when performing this repair.

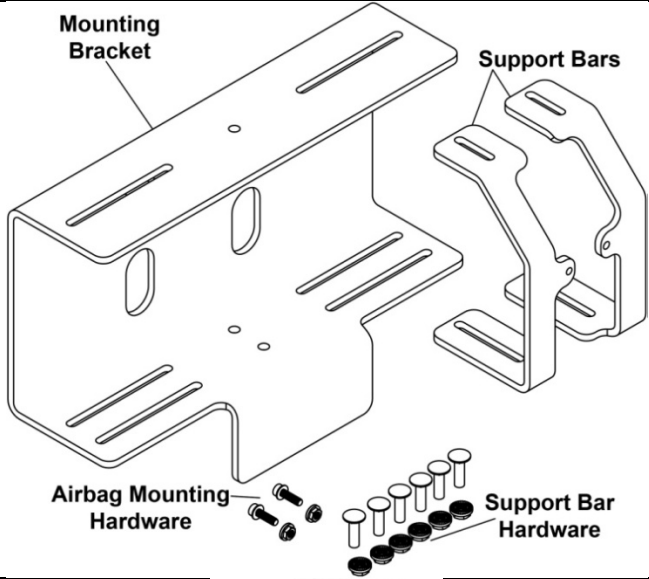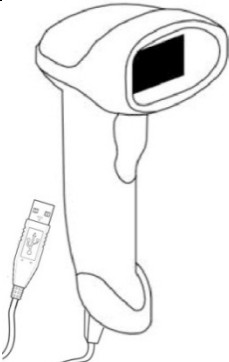Image	Name	Quantity
	Airbag Mounting Bracket & hardware	1
	Barcode Scanner	1

**NOTE:** These tools **CANNOT** be ordered through the parts or tools system. There is a very limited supply of tools, but if additional tools are needed, contact your regional representative.


## V. SAFETY PRECAUTIONS



### CRITICAL INFORMATION – READ THOROUGHLY




Failure to follow these procedures correctly could cause the SRS to unexpectedly deploy during servicing or the SRS may fail to operate correctly when required after reassembly. Confirm all work is performed as described in these instructions.

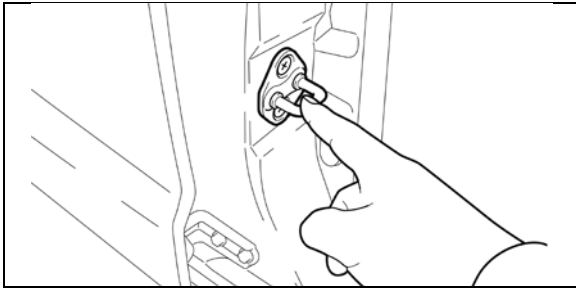


#### 1. ELIMINATE STATIC ELECTRICITY

- Before starting work and periodically while working on the vehicle, touch a metallic part of the vehicle to discharge static electricity in the body.

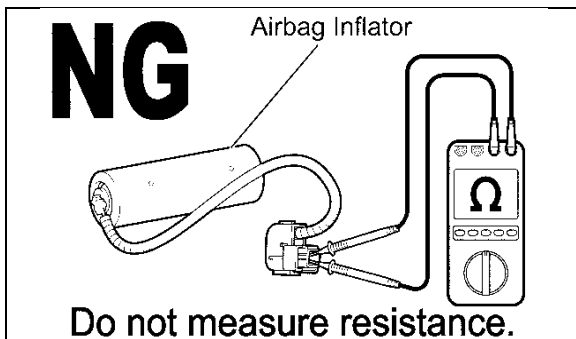


#### 2. DO NOT MEASURE RESISTANCE

- DO NOT** measure resistance of airbag components, this may cause accidental activation.

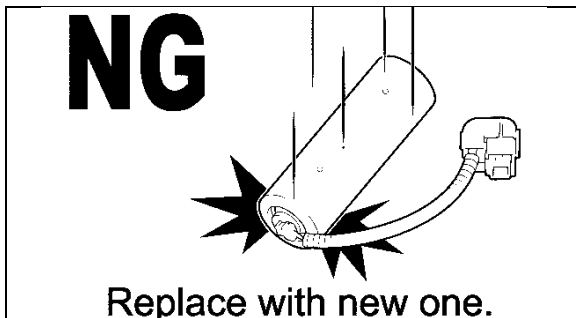


#### 3. HANDLE THE AIRBAG CAREFULLY

- If an inflator is dropped, replace it with a **NEW** inflator.

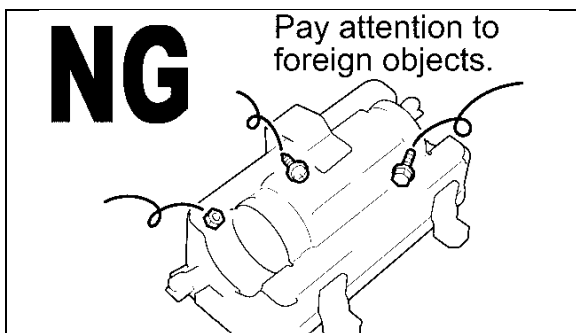

#### 4. DO NOT ALLOW FOREIGN OBJECTS NEAR AIRBAG

- Be sure to collect and account for all removed nuts/bolts to prevent them from landing in the airbag assembly.
- Any foreign objects in the airbag assembly may cause damage or injury if the airbag is activated.

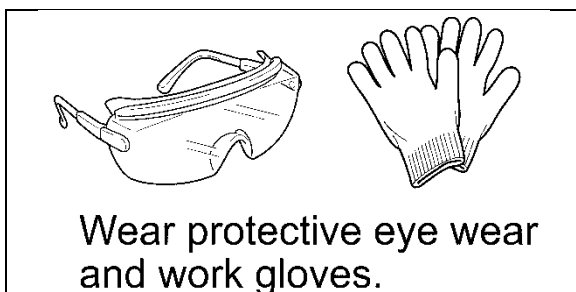

#### 5. WEAR PROTECTIVE EQUIPMENT

- Always wear appropriate protective equipment when working on the SRS.

## VI. WORK AREA PREPARATION

[Video Supplement: Introduction](#)





### CRITICAL INFORMATION – READ THOROUGHLY



The bracket assembly that was provided at the launch of SSC D0F is a critical added-safety feature that **MUST** be used when replacing the inflator module. Confirm the bracket assembly is installed securely in the vise and confirm the work area being used is appropriate. The anti-static mat set that is an essential SST may be available at your dealership and is optional to use during inflator replacement. If the anti-static kit is not available, before starting work and periodically while working on the vehicle, touch a metallic part of the vehicle to discharge static electricity in the body.


Confirm there are no loose objects or people exposed to the back side of the bracket for safety in the unlikely event of airbag deployment due to improper work procedures (Remember that the inflator **IS NOT** being replaced due to an inadvertent deployment concern).

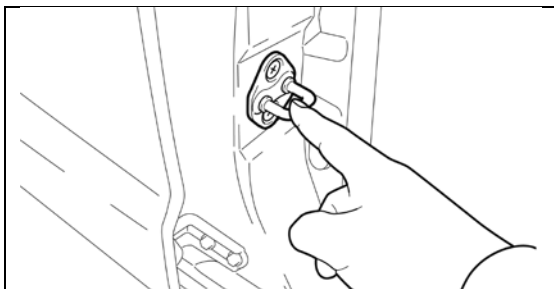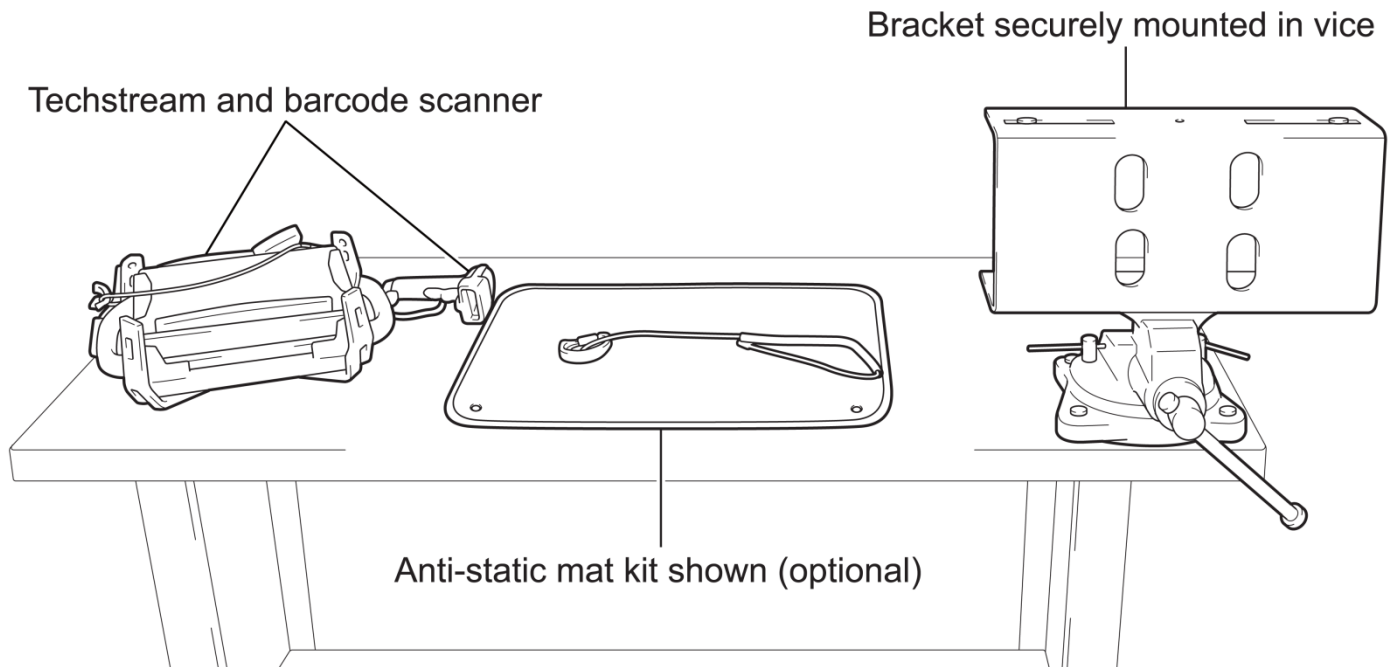

If the anti-static kit is not available, before starting work and periodically while working on the vehicle, touch a metallic part of the vehicle to discharge static electricity in the body.

## VII. FRONT PASSENGER AIRBAG ASSEMBLY RECORDING

### Video Supplement: Inspection

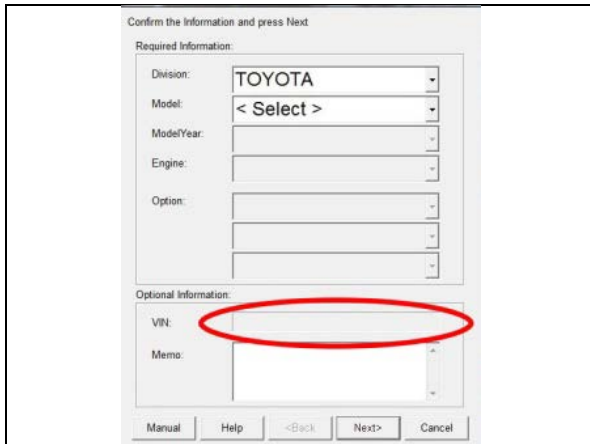

#### 1. PERFORM A HEALTH CHECK


- Confirm the Techstream is connected to the dealership's internet.
- When launching the Techstream software the VIN **MUST** be entered manually.

**NOTE: All letters of the VIN *MUST* be entered in ALL CAPS, or the VIN will need to be reentered when running the diagnostic report.**


- Perform a health check.

#### 2. RUN A DIAGNOSTIC REPORT

- After the health check has completed, run a diagnostic report by clicking on the link on the health check screen.

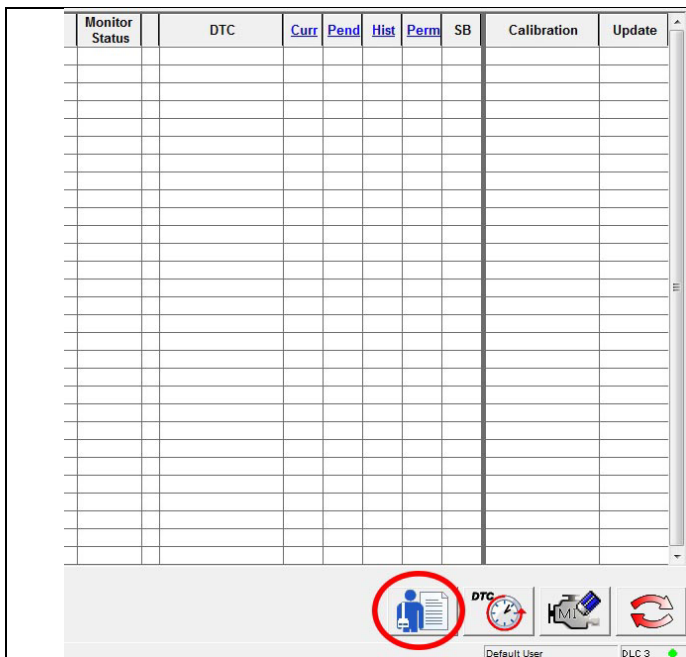

**NOTE: If the VIN was not entered in ALL CAPS when Techstream was launched, an error will be displayed and there will be a prompt to reenter the VIN**

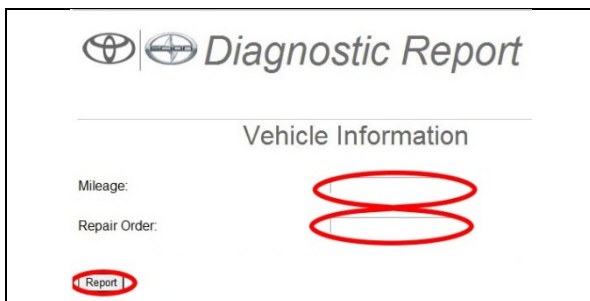

- Enter the vehicle mileage and repair order information, then click the 'report' button.



- The VIN **MUST** be entered manually in ALL CAPS when launching the Techstream software, the VIN **WILL NOT** auto-populate due to vehicle age.
- A health check and diagnostic report with VIN **MUST** be performed within the last 36 hours and recorded by TMS. If the diagnostic report is not ran, the healthcheck will not be recognized by TMS.
- The serial number recording application will be disabled and the repair cannot be completed if a health check and diagnostic report is not performed and recorded by TMS.



### 3. LAUNCH THE SERIAL NUMBER RECORDING APPLICATION



- The AIRBAG ASSEMBLY, ORIGINAL INFLATOR, and NEW INFLATOR serial numbers **MUST** be recorded using the barcode scanner (provided at the launch of SSC D0F).
- The barcode scanner application **MUST** be completed on every vehicle. These numbers **MUST** be included on every warranty claim that is submitted for inflator module replacement or the claim may be subject to debit.
- The technician performing the work **MUST** have valid TIS login credentials and an internet connection to perform the inspection and scanning process.

- Log in to TIS and input the VIN of the vehicle in the Vehicle Inquiry tab.
- Confirm the VIN is applicable and that the campaign has not been completed.
- Click on the link to launch the serial number recording application.

**Vehicle Identification Number Search**

Enter a 17 Digit VIN below to search for applicable information:

VIN: 1NX BR32E 000000000

**Vehicle Information**

Division: TOYOTA	Model: Corolla	Grade: CE	Model Year: 2003
Drive Type: 2WD	Body Type: 4Dr. Sedan	Engine Family: 4-cylinder - 1ZZ	Transmission:
Date of First Use:	Production Date: 01/18/2002	Plant Code: Z - FREMONT PLANT - NUMMI	
VIN: 1NX-BR32E-000000000		Standard Equipment: <a href="#">Click here to display</a>	
Exterior Color: 03MS, SANDRIFT METALLIC		Interior Color: FA41, FA41	Interior Fabric: F, *
		Interior Trim Color: FA, *	

Vehicle accessories are not currently available. Try your query again later.

**Service Campaign**

Campaign Description: Safety Recall DSF Vehicle Front Passenger Seat Inflation Module

Completion Status: **Not Completed** [Check applicability for VIN](#)

[Show Documents]

- Reenter TIS password in the serial number recorder application.

**NOTE:** The person logged-in to TIS should be the person performing the repair.

**Front Passenger Airbag Inflator Module - Safety Recall**  
SSC - DSF

User ID: SuzukiR Technician Name: Russell Suzuki

Dealer Code: Dealer Name:

Time: 06/10/2014 02:07 PM PDT Airbag Serial #:

Original Inflator Serial #: Replacement Inflator Serial #:


VIN: STD 8T44A 33S157291 [2003 Sequoia BEIGE H. M.]

Task	Dealer	User	Time	Status
Airbag # Record				Not Started
Inflator # Record				Not Started
Terms & Conditions				Not Started

**NOTE:**

- A task status screen will populate next and at other intervals during the repair. This screen will indicate if the inflator was replaced. Click 'next' to proceed to the next step. This information will be used for record keeping by TMS.
- If this screen indicates that the inflator has already been replaced on this VIN, there is no need to perform the campaign again.




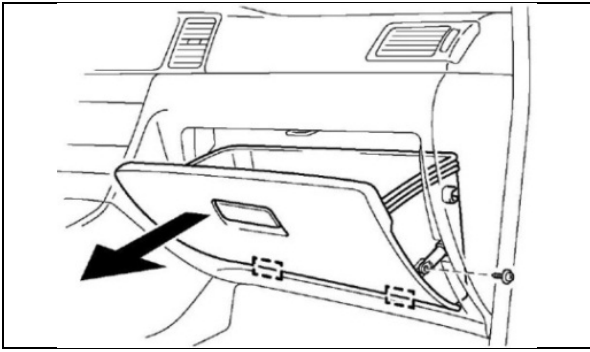

#### 4. REMOVE THE GLOVE BOX

- Remove the screw and disconnect the stopper sub-assembly.
- Completely remove the glove box from the dashboard.

#### 5. REMOVE THE AIRBAG ASSEMBLY

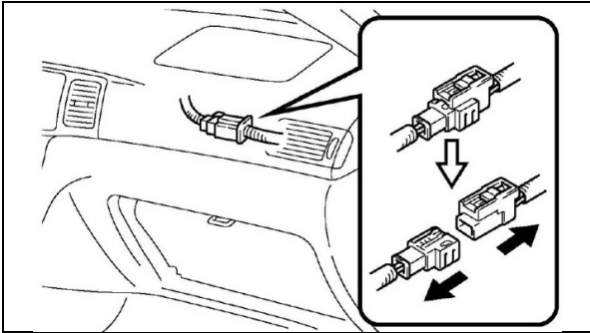


- Disconnect the negative battery cable.



- Wait at least 90 seconds after disconnecting the cable from the negative battery terminal to prevent airbag and seat belt pre-tensioner deployment.
- Follow all precautions as outlined on TIS before servicing the SRS system.

- Disconnect the airbag connector.

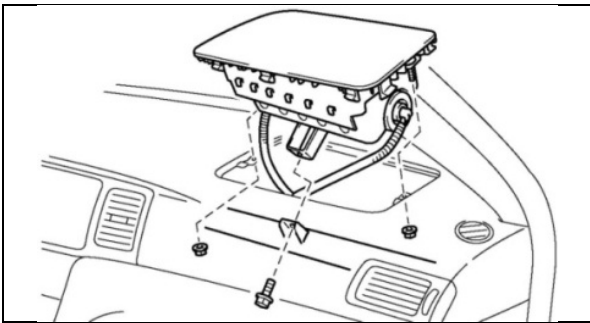

- Remove the bolt and 2 nuts and remove the airbag assembly.

**NOTE:** Use caution to avoid scratching or damaging the dashboard assembly, place protective tape on the dashboard if needed.

#### 6. CONNECT THE BARCODE SCANNER

- Connect the barcode scanner to the USB port on the Techstream.
- The scanner will automatically connect and a beep will be heard when the scanner is ready.

**NOTE:**

- The scanner was provided for SSC D0F.
- The scanner works best in low light conditions.
- Always hold the scanner directly in front of and parallel to the barcode label.

## 7. SCAN THE AIRBAG SERIAL NUMBER

# ATTENTION: This information is **CRITICAL**

- a) Scan the **AIRBAG ASSEMBLY** serial number 2 times.
- 1) Confirm the cursor is in the first serial number box then scan the serial.
  - 2) Position the cursor in the second serial number box then scan the serial.
- b) Click next.

### NOTE:

- If both serial numbers that are entered do not match, confirm and reenter.
- If the serial number barcode will not scan, it can be entered manually.
- If the serial number and barcode are not legible or are not present, check the box in the application indicating the serial number is not legible and contact your regional representative.

### AIRBAG SERIAL NUMBER IDENTIFICATION

- The airbag serial number is **ALWAYS** the 12 **DIGITS** located between the asterisks.
- The 3 digits before the asterisk **ARE NOT** part of the serial number, and **SHOULD NOT** be entered or an inaccurate response may be returned.

### Airbag Serial Number Label Example



The **AIRBAG ASSEMBLY** serial number and the **INFLATOR** serial number are **DIFFERENT**. The **AIRBAG ASSEMBLY** serial number **MUST** be recorded prior to replacement.

T3 - Google Chrome

t3qa.tms.toyota.com/t3Portal/portlets/tis/airBag/AirBagController.portlet?...\_nfpb=true&\_windowLabel=StandalonePortlet&StandalonePortlet\_actionOverride=%2Fportlets%2F...

### Front Passenger Airbag Inflator Module - Safety Recall

SSC - E04

User ID: Technician Name:

Dealer Code: Dealer Name:

Time: 03/30/2015 05:15 AM PDT VIN: 1NX BR32E 14Z308698 [2004 Corolla SUPER WHITE]

1 2 3 4 5

How to Identify an Airbag module Assembly number?

The Airbag module Assembly serial number is a 12 digit code. It can be found along with a bar code on opening the Airbag assembly unit. To manually enter these details into the application, the technician has to identify the 12 digit code between two Asterisks (\*) inside the Airbag assembly unit. The first seven characters of this 12 digit code are numbers and the 10<sup>th</sup> digit is either 'K' or 'L' always.

Original Airbag Module - 12 Digits Between the asterisk (\*) symbols

Record Airbag Serial Number

Use of a barcode scanner is strongly recommended when entering Airbag Assembly Serial Number.

If manually typing serial number, you MUST include all leading zeros. (If applicable)

\* Airbag Assembly Serial Number:

\* Reconfirm Airbag Assembly Serial Number:

If original Airbag Assembly serial number is not visible or missing, check this box ☐

(\*) - Indicates Required Field(s)

Clear Next

## AIRBAG SERIAL NUMBER IS MISSING OR CANNOT BE SCANNED



If the airbag barcode cannot be scanned or is not present, check the box in the application indicating the barcode is not legible and contact your regional representative to replace the airbag assembly.

a) If the airbag serial number cannot be scanned or is not present check the box as shown below.

Google Chrome


t3qa.tms.toyota.com/t3Portal/portlets/tis/airBag/AirBagController.portlet?...\_windowLabel=StandalonePortlet&StandalonePortlet\_actionOverride=%2Fportlet%2F...

### Front Passenger Airbag Inflator Module - Safety Recall

SSC - E04

1 2 3 4 5

User ID: Technician Name:  
Dealer Code: Dealer Name:  
Time: 03/30/2015 05:15 AM PDT VIN: 1NX BR32E 14Z308698 [2004 Corolla SUPER WHITE]

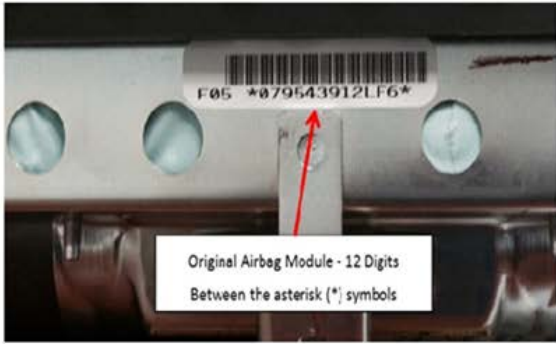

Original Airbag Module - 12 Digits  
Between the asterisk (\*) symbols

How to Identify an Airbag module Assembly number?

The Airbag module Assembly serial number is a 12 digit code. It can be found along with a bar code on opening the Airbag assembly unit. To manually enter these details into the application, the technician has to identify the 12 digit code between two Asterisks (\*) inside the Airbag assembly unit. The first seven characters of this 12 digit code are numbers and the 10<sup>th</sup> digit is either 'K' or 'L' always.

Record Airbag Serial Number

Use of a barcode scanner is strongly recommended when entering Airbag Assembly Serial Number.  
If manually typing serial number, you MUST include all leading zeros. (If applicable)

\* Airbag Assembly Serial Number:   
\* Reconfirm Airbag Assembly Serial Number:

If original Airbag Assembly serial number is not visible or missing, check this box ☐

(\*) - Indicates Required Field(s)

Clear Next

Checking this box requires Air Bag Assembly replacement.

**\*\*Note\*\*** Contact your region in the event that you are unable to read the serial number.  
**DO NOT ATTEMPT TO INSTALL INFLATOR**

- b) After the Region approves the Airbag Assembly replacement and the new part is received, scan the NEW airbag barcode in the Serial Number Recording Application.

T3 - Google Chrome

t3qa.tms.toyota.com/t3Portal/portlets/tis/airBag/AirBagController.portlet?\_nfpb=true&\_windowLabel=StandalonePortlet&StandalonePortlet\_actionOverride=%2Fportlet%2Ftis%2F

## Front Passenger Airbag Inflator Module - Safety Recall


### SSC - E04

1 2 3 4 5

User ID: Technician Name:

Dealer Code: Dealer Name:

Time: 03/30/2015 05:15 AM PDT VIN: 1NX BR32E 14Z308698 [2004 Corolla SUPER WHITE]



Original Airbag Module - 12 Digits  
Between the asterisk (\*) symbols

How to Identify an Airbag module Assembly number?

The Airbag module Assembly serial number is a 12 digit code. It can be found along with a bar code on opening the Airbag assembly unit. To manually enter these details into the application, the technician has to identify the 12 digit code between two Asterisks (\*) inside the Airbag assembly unit. The first seven characters of this 12 digit code are numbers and the 10<sup>th</sup> digit is either 'K' or 'L' always.

Record Airbag Serial Number

Use of a barcode scanner is strongly recommended when entering Airbag Assembly Serial Number.

If manually typing serial number, you MUST include all leading zeros. (If applicable)

\* New Airbag Assembly Serial Number:

☐ \* I agree to complete the safety recall's remaining technical instructions.

☐ \* I agree to perform a vehicle Health Check with Techstream upon completion of the safety recall's technical instructions.

(\*) - Indicates Required Field(s)

Next



**The NEW AIRBAG ASSEMBLY serial number *MUST* be scanned prior to reinstallation to track the airbag assembly to the vehicle.**

## VIII. INFLATOR REPLACEMENT

[Video Supplement: Inflator Replacement](#)




### CRITICAL INFORMATION – READ THOROUGHLY




The connector of the inflator module contains a short circuiting mechanism to eliminate voltage variances when the connector(1) is disconnected. To allow for the replacement of the inflator module, a new short circuit(2) **MUST** be created before cutting the wires(3) and removing the inflator. The following steps **MUST** be followed exactly as described to ensure the work is completed correctly and safely.

(1)


Short circuiting on both sides.

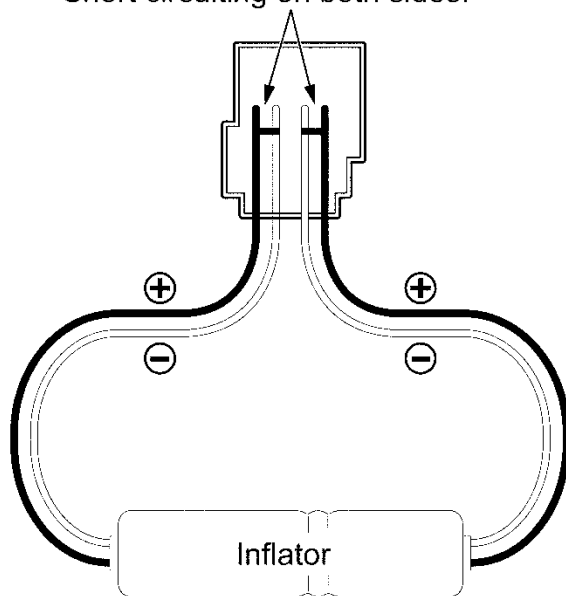

(2)


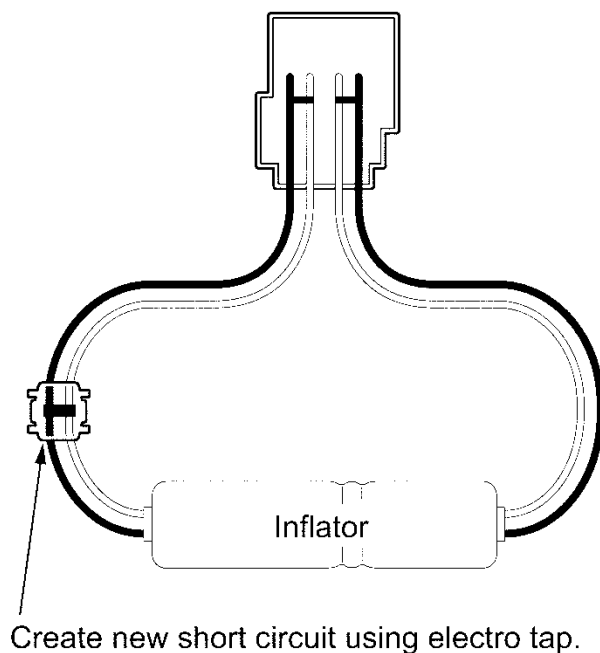


(3)

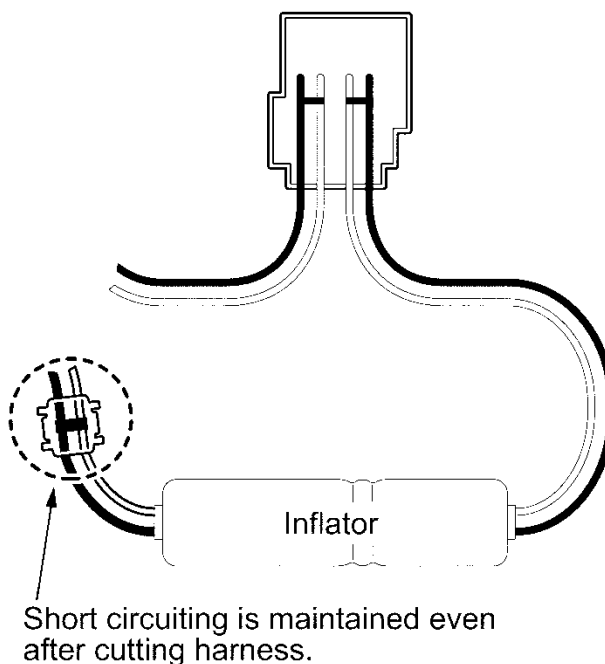

R1302250036E



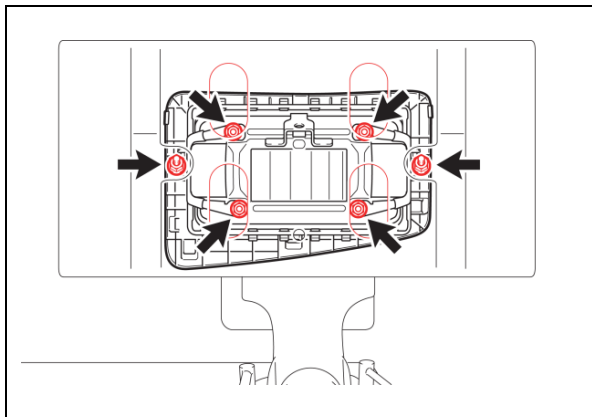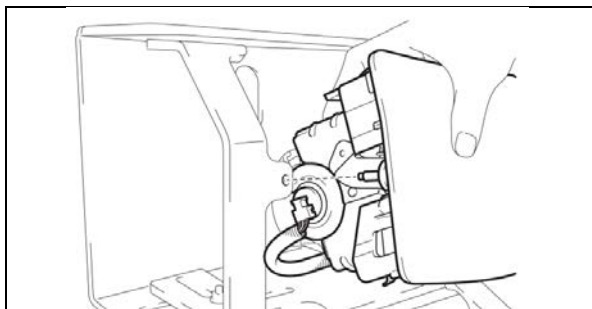


## 1. MOUNT THE AIRBAG IN THE MOUNTING BRACKET

- Position the two mounting studs on the airbag assembly into the holes on the bracket support bars.
- Install the airbag to the support bars with the nuts supplied in the bracket kit.
- Position the airbag so that all four stopper plate nuts can be removed through the access holes.
- Tighten the nuts holding the support bars to the mounting bracket.
- Confirm the following:
  - Mounting bracket is secure in the vise.
  - Airbag is secure in the support bars.
  - The center mounting bracket on the airbag assembly is facing upward.
  - Support bars are secure on the mounting bracket using 1 bolt/nut at the top of each support bar and 2 nuts/bolts at the bottom of each support bar.


**STOP**

## CRITICAL INFORMATION – READ THOROUGHLY


**STOP**

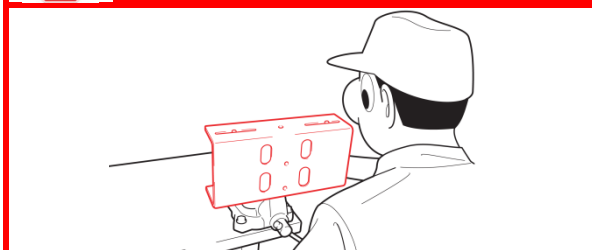

**ALWAYS** keep as much of your body as possible in front of the bracket when working on the airbag assembly.

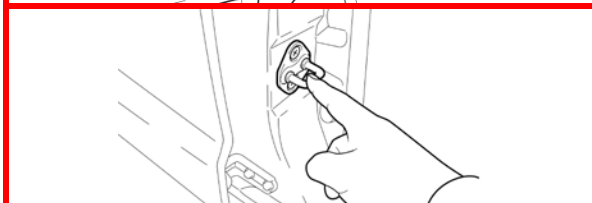

**Remember to periodically touch a metallic part of the vehicle to discharge static electricity in the body if the anti-static kit is not being used.**

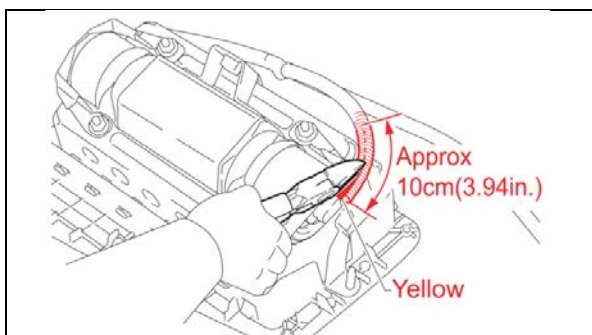


## 2. PREPARE TO INSTALL THE SHORT CIRCUIT

- Cut the yellow corrugated tube on the harness approximately 4 inches (10 cm) using nippers.

**STOP**

- DO NOT** damage the wires in the tube.
- DO NOT** use a knife or razor blade to cut the tube to avoid damaging the wires.
- This may be performed on either end of the inflator.




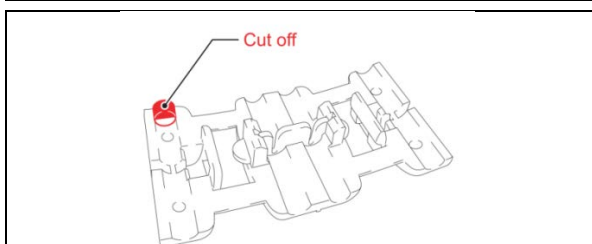


- Cut off the tab of the electro tap shown in the illustration.

**NOTE: The electro tap is included in the inflator parts kit.**

**STOP**

This tab **MUST** be removed to ensure a good short.

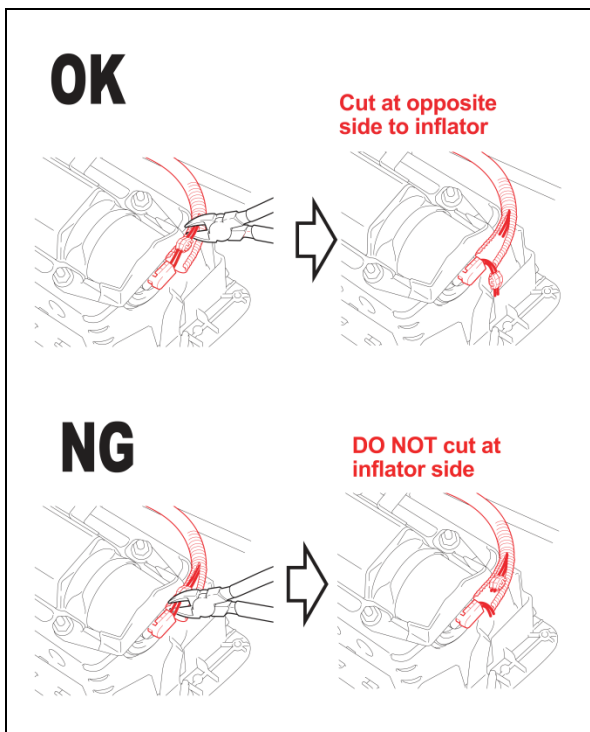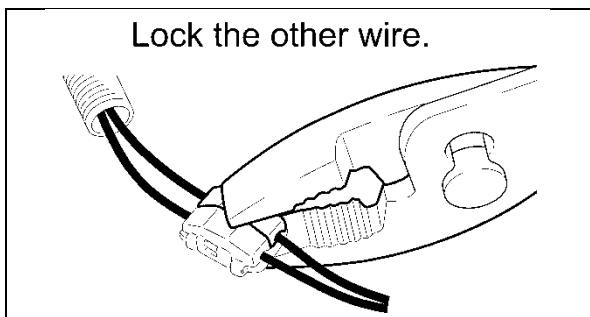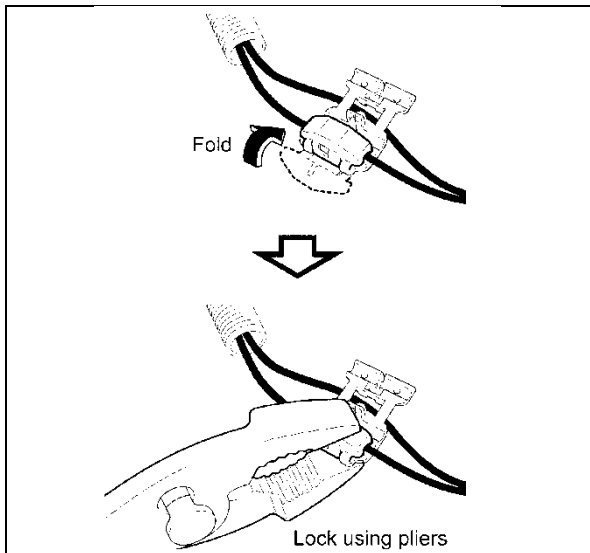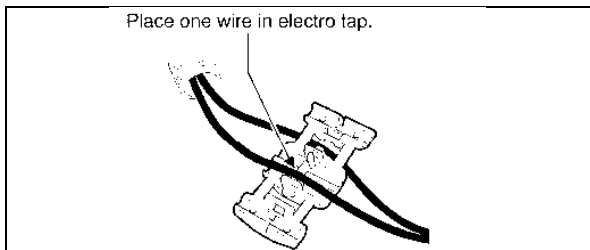

### 3. CREATE A NEW SHORT CIRCUIT IN THE INFLATOR HARNESS

a) Place one wire in the electro tap as shown in the illustration.

b) Fold and pinch the half of the electro tap with the wire and use pliers to lock the electro tap.

#### NOTE:

- **DO NOT** work on both wires at the same time to avoid errors.
- Pliers **MUST** be used to confirm the electro tap is firmly locked in place.

c) Set the other wire in the electro tap and lock it in place using pliers.




**DO NOT** measure resistance of the inflator wires, this may cause accidental activation.

### 4. CUT THE INFLATOR WIRES


a) Cut the 2 wires at the side of the electro tap that is farthest away from the inflator.

**Cut the wires opposite the inflator**

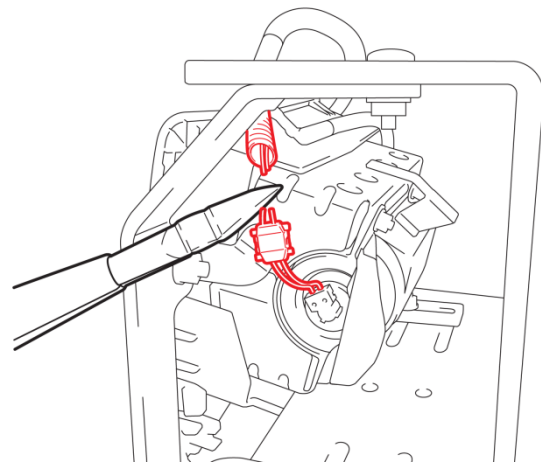

**DO NOT** measure resistance of the inflator wires, this may cause accidental activation.



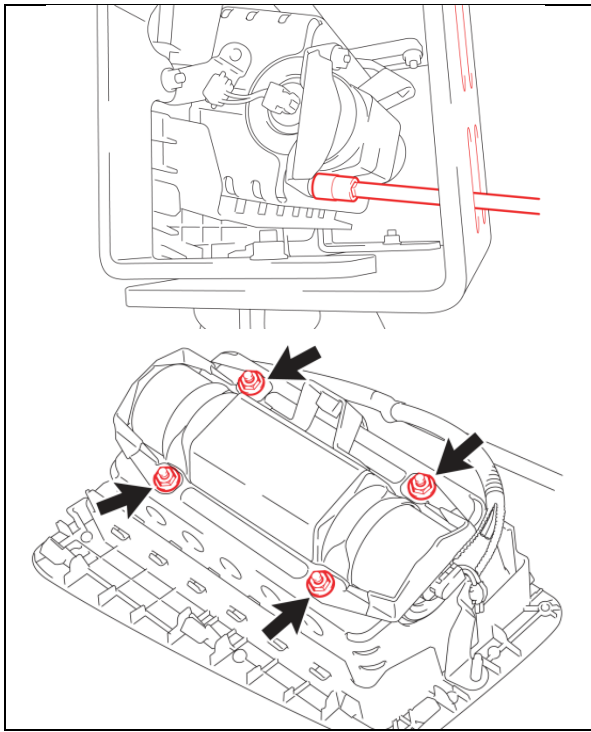


## 5. REMOVE THE SELF LOCKING NUTS

- a) Use the access holes in the bracket to remove the 4 nuts.

### NOTE:


- **DO NOT** use power tools.
- The bracket support bars may need to be repositioned to remove the nuts through the access holes.

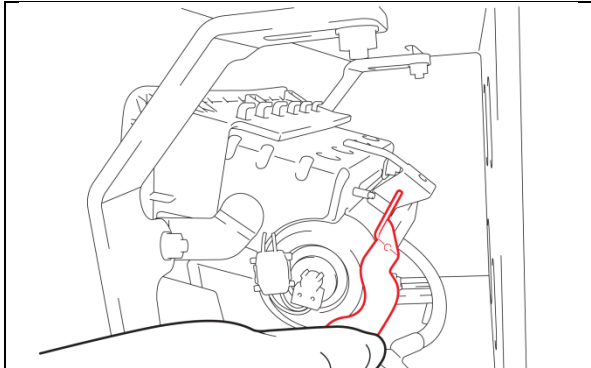

- b) Remove the stopper plates.


- c) Discard the 4 nuts and 2 stopper plates as they are not to be reused.

**NOTE: DO NOT** reuse the old nuts, new nuts **MUST** be used.

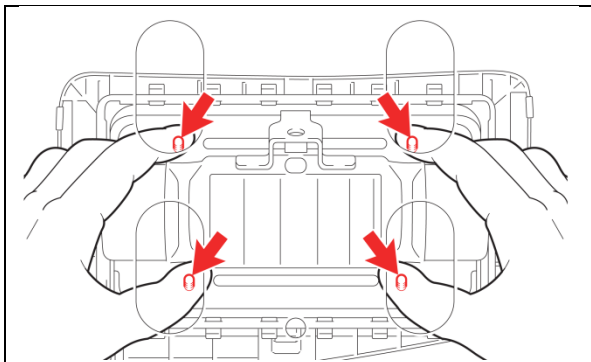

## 6. REMOVE THE INFLATOR

- a) Gently push in the 4 studs to loosen the inflator for removal.

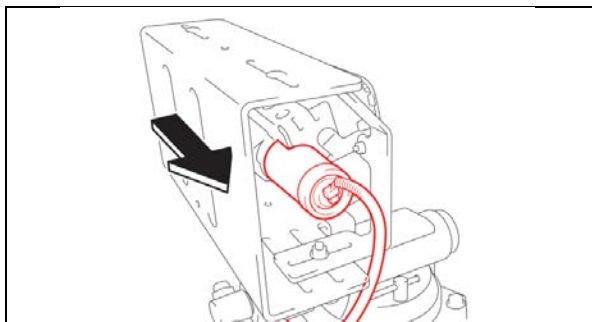

- b) Remove the inflator from the airbag assembly and place it on a safe work surface.



**ENSURE YOU ENTER BOTH THE OLD AND NEW INFLATOR SERIAL NUMBER IN THE APPROPRIATE SPOT OF THE APPLICATION**



## 7. SCAN THE OLD AND NEW INFLATOR SERIAL NUMBER

- a) Scan the **OLD** inflator serial number and mark the old inflator so that it will not be reused.  
b) Scan the **NEW** inflator serial number.

# ATTENTION: This information is **CRITICAL**

- It is used to confirm the correct inflator is removed from the vehicle.
- It is recorded by TMS to trace the return parts shipment.
- It is used to track the new inflator that is being installed in the vehicle.

T3 - Google Chrome

t3qa.tms.toyota.com/t3Portal/portlets/tis/AirBag/AirBagController.portlet?\_nfpb=true&\_windowLabel=StandalonePortlet&StandalonePortlet\_actionOverride=%2Fportlets%2Ftis%2F

### Front Passenger Airbag Inflator Module - Safety Recall

SSC - E04

User ID: \_\_\_\_\_

Dealer Code: \_\_\_\_\_

Time: 03/30/2015 05:17 AM PDT

VIN: 1NX BR32E 14Z306698 [2004 Corolla SUPER WHITE]

Technician Name: \_\_\_\_\_

Dealer Name: \_\_\_\_\_

Airbag Serial #: \*\*\*\*\*12

**Original Inflator**

How to Identify the Inflator serial code on the Original and Replacement Inflator can?

The Inflator serial code is an **11 digit code** on the Inflator can. It can be found with a bar code on removing the Inflator can from the Airbag Assembly unit.

The first two characters of the **Original Inflator Serial code** will be from [AA, AB, AJ, FD or JD].

The first two characters of the **Replacement Inflator Serial code** will be either 'LT' or 'LR'.

**Replacement Inflator**

Old Inflator - Include larger letters - 11 Digits

Replacement Inflator - Include larger letters - 11 Digits

Inflator Module replacement IS REQUIRED on all vehicles under the Safety Recall. Follow the technical instructions and acknowledge the following statements.

**If manually typing serial number, you MUST include all leading zeros. (If applicable)**

Original Inflator Serial #:

If old inflator serial number is not visible or missing, check this box. ☐

\* Replacement Inflator Serial #:

**If you have a concern with the inflator serial numbers, please email quality\_compliance@toyota.com with details.**

☐ \* I agree to complete the safety recall's remaining technical instructions.

☐ \* I agree to perform a vehicle Health Check with Techstream upon completion of the safety recall's technical instructions.

(\*) - Indicates Required Field(s)

Back Clear Submit

c) If the inflator serial number cannot be scanned or is not present check the box as shown below.

T3: - Google Chrome

t3qa.tms.toyota.com/t3Portal/portlets/tis/airBag/AirBagController.portlet?\_nfpb=true&\_windowLabel=StandalonePortlet&StandalonePortlet\_actionOverride=%2Fportlets%2Ftis%2F

## Front Passenger Airbag Inflator Module - Safety Recall

### SSC - E04

User ID:

Dealer Code:

Time: 03/30/2015 05:17 AM PDT


VIN: 1NX BR32E 14Z308698 [2004 Corolla SUPER WHITE]

Technician Name:

Dealer Name:


Airbag Serial #: \*\*\*\*\*12

**Original Inflator**

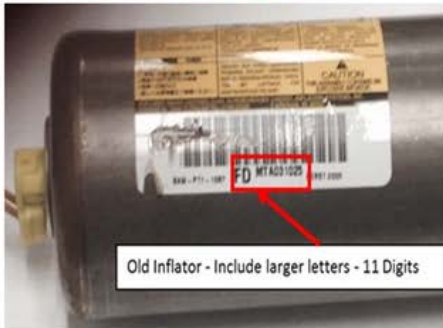

Old Inflator - Include larger letters - 11 Digits

**Replacement Inflator**



Replacement Inflator - Include larger letters - 11 Digits

**How to Identify the Inflator serial code on the Original and Replacement Inflator can?**

The Inflator serial code is an **11 digit code** on the Inflator can. It can be found with a bar code on removing the Inflator can from the Airbag Assembly unit.

The first two characters of the **Original Inflator Serial code** will be from [AA, AB, AJ, FD or JD].

The first two characters of the **Replacement Inflator Serial code** will be either 'LT' or 'LR'.

Inflator Module replacement IS REQUIRED on all vehicles under the Safety Recall. Follow the technical instructions and acknowledge the following statements.

**If manually typing serial number, you MUST include all leading zeros. (If applicable)**

Original Inflator Serial #:

If old inflator serial number is not visible or missing, check this box: ☐

\* Replacement Inflator Serial #:

**If you have a concern with the inflator serial numbers, please email [quality\\_compliance@toyota.com](mailto:quality_compliance@toyota.com) with details.**

☐ \* I agree to complete the safety recall's remaining technical instructions.

☐ \* I agree to perform a vehicle Health Check with Techstream upon completion of the safety recall's technical instructions.

(\*) - Indicates Required Field(s)

Back Clear Submit

**Checking this box requires Air Bag Assembly replacement.**

**\*\*Note\*\* Contact your region in the event that you are unable to read the serial number.  
DO NOT ATTEMPT TO INSTALL INFLATOR**

**NOTE: The NEW AIRBAG ASSEMBLY serial number MUST be scanned prior to reinstallation to track the airbag assembly to the vehicle (refer to page 13).**

- d) Confirm agreement by checking the two boxes.
- e) Record the Warranty Authorization # to be included in the warranty claim.
- f) Place the old inflator in the parts box and take it immediately to the parts department.

**NOTE:**

- Confirm the cursor is in the correct serial number input box before scanning.
- If the serial number barcode will not scan, it can be entered manually.
- If there are any difficulties or concerns with this process, email [quality\\_compliance@toyota.com](mailto:quality_compliance@toyota.com) with details.

### Step c)

Front Passenger Airbag Inflator Module - Safety Recall  
SSC - DSF

User ID: SuzukiR Technician Name: Russell Suzuki  
Dealer Code: Dealer Name:  
Time: 06/10/2014 05:25 PM PDT Airbag Serial #: \*\*\*\*\*96  
VIN: STD BT44A 33S157291 [2003 Sequoia BEIGE M, M.]

Inflator Module replacement IS REQUIRED on all vehicles under the Safety Recall. Follow the technical instructions and acknowledge the following statements.

If manually typing serial number, you MUST include all leading zeros. (If applicable)  
Original Inflator Serial #: AAEL5110212  
If old inflator serial number is not visible or missing, check this box. ☐  
Replacement Inflator Serial #: AAEL5110212  
If you have a concern with the inflator serial numbers, please email quality.compliance@toyota.com with details.

☒ I agree to complete the safety recall's remaining technical instructions.  
☒ I agree to perform a vehicle Health Check with Techstream upon completion of the safety recall's technical instructions.

(\*) - Indicates Required Action


### Step d)

Front Passenger Airbag Inflator Module - Safety Recall  
SSC - DSF

User ID: SuzukiR Technician Name: Russell Suzuki  
Dealer Code: Dealer Name:  
Time: 06/10/2014 05:13 PM PDT Airbag Serial #: \*\*\*\*\*96  
Original Inflator Serial #: AAEL5110212 Replacement Inflator Serial #: AAEL5110213

SuzukiR has agreed to the following terms and conditions on 06/10/2014 05:13 PM PDT  
☒ I agree to complete the safety recall's remaining technical instructions.  
☒ I agree to perform a vehicle Health Check with Techstream upon completion of the safety recall's technical instructions.

Russell Suzuki has successfully confirmed completion of Airbag Inflator Module Safety Recall for  
VIN - STD BT44A 33S157291 [2003 Sequoia BEIGE M, M.]  
Warranty Authorization #: b5511e9f  
Airbag inflator module was replaced under this safety recall.  
Print this page for your records and then click 'Close' to resume working.

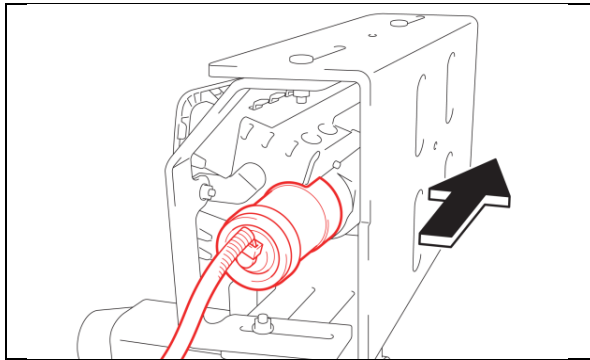


## 8. INSTALL THE NEW INFLATOR

- a) Carefully slide the new inflator into the airbag assembly.




- DO NOT** connect the inflator harness at this time. It is **CRITICAL** to install the plates first to confirm the inflator is installed in the correct position before connecting the harness.

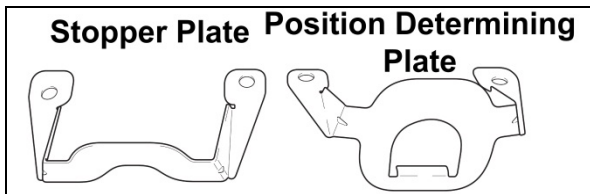

## 9. CONFIRM THE NEW PLATES

- a) Confirm the identification of the stopper plate and the position determining plate, **THEY ARE DIFFERENT**.

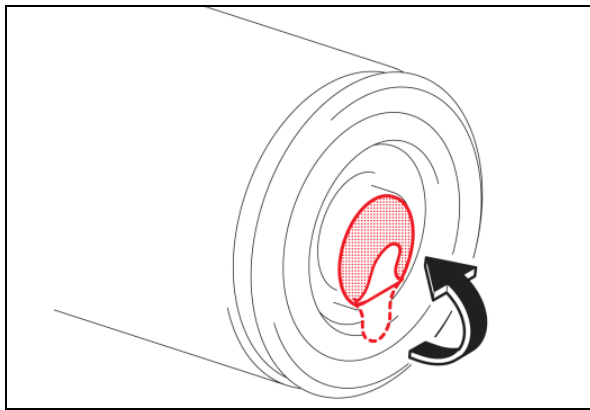


## 10. FOLD THE CONNECTOR SEAL

- a) Fold the seal in order to prevent it from being caught under the position determining plate in the next step.

**NOTE: DO NOT** fully remove the seal until just before connecting the harness.



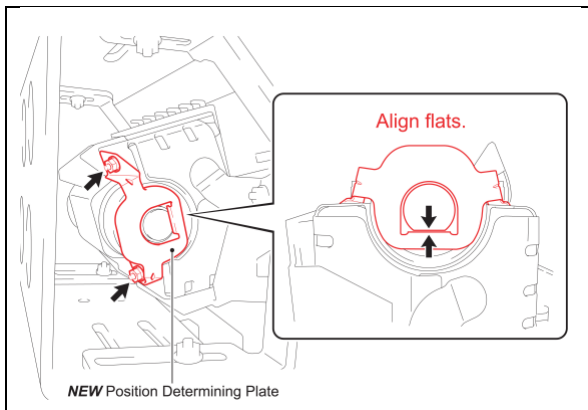


### 11. INSTALL THE **NEW** POSITION DETERMINING PLATE

- Place the **NEW** position determining plate on the airbag assembly on the side with the connector seal.
- Install **NEW** nuts by hand.



- Confirm the flats on the position determining plate and inflator are aligned.
- DO NOT** pinch the harness between the inflator and the plate.

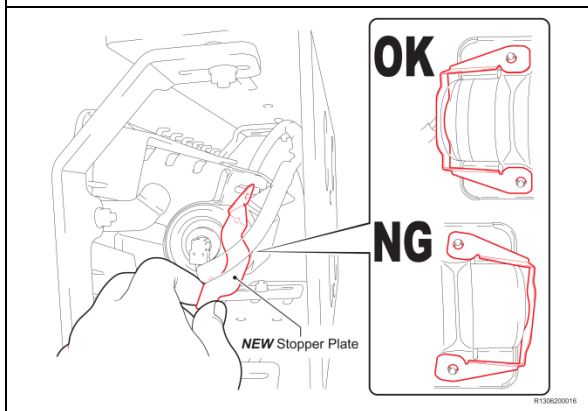


### 12. LOOSELY INSTALL A NEW STOPPER PLATE.

- Place the **NEW** stopper plate on the airbag assembly on the side where the harness is already connected.
- Confirm the end of the inflator sits flat against the stopper plate. If they do not align the inflator is installed backward.
- Install NEW stopper plate nuts by hand. They will be torqued on a later step.



- Confirm the stopper plate to inflator fitment is correct.
- DO NOT** pinch the harness between the inflator and the stopper plate.

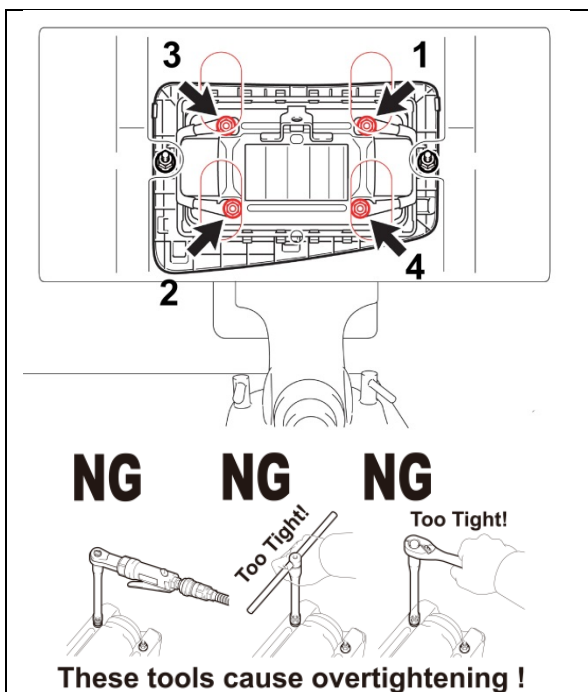


### 13. TORQUE THE PLATE NUTS

- Tighten the nuts evenly in two increments following the sequence shown in the illustration. Use a socket driver or torque wrench to tighten the nuts.

**Torque: 35in. lbf (3.9N·m)**



- There will be some resistance when tightening the nuts because they are self-locking, confirm the nuts are tightened correctly.
- DO NOT** use a power tool, T-handle, or ratchet when tightening the nuts to avoid over torqueing.

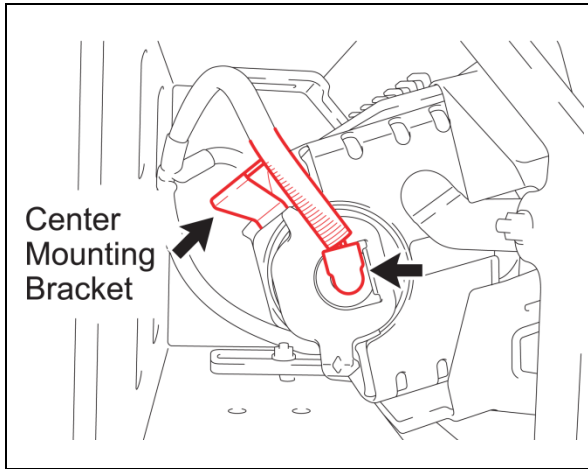

#### 14. CONNECT THE INFLATOR CONNECTOR

- Remove the connector seal from the inflator.
- Confirm the alignment of the harness connector as shown in the illustration, then connect the harness. The connector wires should lead toward the center mounting bracket on the airbag assembly.




- The connector should be connected **IMMEDIATELY** after removing the seal.
- The connector is one-way, once it is installed it **CANNOT** be removed.
- If the connector is installed in the incorrect orientation the terminals may be bent or the connector may not fully engage.

#### 15. REMOVE THE AIRBAG ASSEMBLY FROM THE BRACKET

- Remove the two nuts and the airbag assembly, then place the assembly on a cloth or the anti-static mat if it being used.


#### 16. ATTACH THE FELT TAPE

- Attach the felt tape to the edges of the stopper and position determining plate.

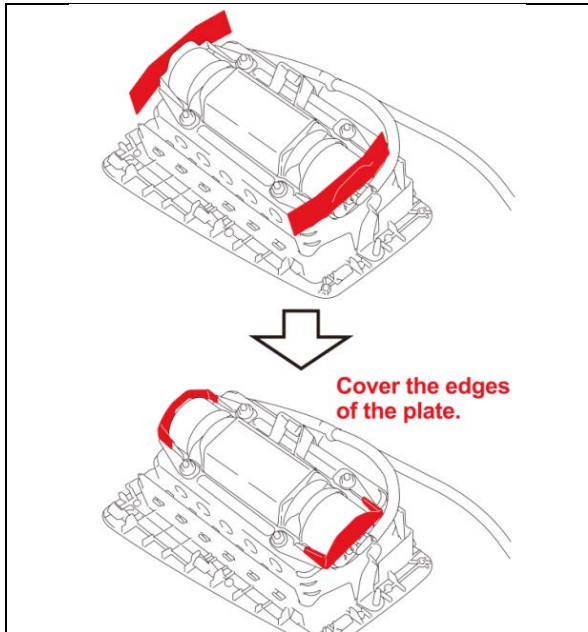

#### 17. INSPECT THE AIRBAG BEFORE INSTALLATION

- Confirm that the 4 **NEW** plate nuts are installed and tight.
- Confirm the **NEW** stopper and position determining plates are installed.
- Confirm the flats on the position determining plate and inflator are aligned.
- Confirm the orientation of the inflator wire harness.

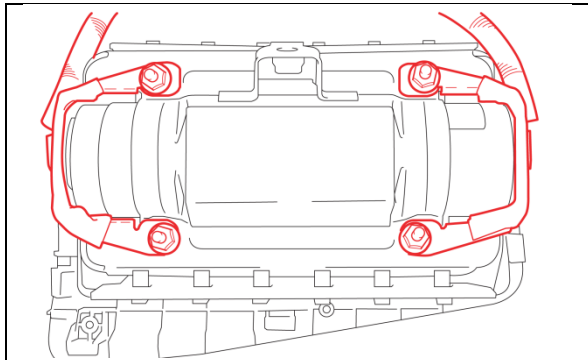

### IX. FRONT PASSENGER AIRBAG ASSEMBLY INSTALLATION

#### 1. REINSTALL THE AIRBAG ASSEMBLY

**Note:** During reinstallation of the airbag assembly, ensure the 12mm bolt and two 10mm nuts securing the airbag assembly to the instrument panel are installed and torqued to the required specification identified on TIS.

- Refer to TIS for instructions on airbag installation: [Corolla](#), [Matrix](#)

#### 2. RECONNECT THE NEGATIVE BATTERY CABLE

#### 3. PERFORM A HEALTH CHECK AND DIAGNOSTIC REPORT


## ◀ VERIFY REPAIR QUALITY ▶

- Confirm all precautions are followed to ensure safety during the repair
- Confirm the entire serial number checker application is completed and the warranty authorization # is recorded on **EVERY** vehicle
- Confirm the old inflator is handled safely and given to the appropriate parts professional for shipment
- Confirm the inflator harness connector is fully engaged and that the stopper plate and position determining plate are installed correctly

If you have any questions regarding this update, please contact your regional representative.

## X. APPENDIX

### A. CAMPAIGN DESIGNATION DECODER

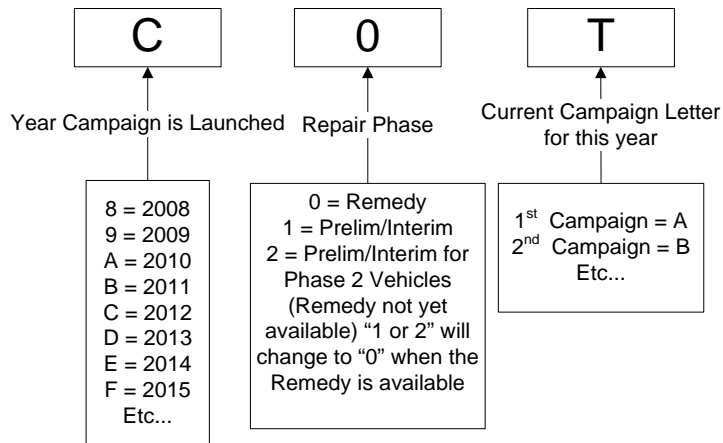

### B. CAMPAIGN PARTS DISPOSAL

#### [Video Supplement: Parts Handling](#)

**ALL** inflators that are removed from vehicles under this campaign **MUST** be packaged and shipped back to the inflator manufacturer following the manufacturer's instructions. The instructions can be found in the following locations:

- Attached to the dealer letter
- Included in the parts box
- On the laminated aid that was provided at the launch of the campaign