## **IMPORTANT UPDATE**

#### **TECHNICAL INSTRUCTIONS**

#### **FOR**

# SAFETY RECALL J0A/J0B/J0C DRIVER'S AIRBAG INFLATOR MODULE CERTAIN 2004 – 2005 MODEL YEAR RAV4

**Updated 01-14-2021** 

#### 1-14-21

- The scanning application process has been updated


All dealership technicians performing this recall are required to successfully complete the most current version of the E-Learning course "Safety Recall and Service Campaign Essentials". To ensure that all vehicles have the repair performed correctly; technicians performing this recall repair are required to have successfully completed E-Learning course SC18A (if you had previously completed E-Learning Course SC13B, you do not have to take SC18A), in addition to "Safety Recall and Service Campaign Essentials", and currently hold <u>at least one</u> of the following certifications levels:

- Toyota Certified (Electrical)
- Toyota Expert (Any Specialty)
- Master
- Master Diagnostic Technicians

It is the dealership's responsibility to select technicians with the above certification level or greater to perform this repair. Carefully review your resources, the technician skill level, and ability before assigning technicians to this repair. It is important to consider technician days off and vacation schedules to ensure there are properly trained technicians available to perform this repair at all times.


#### I. OPERATION FLOW CHART

The flow chart is for reference only. *DO NOT* use it in place of the full technical instructions. Follow *ALL* steps as outlined in the full technical instructions to confirm the campaign is completed correctly.

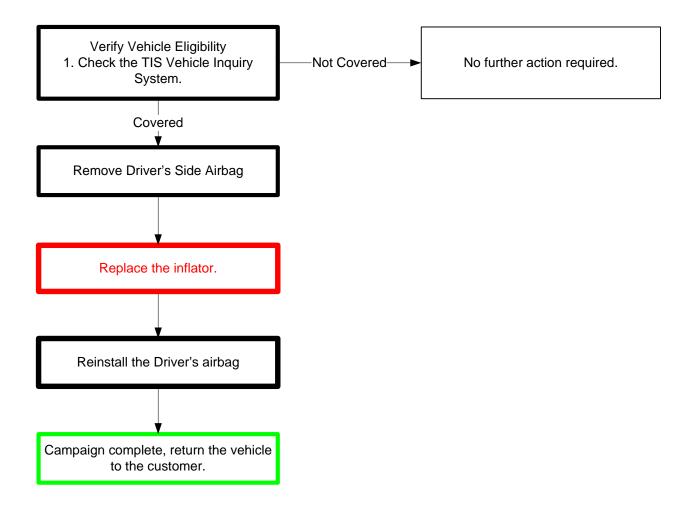

#### II. BACKGROUND

The subject vehicles are equipped with a Driver's front dual-stage airbag inflator. Toyota believes these inflators may have an increased potential for moisture intrusion over time. Moisture intrusion could potentially make the inflator assembly more susceptible to rupture during a crash. An inflator rupture may result in metal fragments striking and potentially seriously injuring the vehicle occupants.

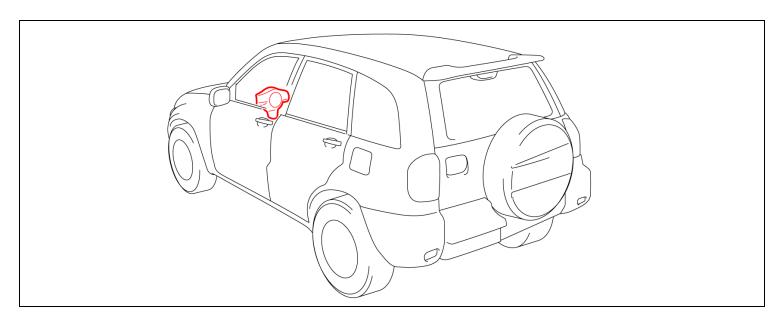

#### III. IDENTIFICATION OF AFFECTED VEHICLES

- Check the TIS Vehicle Inquiry System to confirm the VIN is involved in this Safety Recall, and that the campaign has not already been completed prior to dealer shipment or by another dealer.
- TMS warranty will not reimburse dealers for repairs conducted on vehicles that are not affected or were completed by another dealer.

# IV. PREPARATION A. PARTS



Only one inflator kit is required per vehicle, ensure you pick the correct part number for your location and model year so that the correct return shipping information is included.

Model	Part Number	Part Description		Quantity		
RAV 4	04005-08442	Driver's	Side Inflato	r Kit	1	
*The kit above includes the following parts.						
	Inflator		1			
	Self Locking Nut		4			

#### **Non-Desiccated Part Recovery**

Dealers should <u>discontinue the installation</u> of the non-desiccated parts listed below for recall, customer pay repairs AND over-the-counter sales (if applicable).

Model	Model Year	Part Number Part Description	
DAV/4	RAV4 2004-2005	45130-42120-C0	PAD ASSY, STEERING
KAV4		45130-42140-C0	WHEEL

Toyota requires all dealers to return any parts listed above that still remain in dealer inventory by utilizing the Hazmat Part Return Program available. Dealers will be issued a refund for all part returns. This part return program is outlined in *PANT Bulletin 2014-042*.

#### **Important Note:**

In order to return the inflator, packages must **NOT** be opened/tampered with.

#### **B. TOOLS & EQUIPMENT**

• Standard hand tools

Torque wrench

Techstream

**OPTIONAL SST** – This is an essential special service tool that the dealership should have. This tool is not mandatory when performing this repair.

Part Number	Part Name	Quantity
09890-47010-01	Anti-Static Mat Set	1

**E04 CAMPAIGN TOOLS** – These tools where previously provided to the dealership for campaign D0F and F0J. These tools are required when performing this repair.

Image	Name	Quantity
Mounting Bracket  Support Bars  Airbag Mounting Hardware  Support Bar Hardware	(D0F) Airbag Mounting Bracket & hardware	1
578500	F0L Mounting Bracket & hardware	2
	Barcode Scanner (D0F & F0J)	1

NOTE: These tools were provided at the start of recall D0F and F0J.


#### V. SAFETY PRECAUTIONS



#### CRITICAL INFORMATION – READ THOROUGHLY



Failure to follow these procedures correctly could cause the SRS to unexpectedly deploy during servicing or the SRS may fail to operate correctly when required after reassembly. Confirm all work is performed as described in these instructions.

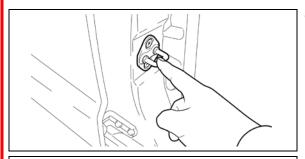


#### 1. ELIMINATE STATIC ELECTRICITY

a) Before starting work and periodically while working on the vehicle, touch a metallic part of the vehicle to discharge static electricity in the body.



#### 2. DO NOT MEASURE RESISTANCE

 a) DO NOT measure resistance of airbag components, this may cause accidental activation.

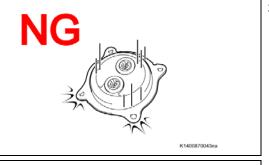


#### 3. HANDLE THE AIRBAG CAREFULLY

a) If an inflator is dropped, replace it with a **NEW** inflator.



#### 4. DO NOT ALLOW FOREIGN OBJECTS NEAR AIRBAG

- a) Be sure to collect and account for all removed nuts/bolts to prevent them from landing in the airbag assembly.
- b) Any foreign objects in the airbag assembly may cause damage or injury if the airbag is activated.

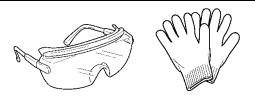


# 5. WEAR PROTECTIVE EQUIPMENT


 Always wear appropriate protective equipment when working on the SRS.

Wear protective eye wear and work gloves.

#### VI. COMPONENTS

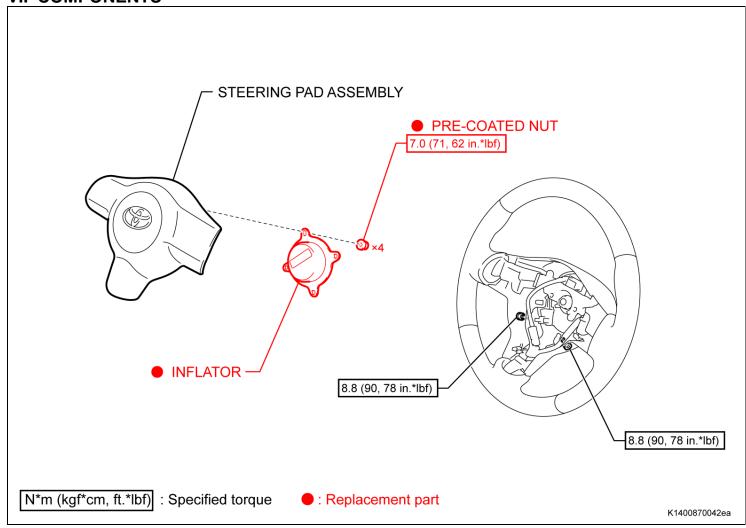

#### VII. SRS SYSTEM HEALTH CHECK

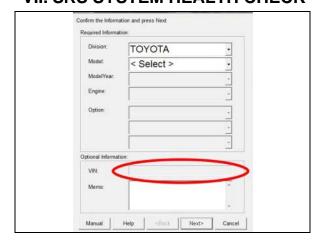

#### 1. PERFORM A HEALTH CHECK

- a) Confirm the Techstream is connected to the dealership's internet.
- b) When launching the Techstream software the VIN *MUST* be entered manually.

NOTE: All letters of the VIN *MUST* be entered in ALL CAPS, or the VIN will need to be reentered when running the diagnostic report.

c) Perform a health check.


Note: The VIN may auto populate on the later model year vehicles, if this happens DO NOT change the VIN.

#### 2. RUN A DIAGNOSTIC REPORT



This campaign only covers the replacement of the driver's airbag inflator. No other components in the SRS system are covered by this campaign.

a) After the health check has completed, run a diagnostic report by clicking on the link on the health check screen.

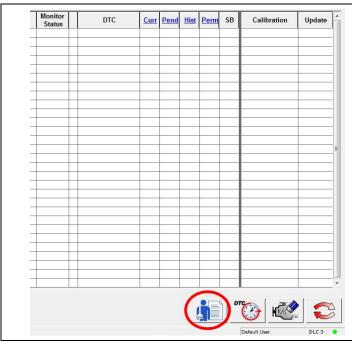

NOTE: If the VIN was not entered in ALL CAPS when Techstream was launched, an error will be displayed and there will be a prompt to reenter the VIN





b) Enter the vehicle mileage and repair order information, then click the 'report' button.



- The VIN *MUST* be entered manually in ALL CAPS when launching the Techstream software, the VIN *WILL NOT* auto-populate due to vehicle age.
- A health check and diagnostic report with VIN *MUST* be performed within the last 36 hours and recorded by TMS. If the diagnostic report is not run, the healthcheck will not be recognized by TMS.
- The serial number recording application will be disabled and the repair cannot be completed if a health check and diagnostic report is not performed and recorded by TMS.

#### VIII. WORK AREA PREPARATION





#### CRITICAL INFORMATION - READ THOROUGHLY



The bracket assembly that was provided at the launch of SSC D0F is a critical added-safety feature that *MUST* be used when replacing the inflator module. Confirm the bracket assembly is installed securely in the vise and confirm the work area being used is appropriate. The anti-static mat set that is an essential SST may be available at your dealership and is optional to use during inflator replacement. If the anti-static kit is not available, before starting work and periodically while working on the vehicle, touch a metallic part of the vehicle to discharge static electricity in the body.

Confirm there are no loose objects or people exposed to the back side of the bracket for safety in the unlikely event of airbag deployment due to improper work procedures (Remember that the inflator *IS NOT* being replaced due to an inadvertent deployment concern).

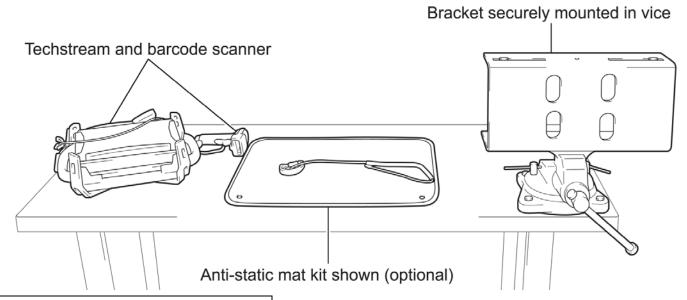

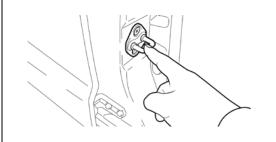

If the anti-static kit is not available, before starting work and periodically while working on the vehicle, touch a metallic part of the vehicle to discharge static electricity in the body.

#### IX. DRIVERS AIRBAG REMOVAL

#### 1. DISCONNECT THE NEGATIVE BATTERY CABLE




- Wait at least 90 seconds after disconnecting the cable from the negative battery terminal to prevent airbag and seat belt pre-tensioner deployment.
- Follow all precautions as outlined on TIS before servicing the SRS system.

#### 2. REMOVE THE DRIVERS AIRBAG

a) Refer to TIS for instructions on airbag removal:

RAV4 **2004 2005** 

b) Use low pressure shop air to clean any debris around the inflator.

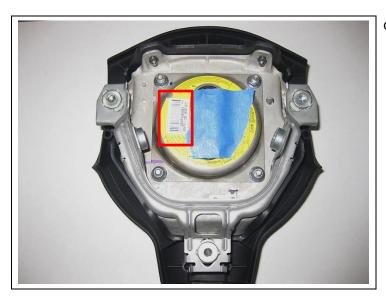

c) Place tape over the airbag connectors.

NOTE: DO NOT cover the inflator bar code.

#### X. RECORD AIRBAG AND INFLATOR SERIAL NUMBERS

1. LAUNCH THE SERIAL NUMBER RECORDING APPLICATION

Video Supplement: Serial Number Recording




- The AIRBAG ASSEMBLY, ORIGINAL INFLATOR, and NEW INFLATOR serial numbers MUST be recorded using the barcode scanner (provided at the launch of SSC D0F & F0J).
- The barcode scanner application MUST be completed on every vehicle. These numbers MUST be included on every warranty claim that is submitted for inflator module replacement or the claim may be subject to debit.
- The technician performing the work MUST have valid TIS login credentials and an internet connection to perform the inspection and scanning process.
- a) Log in to TIS and input the VIN of the vehicle in the Vehicle Inquiry tab.
- b) Confirm the VIN is applicable and that the campaign has not been completed.
- c) Click on the link to be sent to the scanning application site.
- d) You can also log into the scanning site via the URL below

Log into the website via the URL below https://takata-scan-app.imagespm.info/


User ID: Dealer Code

First time login password: xxxxx

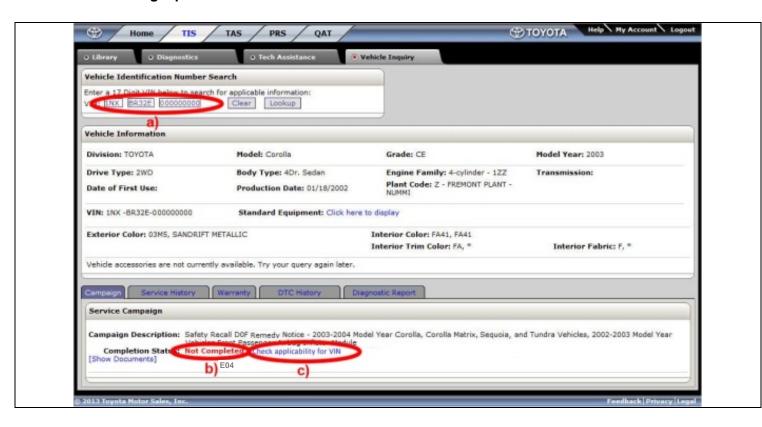


## Login

Complete all required (\*) fields below.

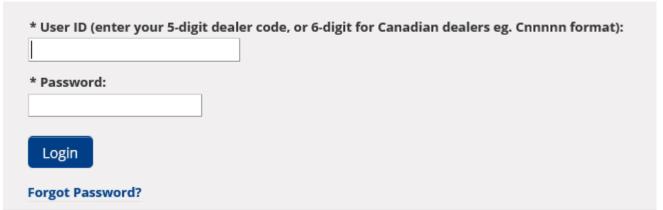



a) Enter your name and SPIN ID into the site

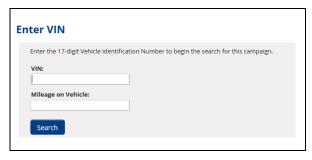

b) Enter the VIN and vehicle mileage into the site

#### 1. CONNECT THE BARCODE SCANNER

- a) Connect the barcode scanner to the USB port on the Techstream.
- b) The scanner will automatically connect and a beep will be heard when the scanner is ready.

#### NOTE:

- The scanner was provided for SSC DLC.
- The barcode scanner works best in low light conditions.
- Always hold the scanner directly in front of and parallel to the barcode label.

#### 2. SCAN THE AIRBAG SERIAL NUMBER

# ATTENTION: This information is CRITICAL

- a) Scan the AIRBAG ASSEMBLY serial number 2 times.
  - 1) Confirm the cursor is in the first serial number box The airbag serial number is ALWAYS the 12 then scan the serial.
  - 2) Position the cursor in the second serial number box then scan the serial.
- b) Click next.

#### NOTE:

- If both serial numbers that are entered do not match, confirm and reenter.
- If the serial number barcode will not scan, it can be entered manually.

#### AIRBAG SERIAL NUMBER IDENTIFICATION

- **DIGITS** located between the asterisks.
- The 3 digits before the asterisk ARE NOT part of the serial number, and SHOULD NOT be entered or an inaccurate response may be returned.

Airbag Serial Number Label Example






The AIRBAG ASSEMBLY serial number and the INFLATOR serial number are DIFFERENT. The AIRBAG ASSEMBLY serial number MUST be recorded prior to replacement.

#### **ORIGINAL Airbag Assembly Serial Number**

Scan or enter the original Airbag Assembly serial number into the website.

# VIN: Model / Campaign: \* Serial Number of Original Airbag Assembly: \* Re-confirm the Serial Number of Original Airbag Assembly: Check if the airbag serial number is missing or not visible, or if installing a new airbag assembly Search

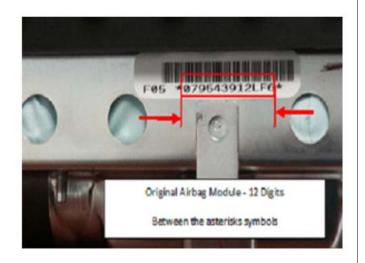

#### AIRBAG SERIAL NUMBER IS MISSING OR IS UNREADABLE

\*NOTE: Skip this section and jump to Section IX if the airbag assembly is scannable\*




If the airbag serial number and barcode are not legible or are not present, check the box in the application indicating the serial number is not legible and contact your regional representative.

a) If the airbag serial number cannot be scanned or is not present check the box as shown below.

#### **ORIGINAL Airbag Assembly Serial Number**

Scan or enter the original Airbag Assembly serial number into the website.

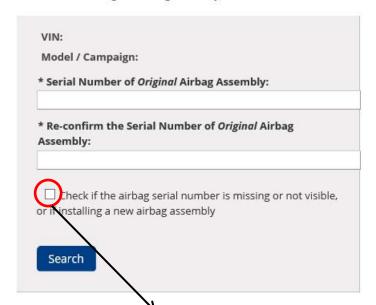




Checking this box requires Air Bag Assembly replacement.

\*\*Note\*\* Contact your region in the event

\*\*Note\*\* Contact your region in the event that you are unable to read the serial number.

DO NOT ATTEMPT TO INSTALL INFLATOR

b) After the Region approves the Airbag Assembly replacement and the new part is received, scan the NEW airbag barcode in the Serial Number Recording Application.

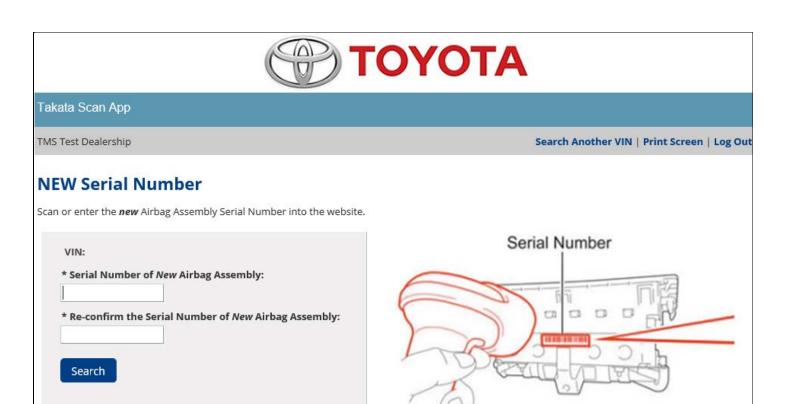



The new *AIRBAG ASSEMBLY* serial number *MUST* be recorded prior to reinstallation to track the airbag assembly to the vehicle.

Skip to Section X If a new airbag assembly was installed instead of an inflator



# ENSURE YOU ENTER BOTH THE OLD AND NEW INFLATOR SERIAL NUMBER IN THE APPROPRIATE SPOT OF THE APPLICATION -DO NOT ENTER THE AIRBAG SERIAL NUMBER FOR THIS STEP-



- 3. SCAN THE OLD AND NEW INFLATOR SERIAL NUMBER
- a) Scan the **OLD** inflator serial number and mark the old inflator so that it will not be reused.
- b) Scan the NEW inflator QR code.

# **ATTENTION:** This information is *CRITICAL*

- It is used to confirm the correct inflator is removed from the vehicle.
- It is recorded by TMS to trace the return parts shipment.
- It is used to track the new inflator that is being installed in the vehicle.

#### ORIGINAL Inflator Serial Number

Scan or enter the original Inflator serial number into the website.





#### **REPLACEMENT Inflator Serial Number**

Scan or enter the replacement Inflator serial number into the website.

VIN: 2T1BR32E57C810829

Model / Campaign: 2007 Corolla / E04

\* Serial Number of Replacement Inflator:

\* Re-confirm the Serial Number of Replacement Inflator:


Search



c) If the inflator serial number cannot be scanned or is not present check the box as shown below.

#### **ORIGINAL Inflator Serial Number**

Scan or enter the original Inflator serial number into the website.

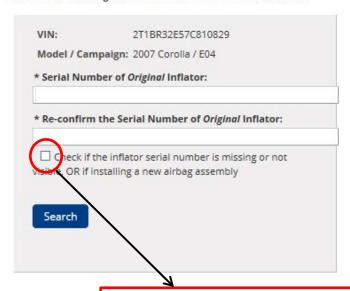



Checking this box requires Air Bag Assembly replacement.


\*\*Note\*\* Contact your region in the event
that you are unable to read the serial number.

DO NOT ATTEMPT TO INSTALL INFLATOR


- d) Confirm agreement by checking the two boxes.
- e) Record the Warranty Authorization # to be included in the warranty claim.
- f) Place the old inflator in the parts box and take it immediately to the parts department.

#### NOTE:

- Confirm the cursor is in the correct serial number input box before scanning.
- If the serial number barcode will not scan, it can be entered manually.
- If there are any difficulties or concerns with this process, email quality\_compliance@toyota.com with details.

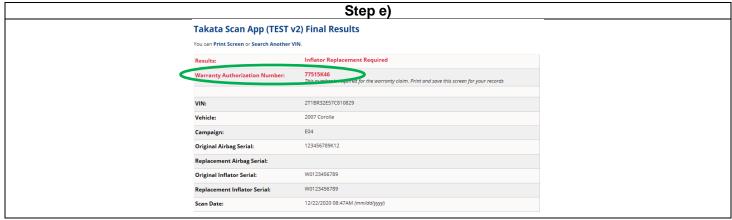

#### **XI. INFLATOR REPLACEMENT**

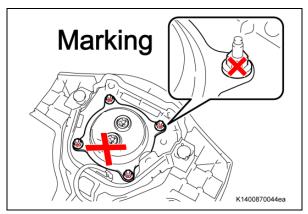

#### 3. MOUNT THE AIRBAG ONTO THE MOUNTING BRACKET

- a) Mark the following parts so they will not be reused:
  - The inflator
  - The 4 mounting nuts



b) Attach the 2 mounting bars to the airbag as shown.

NOTE: The color of the brackets may be different.



NOTE: Ensure that the bolts that attach the bracket to the airbag DO NOT protrude past the threaded portion of the horn mounting ring.




c) Install the mounting bars to the support bars with the supplied hardware.

NOTE: The airbag will be mounted upside down in the mounting fixture.

d) Position the airbag so that all four nuts can be removed through the access holes.

# NOTE: The inflator nuts may need to be accessed at a slight angle through the openings.

- e) Tighten the nuts holding the support bars to the mounting bracket and the bolt and nut.
- f) Confirm the following:
  - Mounting bracket is secure in the vise.
  - Airbag is secure in the support bars.
  - Support bars are secure on the mounting bracket using 1 bolt/nut at the top of each support bar and 2 nuts/bolts at the bottom of each support bar.

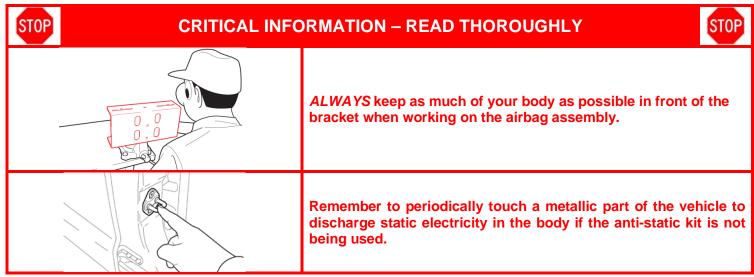



#### 4. REMOVE THE SELF LOCKING NUTS

a) Use the access holes in the bracket to remove and discard the 4 nuts.

#### NOTE:

• DO NOT use power tools.




#### 5. REMOVE THE INFLATOR


a) Pull the inflator straight back from the airbag assembly and place it on a safe work surface.

NOTE: You may need to slightly tilt the inflator to clear the horn ring.

b) Place the old inflator in the box that the new inflator came in and return it to the parts department.

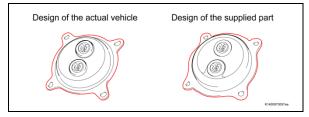

The design differences from the original inflator and the replacement inflator.

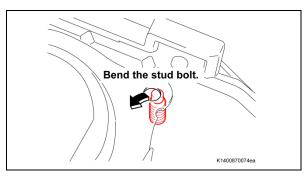


#### 6. INSTALL THE *NEW* INFLATOR

- a) Check that all 4 studs are straight.
- b) Straighten any studs that are bent.

c) Carefully guide the new inflator into the airbag assembly.

NOTE: Ensure that the bar code is facing the correct way.

d) Ensure that the inflator is fully seated in the airbag.

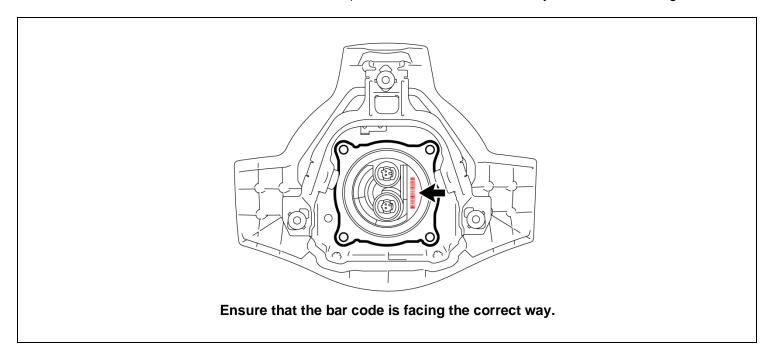



#### 7. TORQUE THE NEW RETAINING NUTS

a) Install and tighten the **NEW** nuts evenly in two steps in an X pattern. Use a socket driver or torque wrench to tighten the nuts.


Torque: 7.0 N\*M (71 kgf\*cm, 62 in. lbf)




- There will be some resistance when tightening the nuts because they are self-locking, confirm the nuts are tightened correctly.
- DO NOT use a power tool, T-handle, or ratchet when tightening the nuts to avoid over torqueing.

#### 8. REMOVE THE AIRBAG ASSEMBLY FROM THE BRACKET


- a) Remove the airbag assembly from the fixture, and place the assembly on a cloth or the anti-static mat.
- b) Remove the bracket from the airbag.

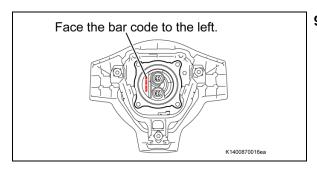

- 9. INSPECT THE AIRBAG BEFORE INSTALLATION
  - a) Confirm that the inflator is oriented correctly.
    - Bar code to the left.

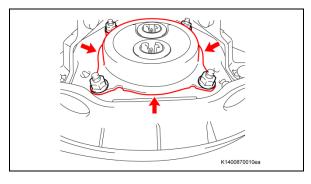

b) The inflator is fully seated.

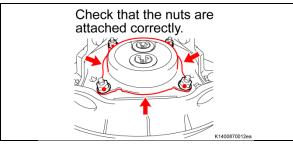

c) Confirm that the 4 **NEW** nuts are installed and tight.

#### XII. FRONT PASSENGER AIRBAG ASSEMBLY INSTALLATION

- 1. REINSTALL THE DRIVERS AIRBAG
  - a) Refer to TIS for instructions on airbag installation:

RAV4 **2004 2005** 

- 2. RECONNECT THE NEGATIVE BATTERY CABLE
- 3. PERFORM A HEALTH CHECK AND DIAGNOSTIC REPORT
- 4. CHECK HORN OPERATION

#### **◄ VERIFY REPAIR QUALITY** ►

- Confirm all precautions are follow to ensure safety during the repair
- Confirm the entire serial number checker application is completed and the warranty authorization # is recorded on EVERY vehicle
- Confirm the old inflator is handled safely and given to the appropriate parts professional for shipment lf you have any questions regarding this update, please contact your regional representative.

#### XIII. APPENDIX

#### A. SCANNER SET-UP

Determine which scanner you need to update the Datalogic QD 2300 was provided at the launch of D0F and emits a red beam when the scanner is used.

The Datalogic 2430 was provided at the launch of F0J and emits a blue beam when the scanner is used.

(Datalogic QD 2300 provided at the launch of D0F)

The scanner will need to have an application added for it to read the bar code on driver's airbag. Preform the following steps to load the application on to the scanner.

NOTE: This application only needs to be loaded once.

a) Scanning the image below to enable code 93.



**Enable Code 93** 

b) Scan the image below for enable any length for code 93.



Code 93 - Any Length

c) The scanner is now ready to scan the airbag bar codes.

Additional information can be found in the Datalogic Product Reference Guide. The Datalogic website is: <a href="http://www.datalogic.com/eng/support-services/automatic-data-capture/downloads/manuals-ma-3.html?search">http://www.datalogic.com/eng/support-services/automatic-data-capture/downloads/manuals-ma-3.html?search</a> prod=166

#### (Datalogic 2430 provided at the launch of F0J)

The scanner will need to have an application added for it to read the bar code on driver's airbag. Preform the following steps to load the application on to the scanner.

#### NOTE: This application only needs to be loaded once.

a) Enter the programming mode by scanning the image below.



#### **Enter/Exit Programming Mode**

b) Scan the image below for Code 93.



Code 93 = Enable

c) Scan the image below to exit the programming mode.




#### Enter/Exit Programming Mode

d) The scanner is now ready to scan the airbag bar codes.

Additional information can be found in the Datalogic Product Reference Guide. The Datalogic website is: <a href="http://www.datalogic.com/eng/support-services/automatic-data-capture/downloads/manuals-ma-3.html?search">http://www.datalogic.com/eng/support-services/automatic-data-capture/downloads/manuals-ma-3.html?search</a> prod=612

#### **B. CAMPAIGN DESIGNATION DECODER**

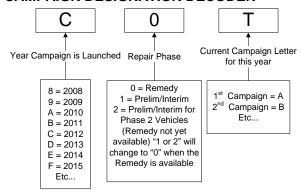

#### C. CAMPAIGN PARTS DISPOSAL

**ALL** inflators that are removed from vehicles under this campaign **MUST** be packaged and shipped back to the inflator manufacturer following the manufacturer's instructions. The instructions can be found in the following locations:

- Attached to the dealer letter
- Included in the parts box
- On the laminated aid that was provided at the launch of the campaign