

October 11, 2024

Version 2

Safety Recall: 2019–20 RDX Fuel Pump Motor

Supersedes 24-005 dated January 17, 2024, to revise the information.

APPLIES TO

Year	Model	Trim Level	VIN Range
2019–20	RDX	ALL	Check the iN VIN status for eligibility.

BACKGROUND

A certain number of 2019–20 RDX units may have been built with a fuel pump motor or may have been repaired with a fuel pump assembly service part with defective impellers.

Due to swelling of the fuel pump motor impeller, the fuel pump may seize and stop working. A defective impeller may cause the fuel pump to become inoperative, which could prevent an engine from functioning as intended. This limitation may cause a loss of motive power or a stall while being driven, increasing the risk of a crash or injury, creating a safety hazard.

If this bulletin appears during an iN VIN status inquiry, the vehicle is subject to a safety recall. Any affected vehicles in your dealer inventory are on STOP SALE until further notice. Refrain from calling Tech Line for updates.

CLIENT NOTIFICATION

Owners of affected vehicles will be sent a notification of this campaign. Do an iN VIN status inquiry to make sure the vehicle is shown as eligible. Some vehicles affected by this campaign may be in your new or used vehicle inventory.

Failure to repair a vehicle subject to a recall or campaign may subject your dealership to claims or lawsuits from the client or anyone else harmed as a result of such failure. To see if a vehicle in inventory is affected by this safety recall, do a VIN status inquiry before selling it.

CORRECTIVE ACTION

Replace the fuel pump motor.

NOTE: If the vehicle has any of the symptoms listed in BACKGROUND, you must apply this bulletin before attempting any other repairs. If the symptoms remain after the recall repair is complete, only attempt further repairs (such as replacing the high-pressure fuel pump) after authorized troubleshooting.

WARRANTY CLAIM INFORMATION

Operation Number	Description	Flat Rate Time	Defect Code	Symptom Code	Template ID	Failed Part Number
3101EH	Replace the fuel pump motor.	1.0 hr	6FE00	MGF00	B24005A	17045-TJB-A03

Skill Level: Repair Technician

CLIENT INFORMATION: The information in this bulletin is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely maintain your vehicle. These procedures should not be attempted by “do-it-yourselfers,” and you should not assume this bulletin applies to your vehicle, or that your vehicle has the condition described. To determine whether this information applies, contact an authorized Acura automobile dealer.

PARTS INFORMATION

Refer to the Parts Information Bulletin 24-0013, *Multi-Model Fuel Pump Motor Safety Recall Parts Availability*, for details regarding parts availability and ordering.

Part Name	Part Number	Quantity
Fuel Pump Motor Kit	06170-TJB-306	1

For dealers experiencing a strong fuel smell from storing a fuel pump motor replaced under this service bulletin, the fuel pump motor may be disposed of immediately in accordance with local regulations. This only applies to the fuel pump motor replaced under this service bulletin. The published retention policy remains in effect for all other parts.

If you have any questions about this exception or other parts retention issues, contact the WPI Administrative Office at **937-642-2737**.

TOOL INFORMATION

Tool Name	Tool Number	Quantity
Fuel Sender Wrench	070AA-TLA0100	1

REPAIR PROCEDURE


⚠ WARNING

Fuel pump motor removal exposes fuel, which can ignite, causing a fire or explosion.

This can cause serious injury or death.


Always work in a well-ventilated area, and keep sparks or open flames away.

1. Fold down the right rear seat-back.

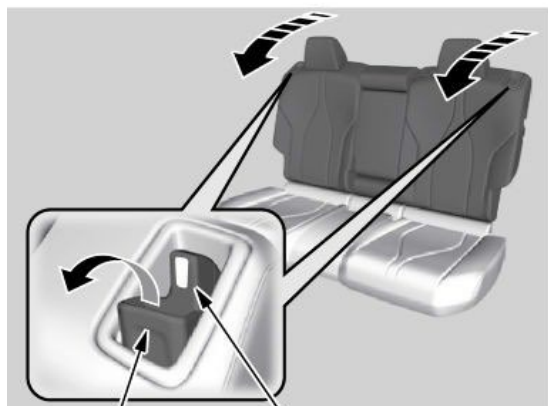


RELEASE LEVER

RED TAB

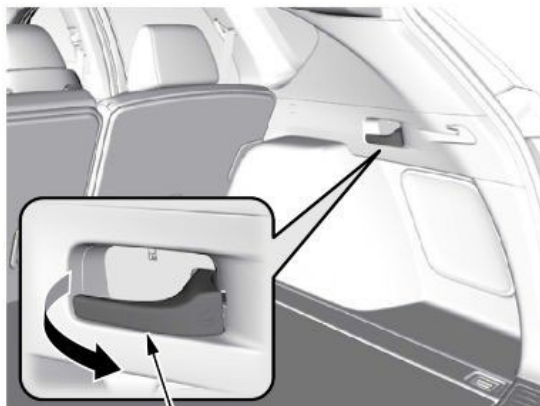


LEVER

2. Remove the cargo floor lid.

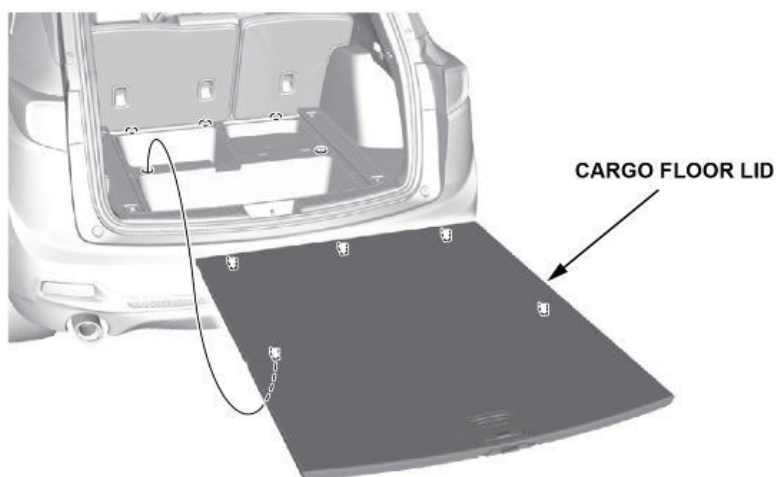


CARGO FLOOR LID

3. Remove the cargo bin cap.

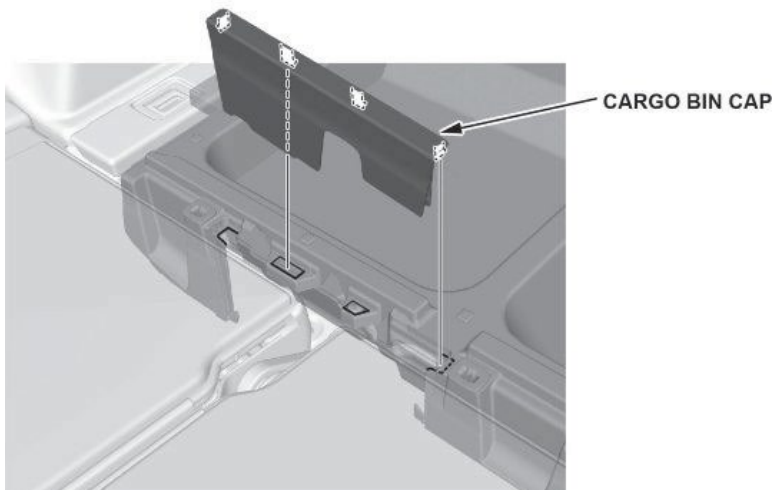

4. Remove the rear seat cushion bolt.

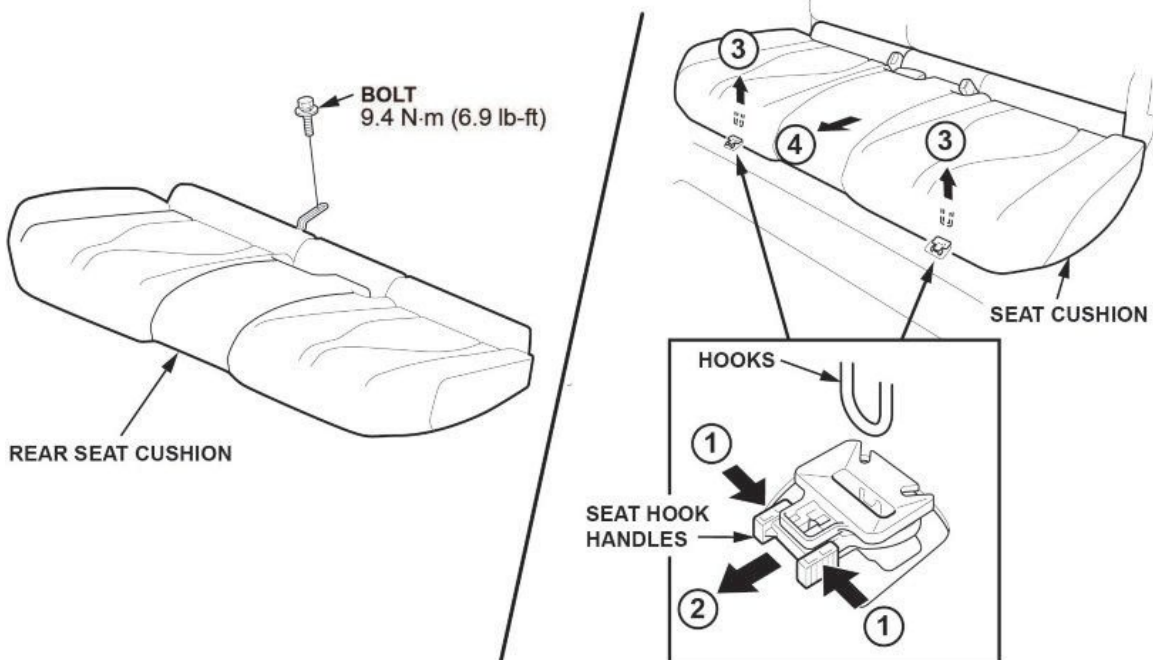

5. Fold up the right-rear seat-back to the upright position.
6. While pushing down on the rear seat cushion, pull the seat hook handles to release the hooks.
7. Pull back the seat cushion to pull off the seat belt buckles from the slits in the seat cushion.

8. *With rear seat heaters:* Disconnect the connectors.

Left




Right




CONNECTOR

9. Remove the rear seat cushion.
10. Insert the emergency fuel funnel into the fuel filler neck to relieve the pressure in the fuel tank.
- NOTE: The emergency fuel funnel is in the cargo tool box.

EMERGENCY FUEL FUNNEL

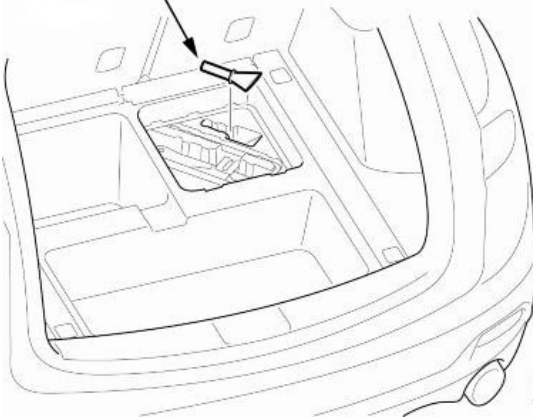

FUEL FILLER NECK

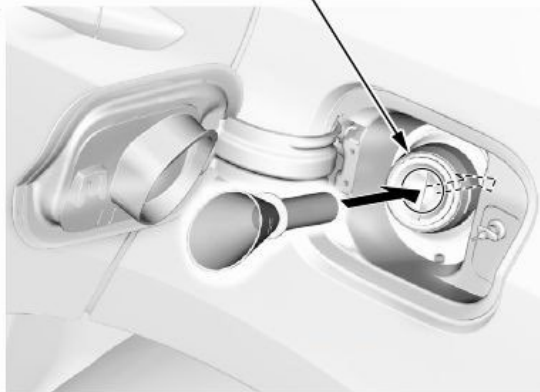


11. Relieve the fuel pressure.

With an i-HDS:


- Connect an i-HDS to the vehicle.
- Turn the vehicle to ON.
- Select the **PGM-FI** system on the i-HDS.
- Select **FUEL PUMP OFF** from the **Function Test** menu.
- Start the engine and let it idle until it stalls.
- Turn the ignition to OFF.

Without an i-HDS:

- Remove the fuel tank unit access panel.

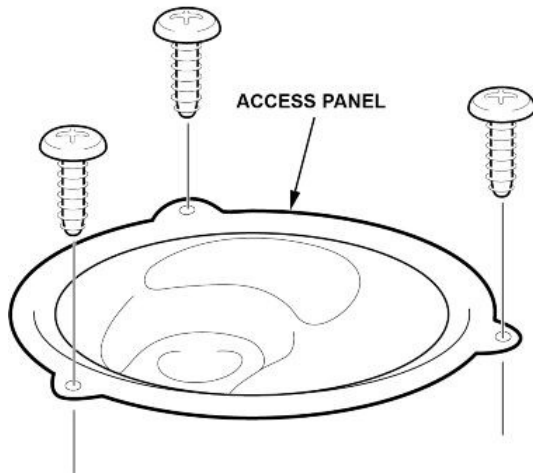

- Disconnect the fuel tank unit connector.

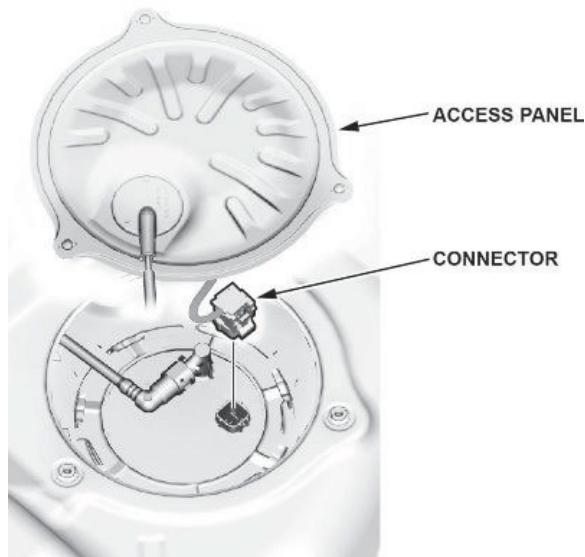

- Start the engine, and let it idle until it stalls.
- Turn the ignition to OFF.

NOTE:

- Do not allow the engine to idle above 1,000 rpm, or the PCM will continue to operate the fuel pump.
- A pending or confirmed DTC may be set during this procedure. After the repair is complete, check for DTCs, and clear them as needed.


12. Disconnect both 12-volt battery terminals.

NOTICE


To protect the terminal connector from damage, do not hold it when removing the negative terminal.

NOTE:

- Always disconnect the negative terminal first.
- Do not disconnect the 12-volt battery sensor from the cable.

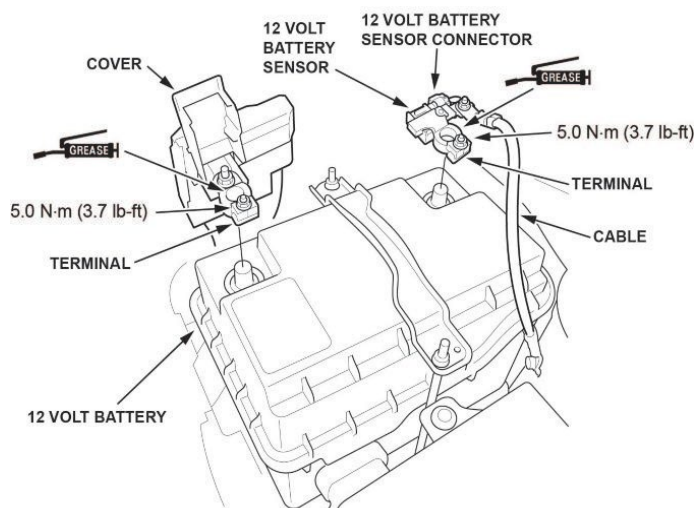


13. Place a rag or shop towel over the quick-connect fitting, and disconnect it.

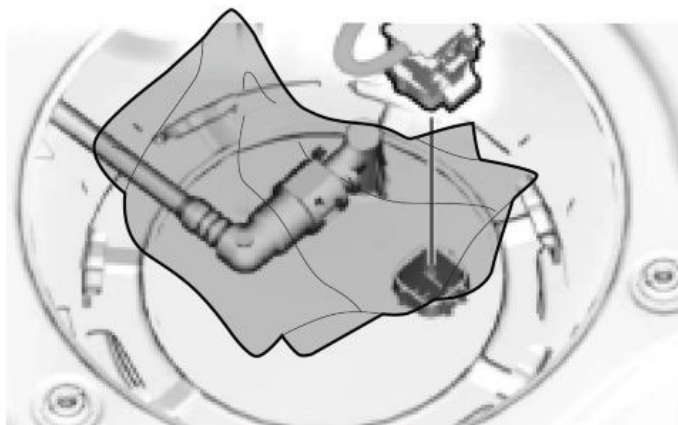

14. Remove the fuel tank unit cam lock ring using the fuel sender wrench (T/N 070AA-TLA0100) as shown.


NOTE:

- Keep the fuel sender wrench from floating.
- After unlocking the fuel tank unit cam lock ring, clean the top of the fuel pump flange and adjacent areas to make sure it's free of dirt, dust, and debris.

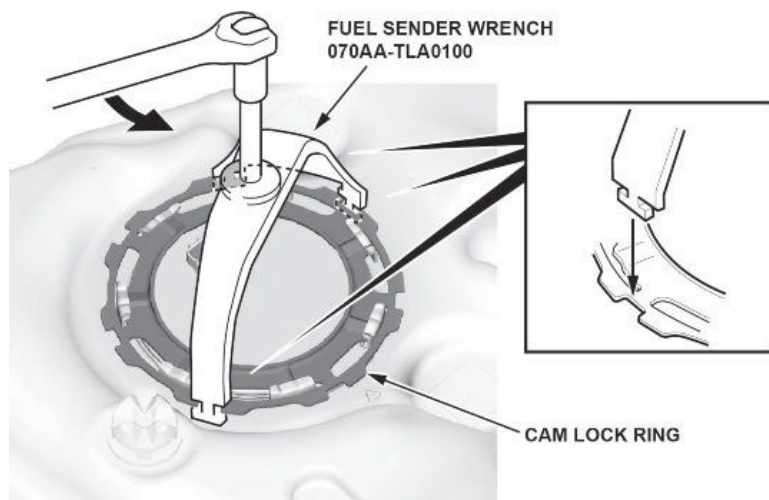

15. Slightly pull up and tilt the fuel tank unit, then disconnect the transfer tube.

NOTE: The gasoline in the fuel tank will drain out once the transfer tube is disconnected. Make sure it pours back into the tank.

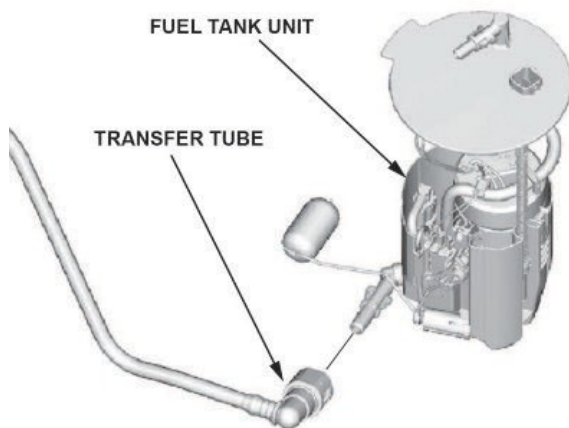


16. Remove the fuel tank unit.

NOTICE

Do not to bend or twist the fuel level sensor arm excessively. This may damage the fuel level sensor or cause it to send inaccurate readings.

NOTE:

- After removing the fuel pump unit, clean the fuel tank around the fuel pump opening.
- After removing the fuel pump O-ring, clean the fuel tank around the O-ring opening and make sure it's free of dirt, dust, and debris.

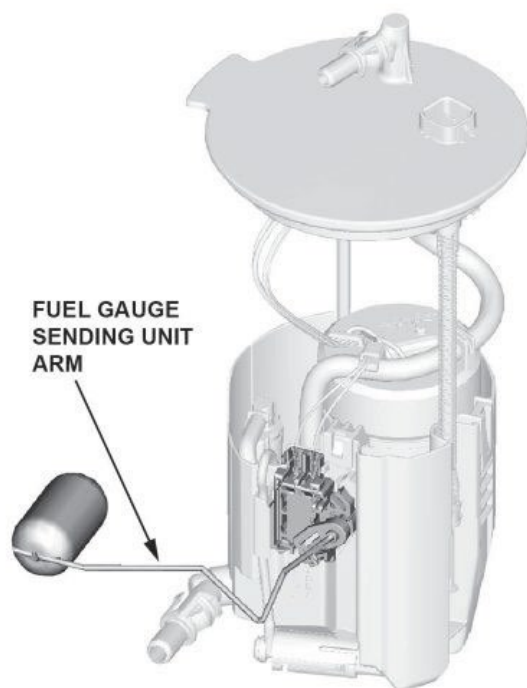


17. Prepare the fuel pump and parts to be replaced.

NOTE: Take a photo of the fuel tube and wire harness, and note their routing for assembly. There are various types of routing.


18. Spread the wire harness clamps, and remove the wire harness. Make sure not to damage the wire harness.

NOTICE


Do not spread the clamps too wide. Spreading them too wide may damage them.

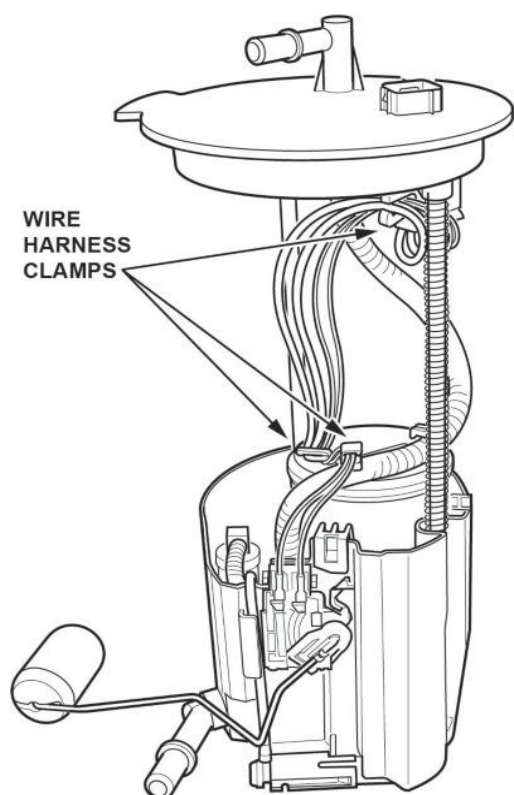

19. Press the tab on the fuel level sensor to release the lock. Then, push up on the fuel level sensor.

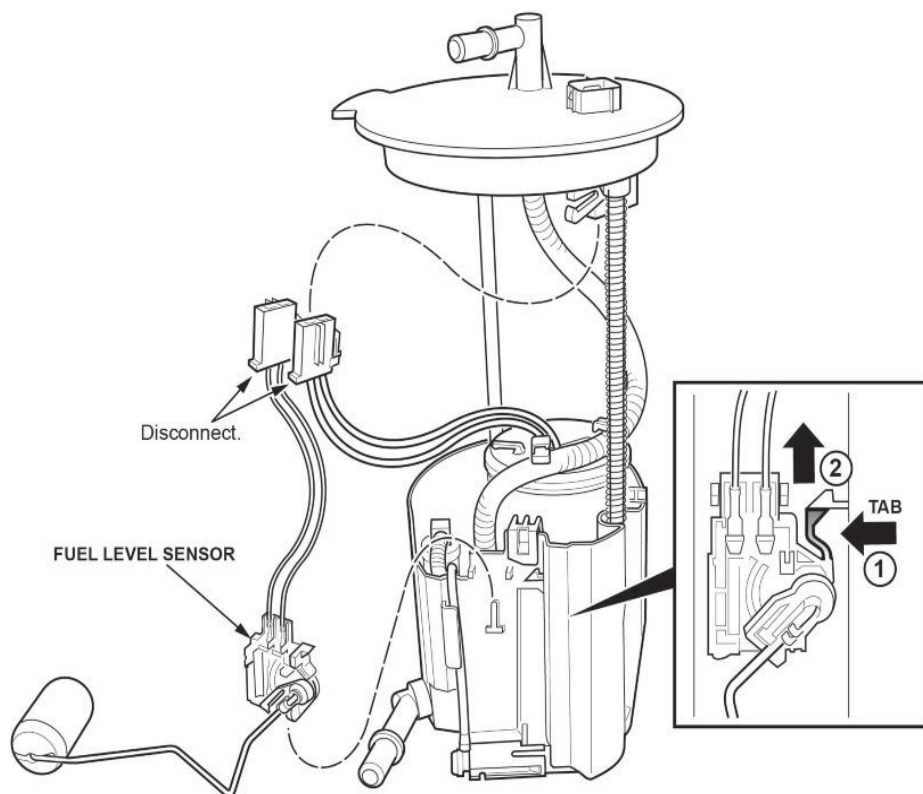

20. Disconnect the fuel level sensor harness and remove the fuel level sensor from the fuel tank unit.
21. Remove the E-rings, and discard them.
22. Use an O-ring pick to disconnect joint A inside the reservoir.
NOTE: If the O-ring remains inside the joint, use a flathead screwdriver wrapped in protective tape to remove it. Take care not to damage the O-ring seat section.

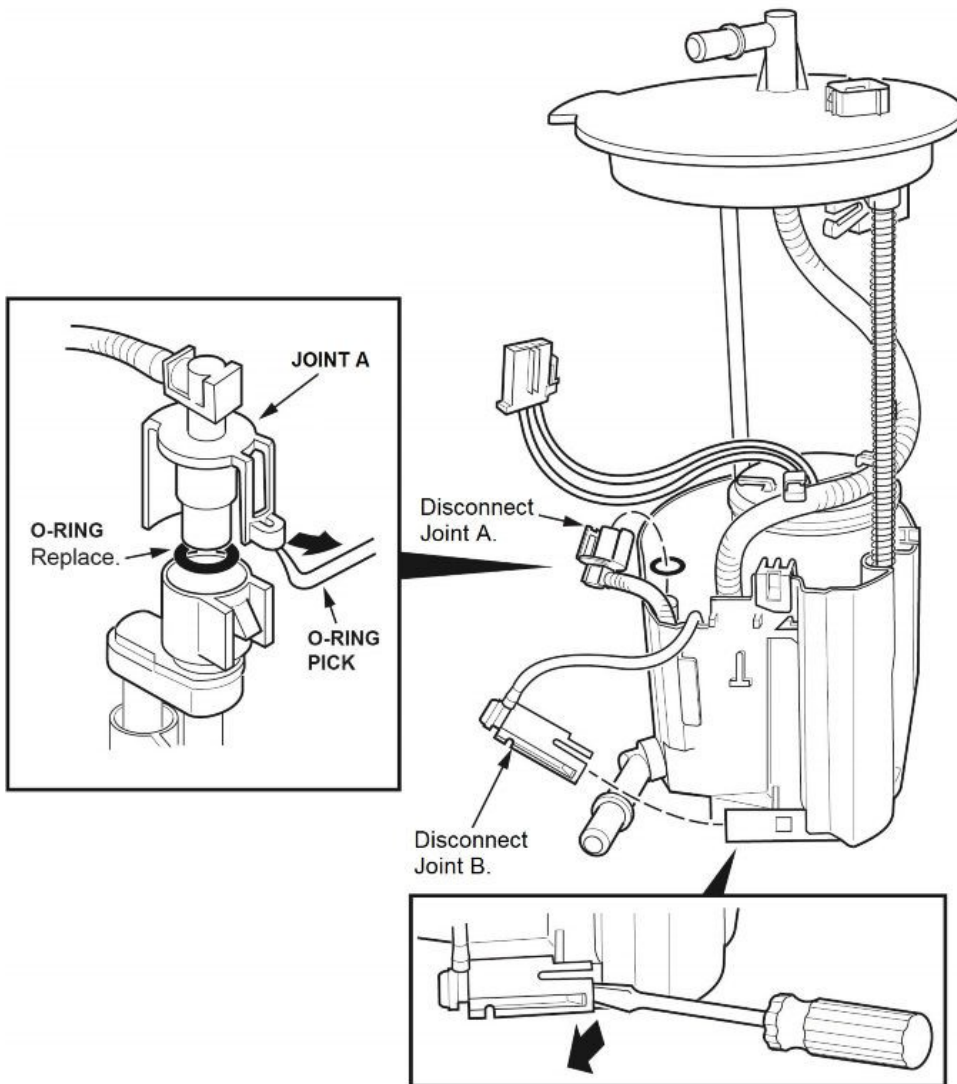


23. Disconnect joint B at the bottom of the reservoir.

24. Remove the fuel filter assembly from the reservoir by releasing the three clips.


NOTICE

Do not spread the clips too wide. Spreading them too wide may damage them.

NOTE: The spring may slide off the sliding shaft. Retain this spring. It will be used during assembly.

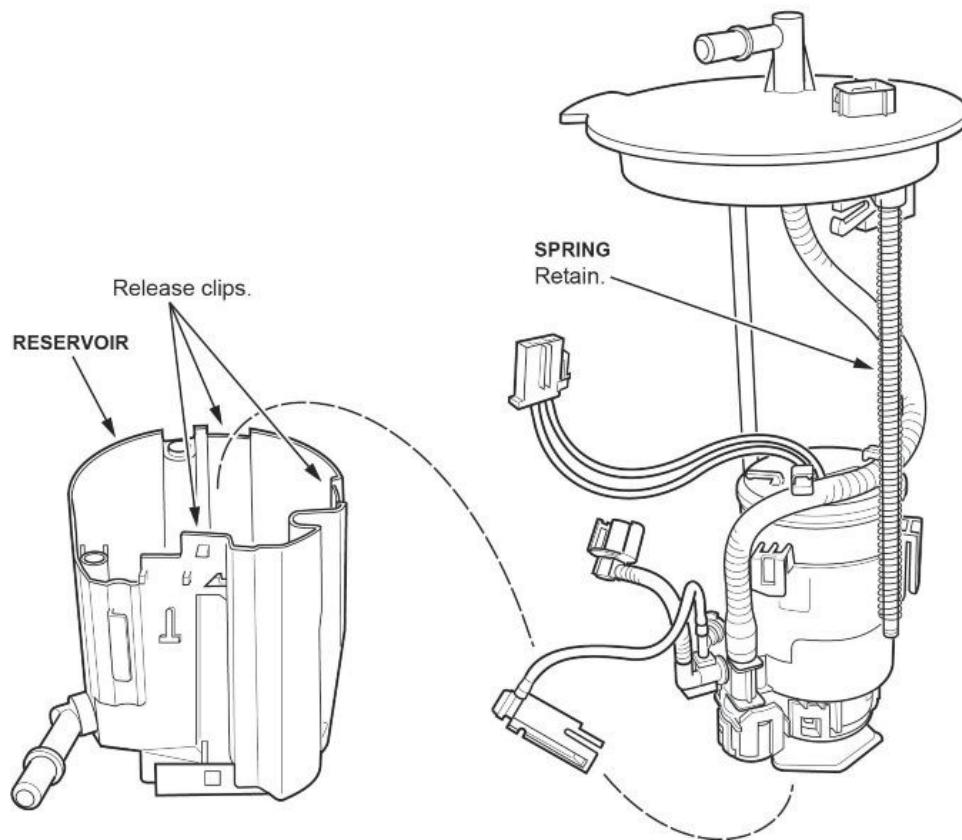


25. Release the three clips at the base of the fuel pump assembly and remove it from the fuel filter.

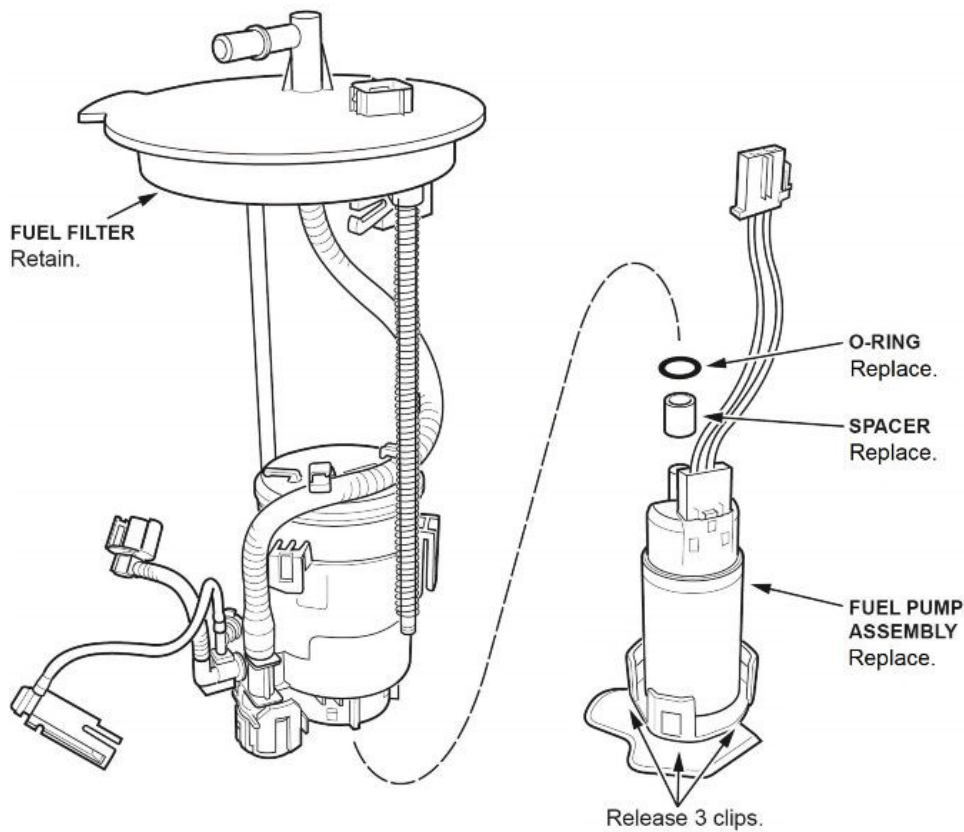

26. Pull the fuel pump assembly out of the fuel filter.

NOTE: If the O-ring remains on the fuel filter, use a flat-tip screwdriver wrapped in protective tape to remove it. Make sure not to damage the O-ring seat section.

27. Install the new spacer on the new fuel pump motor.

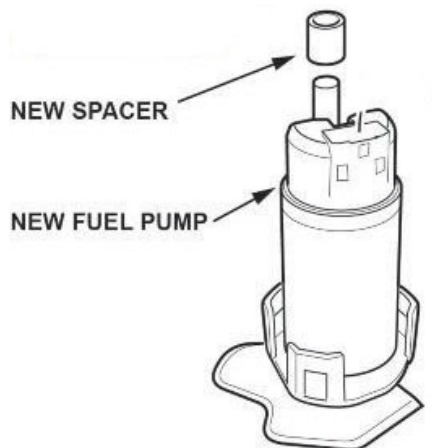

28. Install the new O-ring, then lubricate **ONLY** the outside edge of it, using clean engine oil.


NOTE: Do not pinch the O-ring during installation.

NEW O-RING

Lubricate after installing.
Do not lubricate the
inside of the o-ring.

NEW SPACER

NEW FUEL PUMP

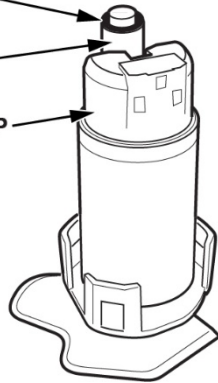

29. Install the new harness making sure the connection is secure and the connectors are firmly locked into place.


NEW O-RING

Lubricate after installing.
Do not lubricate the
inside of the o-ring.

NEW SPACER

NEW FUEL PUMP

NEW HARNESS

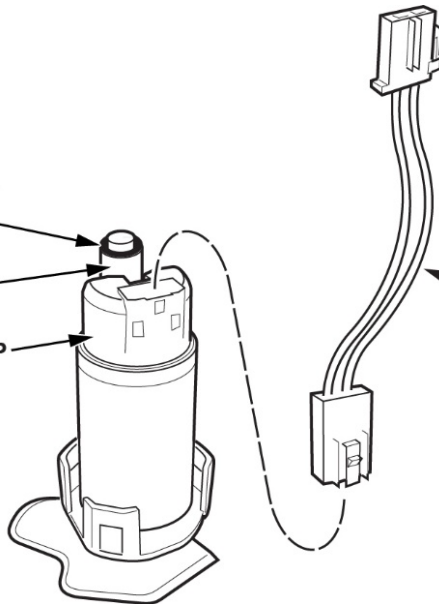

30. With the palm of your hands press the fuel pump into the suction fuel filter.

[▶ PLAY VIDEO](#)


Click here to view the video:

NOTICE

Make sure When pressing the fuel pump into the suction filter, make sure you do so with a single firm push. Failure to do so may damage the O-ring. If it is seated properly, you will hear a click. If you do not hear the click, remove all parts, and inspect the O-ring for damage. If the O-ring is damaged it must be replaced. Reassemble using the above process.

NOTE:


- When inserting the pump be careful not to break the suction filter.
- If the O-ring is damaged; replace it with a new one.
- After installing the fuel pump to the suction filter, make sure the clips are firmly attached to the new fuel pump.

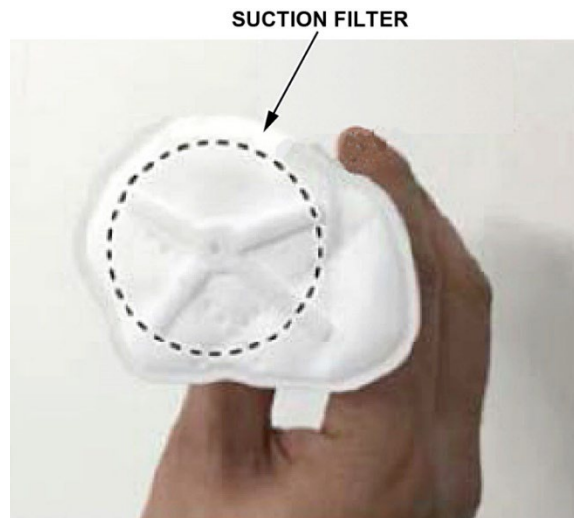

GOOD




NO GOOD

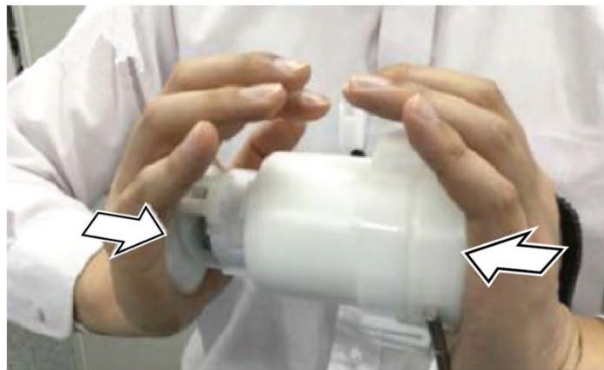

31. Install the fuel filter assembly to the reservoir.

NOTE:

- Insert the spring into the sliding shaft, and make sure it is lined up when installing the fuel filter.
- Make sure the fuel tube is routed **exactly** as shown in the photo taken before disassembly.
- Make sure the three clips are fully engaged.

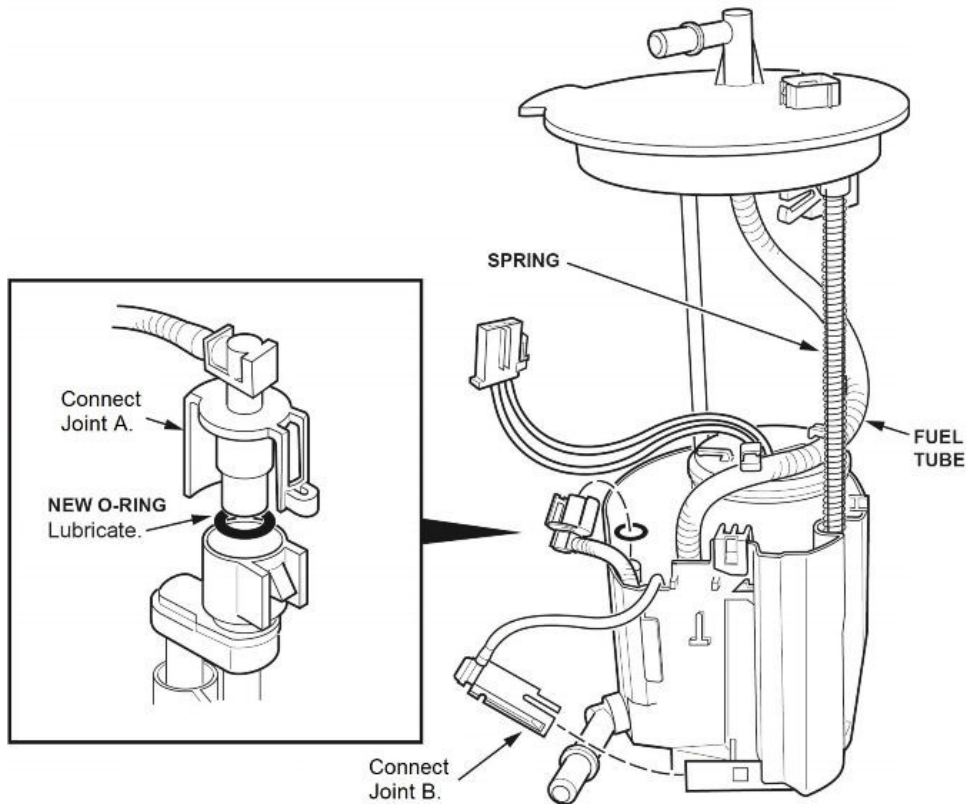

32. Install the new E-rings.

NOTE: After installation, make sure the E-rings can be rotated with your finger. If they cannot be rotated, the E-rings may not be fully seated or may be incorrectly installed.

33. Install the fuel level sensor to the reservoir. Make sure the lock is engaged and the connection is secure.

NOTICE

Do not to bend or twist the fuel level sensor arm excessively. This may damage the fuel level sensor or cause it to send inaccurate readings.

34. Install the wiring harness to the clamps.

NOTICE





Do not spread the clamps too wide. Spreading them too wide may damage them.

NOTE:


- Clip in the smaller harness wires followed by the larger wires.
- Make sure not to damage the wire harness.
- Make sure to route the wire harness **exactly** as shown in the photo taken before disassembly.

HARNESS ROUTING:

Clip in the smaller harness wires followed by the larger wires.

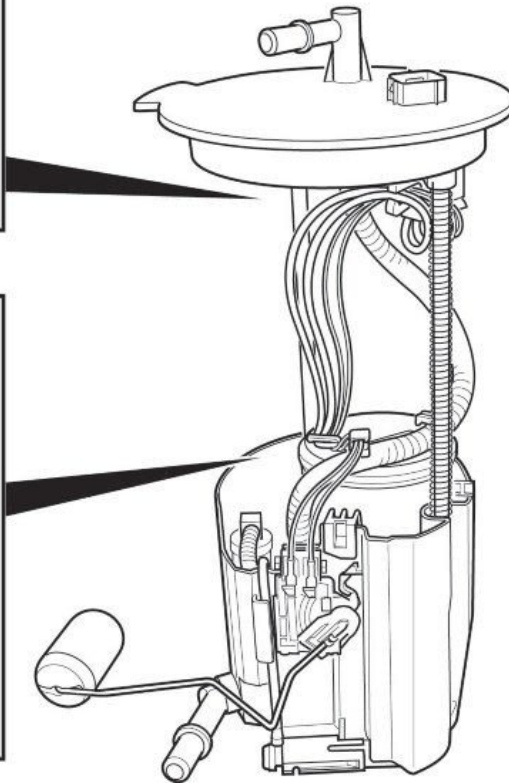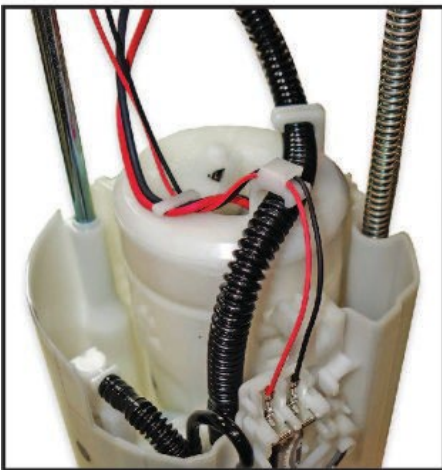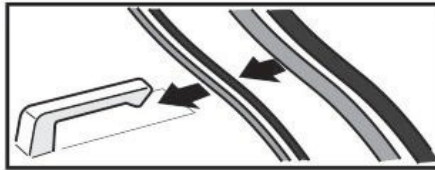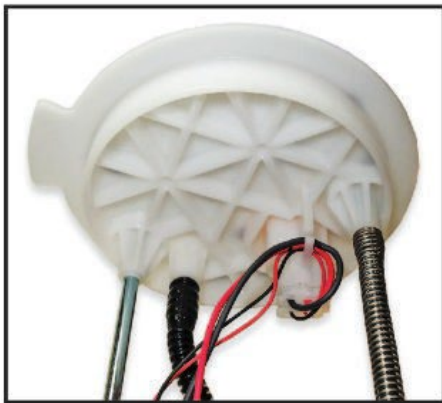


35. While compressing the fuel tank unit, make sure the movement is smooth and the fuel tube and wiring harness do not stretch, pinch, or bind.

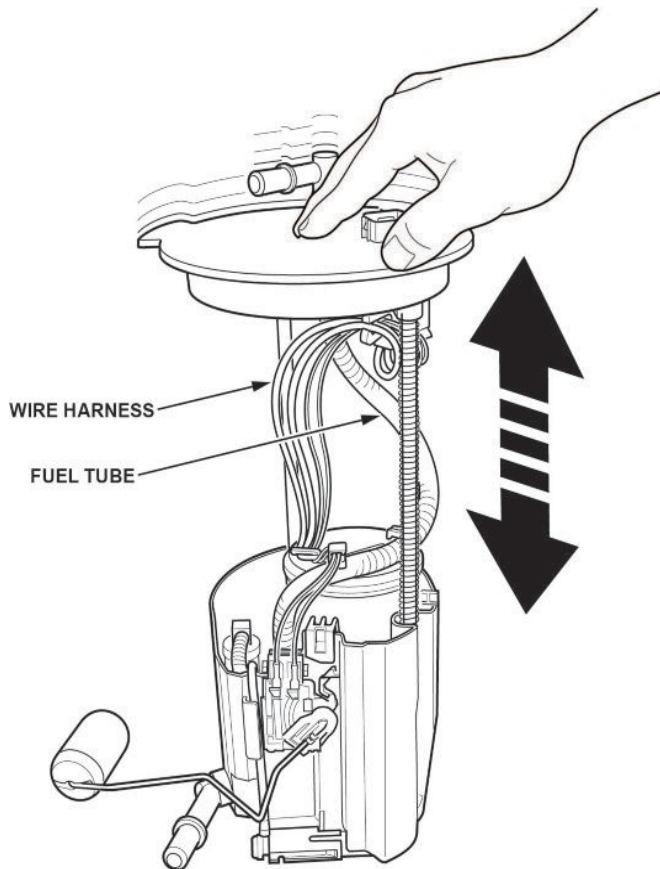

36. Line up the tab of the fuel tank unit as shown, and partially install the new fuel tank unit cam lock ring with a new O-ring.

NOTE:


- Be careful not to damage the O-ring.
- Do not coat the O-ring with any oil.

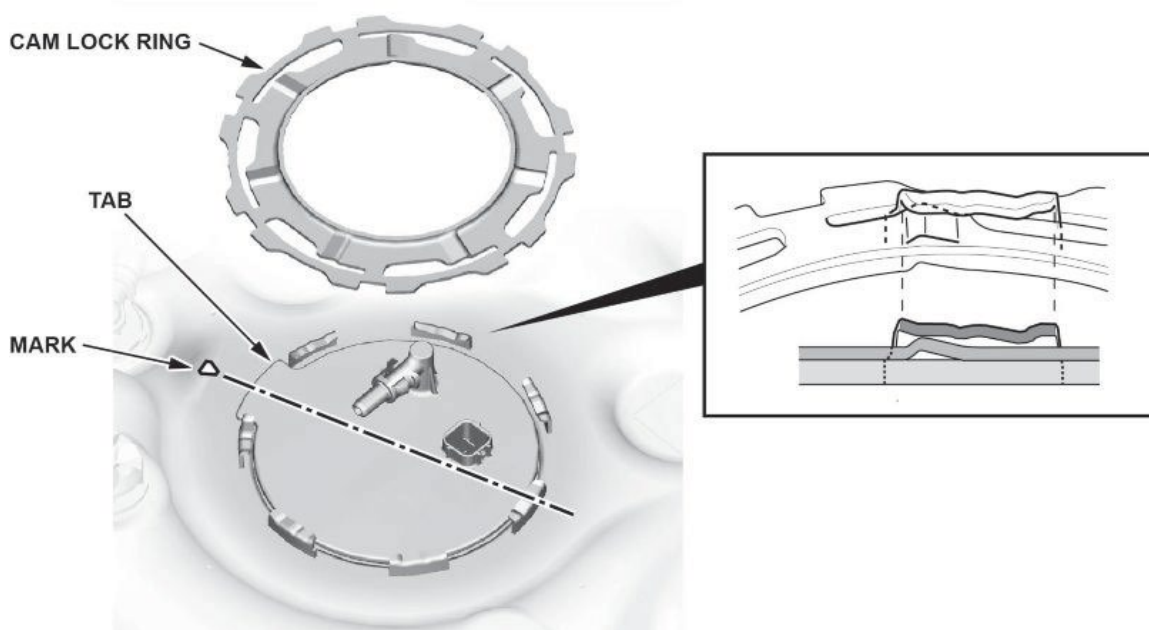

37. Turn the fuel tank unit cam lock ring by hand, and slide the fuel tank unit cam lock tabs to the positioning edge as shown.

NOTICE


Make sure the fuel cam lock ring is not floating. If the cam lock ring is not properly installed, the fuel tank can be damaged and will require replacement.

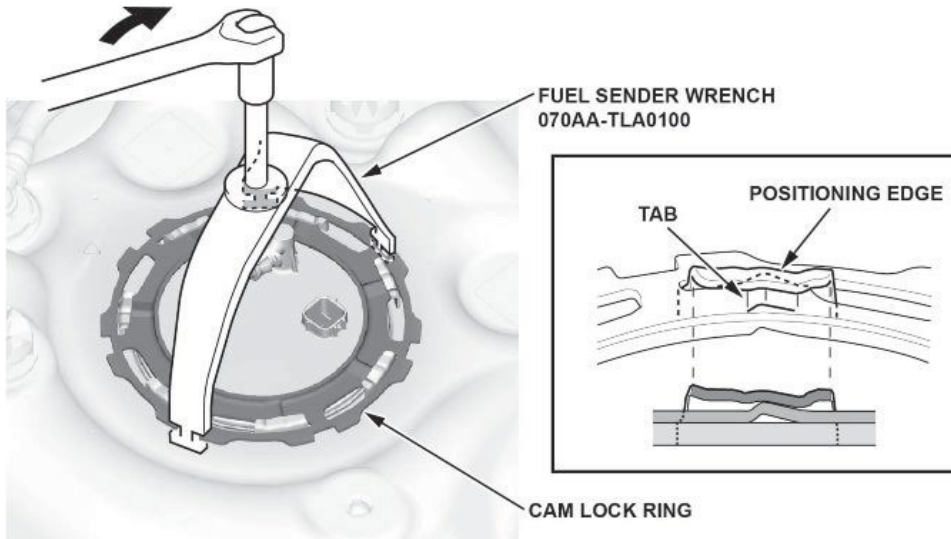


38. Tighten the fuel tank unit cam lock ring by turning it clockwise using the fuel sender wrench.

NOTE:


- Keep the fuel sender wrench from floating.
- Securely set the positioning edge of the fuel tank to tabs on the cam lock ring as shown.

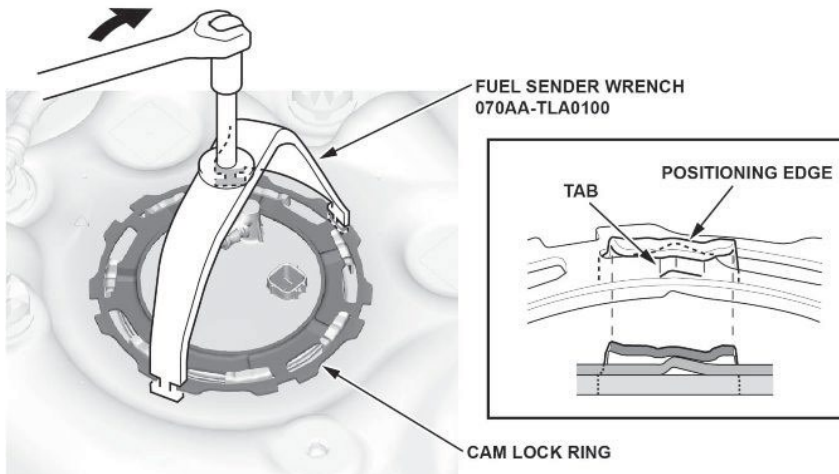

39. Remove the quick-connect fitting retainer from the fuel tank unit, then install a new retainer onto the quick-connect fitting.

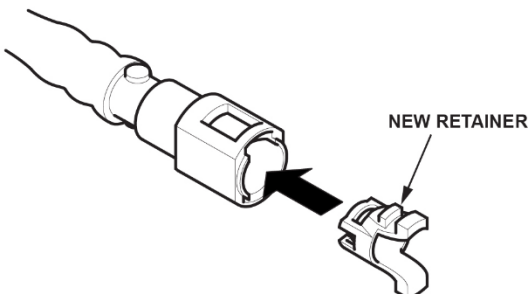

40. Connect the fuel line quick-connect fitting.

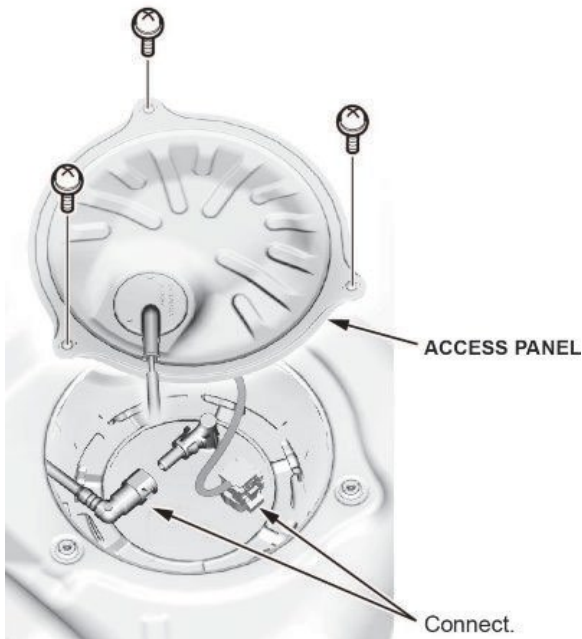

41. Connect the fuel tank unit connector.

42. Connect the 12-volt battery terminals.

43. Turn the ignition to ON, but do not turn the engine on. After the fuel pump runs for about **2 seconds**, the fuel line will be pressurized. Repeat this two or three times, then make sure there is no fuel leakage.

44. Install the fuel tank unit access panel.

45. Install the remaining parts in the reverse order of removal.

46. Clear all DTCs using an i-HDS.

47. *California residents only:* Fill out a Vehicle Emissions Recall – Proof of Correction certificate, and use **MGF** as the recall number. Have the service consultant give the certificate to your client, and advise him or her to keep it as proof that the recall was completed. Your client will need to submit this certificate to the DMV only if the DMV requests it. If you need more certificates, use reorder number **Y0657**.

Vehicle Emission Recall - Proof of Correction				
License Number	Make	Year Model	Body Type	Vehicle Identification Number
Manufacturer				Recall Number MGF
The above described vehicle has been repaired, modified and/or equipped with emission-related devices to meet applicable California Emission Control Laws.				
Dealer's Name		Address, City, State and Zip		
Date		Dealership's Authorized Signature		
		X		
Return this certificate to DMV only when required - otherwise retain for your records.				

Y0657 ACL 24832 (0212)