


V5G5-EU64B(L)

# Telluride HEV

Owner's manual leaflet

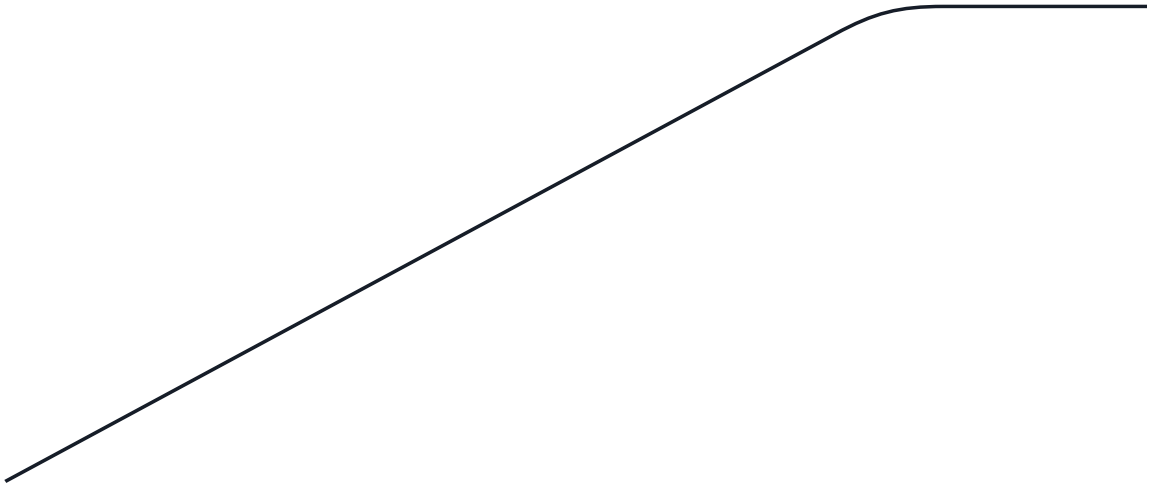

This leaflet contains revised information for Rear Seat adjustment.  
Please keep this leaflet with the Owner's manual.



Movement that inspires

## Seats

Rear seat (7 passenger)



OLQ2A065002\_5

\* The actual features may differ from the illustration.

- (1) Seatback angle
- (2) Forward and backward
- (3) Walk-in switch
- (4) Relaxation comfort seat
- (5) 3rd row seatback angle strap
- (6) 3rd row seatback folding strap

## Rear seat (8 passenger)



OLQ2AH066011\_6

\* The actual features may differ from the illustration.

- (1) Seatback angle
- (2) Forward and backward
- (3) Armrest
- (4) 2nd row emergency folding strap
- (5) 3rd row seatback angle strap
- (6) 3rd row seatback folding strap
- (7) Walk-in switch

### **WARNING**

#### **Loose objects**

Loose objects in the driver's foot area could interfere with the operation of the foot pedals, possibly causing an accident. Do not place anything under the front seats.

**⚠ CAUTION**

**Raising a seat upright**

Do not press the release lever on a manual seatback without holding and controlling the seatback. The seatback will spring upright, possibly impacting you or other passengers.

---

**⚠ WARNING**

**Driver responsibility for passengers**



OLQ2A065083

The driver must advise the passengers to keep seatbacks in upright positions whenever the vehicle is in motion. If a seat is reclined during an accident, the restraint system's ability to restrain the passenger is greatly reduced.

---

**⚠ WARNING**

**Seat cushion**

Occupants should never sit on aftermarket seat cushions. The passenger Occupant Detection System (ODS) may not operate properly, or the passenger's hips may slide under the lap portion of the seat belt during an accident or a sudden stop.

---

**⚠ WARNING**

**Driver's seat**

- Never attempt to adjust the seat while the vehicle is moving. This could result in loss of control of your vehicle.
- Do not allow anything to interfere with the normal position of the seatback. For example, storing heavy items against the seatback could result in serious or fatal injury in a sudden stop or collision.

- Sit as far back as possible from the steering wheel while still maintaining comfortable control of your Kia. A distance of at least 10 inches (25 cm) from your chest to the steering wheel is recommended. Failure to do so can result in air bag inflation injuries to the driver.
- 

 **WARNING**

**Rear seatbacks**

Always lock the rear seatback before driving. Failure to do so could result in passengers or objects being thrown forward, injuring occupants.

---

 **WARNING**

**Unexpected seat movement**

After adjusting a manual seat, always check that it is locked by shifting your weight to the front and to the back. Sudden or unexpected movement of the driver's seat could cause you to lose control of the vehicle.

---

 **WARNING**

**Seat adjustment**

- Do not adjust the seat while wearing seat belts. Moving the seat forward may put strong pressure on the abdomen.
  - Do not place your hand near the seat bottom or seat track while adjusting the seat. Your hand could get caught in the seat mechanism.
- 

 **WARNING**

**Luggage and cargo**

Do not stack or pile luggage or cargo higher than the seatback in the cargo area. In an accident, the cargo could strike and injure a passenger. If objects are large, heavy, or must be piled, secure them in the cargo area.

---

 **WARNING**

**Cargo area**

Do not allow passengers to ride in the cargo area under any circumstance. The cargo area is solely for the purpose of transporting luggage or cargo.

---

 **CAUTION**

**Small objects**

Use extreme caution when picking up small objects trapped under the seats or between the seat and the center console. Your hands might be cut or injured by the sharp edges of the seat mechanism.

---

 **NOTE**

**Precautions with seat covers**

Use caution when working on the seat cover. A short circuit or disconnection may occur, which could cause an abnormal noise or damage the ventilation system.

---


 **WARNING**

**Seat short circuit risk**

Be aware of wires or air vents when placing a seat cover or covering the seat with plastic. Short circuits and blocked vents can cause damage and could lead to fire.

---

## Rear seat adjustment for manual seat Forward and backward (2nd row seat)

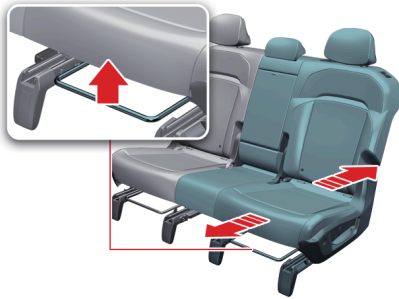

OLQ2A065073

To move the seat forward or backward:

1. Pull the seat slide adjustment lever up and hold it.
2. Slide the seat to the position you desire.
3. Release the lever and make sure the seat is locked in place.

Adjust the seat before driving. Make sure the seat is locked securely by trying to move forward and backward without using the lever. If the seat moves, it is not locked properly.


## Seatback angle

2nd row seat



OLQ2A065074

3rd row seat

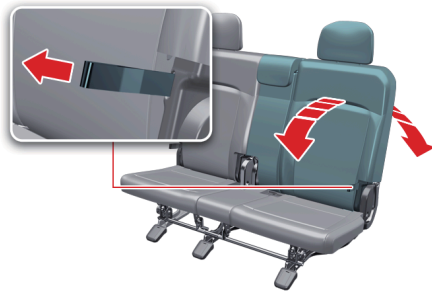

OLQ2A065105

To recline the seatback:

1. Lift the seatback recliner lever (for 2nd row) or strap (for 3rd row).
2. Hold the lever (for 2nd row) or strap (for 3rd row) and adjust the seatback to the desired position.

3. Release the lever (for 2nd row) or strap (for 3rd row) and make sure the seatback is locked in place.

The lever must return to its original position for the seatback to lock.

## Folding the rear seat

### 2nd row seat folding

The rear seatbacks can be folded to facilitate carrying long items or to increase the luggage capacity of the vehicle.

#### **WARNING**

Never attempt to fold the seat when there are passengers, animals, or other obstructions in the 2nd or 3rd row seats or rear seating area, or while an occupant is entering or exiting the vehicle. Failure to do so increases the risk of serious injury or death. Children occupying the 2nd or 3rd row seats or rear seating area should be supervised at all times.

#### **Folded Seatback**

Do not sit on folded or not fully unfolded seatbacks. The purpose of the fold-down rear seatbacks is to allow you to carry longer objects that could not otherwise be accommodated.

- Never allow a passenger to sit on top of the folded down seatback while the car is moving. This is not a proper seating position since the seat has important crash protection features and seat belts are not available in this seat configuration.
- To reduce the risk of injury caused by sliding cargo within the passenger compartment of the vehicle, objects carried on the folded down seatback should not extend higher than the top of the front seats.

- 
1. Insert the rear seat belt buckle in the pocket between the rear seatback and cushion, and insert the rear seat belt webbing in the guide to prevent the seat belt from being damaged.

2nd row seat



OLQ2A065009

### 3rd row seat



2. Set the front seatback to the upright position and, if necessary, slide the front seat forward.
3. Lower the rear headrests to the lowest position.


### **WARNING**

#### **Objects**

Objects carried on the folded down seatback should not extend higher than top of the front seatbacks. Cargo that extends higher than the top of the front seatbacks could slide forward and cause injury or damage during sudden stops.


4. Pull the seatback folding lever, then fold the seat toward the front of the vehicle.

### 2nd row seat

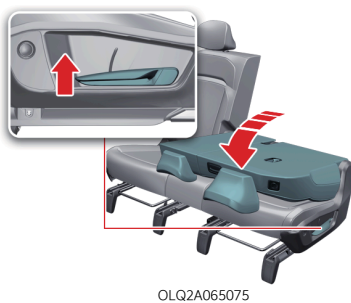

5. To use the rear seat, lift and pull the seatback backward by pulling on the folding lever.  
Pull the seatback firmly until it clicks into place.  
Make sure the seatback is locked in place.


2nd row seat

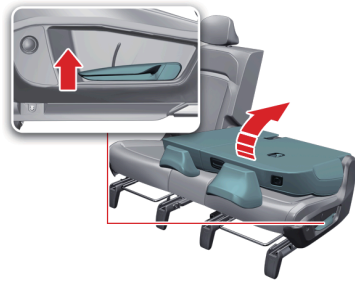

OLQ2A065076

6. Return the rear seat belt to the proper position.

### 2nd row seat folding (from the luggage room)

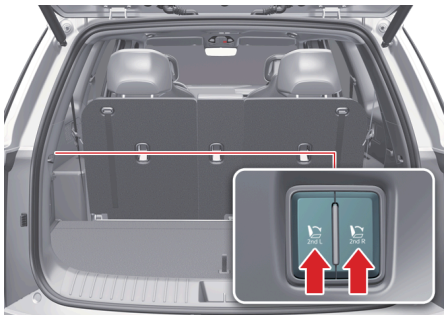

OLQ2AH066008

The 2nd row seat folding switch is located on the left side in the luggage room. If you press the left switch, the left side seatback and center seatback will fold. If you press the right switch, the right side seatback will fold.

### **⚠ WARNING**

Do not fold the rear seatbacks down until the driver's seat is positioned properly. Failure to heed this warning could cause the driver to operate the vehicle with the seat out of position, which increases the risk of bodily injury in a sudden stop or collision.

 **WARNING****Raising the seatback upright**

When you return the seatback to its upright position, hold the seatback and return it slowly. If the seatback is returned without holding it, the back of the seat could spring forward, striking the driver or passengers and resulting in injury.

---

 **WARNING**

Never attempt to fold the seat when there are passengers, animals, or other obstructions in the 2nd or 3rd row seats or rear seating area, or while an occupant is entering or exiting the vehicle. Failure to do so increases the risk of serious injury or death. Children occupying the 2nd or 3rd row seats or rear seating area should be supervised at all times.

---

 **WARNING****Rear seatback**

To ensure maximum protection in the event of an accident or sudden stop, when returning the rear seat to the upright position:

- Be careful not to damage the seat belt webbing or buckle.
  - Do not allow the rear seat to pinch or catch the seat belt webbing or buckle.
  - Ensure the seatback is completely locked into its upright position by pushing on the top of the seatback.
- 

 **NOTE****Protecting rear seat belt buckles**

When you fold the rear seatback, insert the buckle between the rear seatback and cushion. Doing so can prevent the rear seatback from damaging the buckle.

---

 **TIP****Rear seat belts**

When returning the rear seatbacks to the upright position, remember to return the rear shoulder belts to their proper position.

---

 **WARNING****Cargo**

Always secure cargo to prevent it from being thrown about the vehicle in a collision and causing injury to the vehicle occupants. Do not place objects in the rear seats, since they cannot be properly secured and may hit the front seat occupants in a collision.

---

**⚠ WARNING**

**Cargo loading**

Make sure the engine is OFF, the shift lever is set to P (Park), and the parking brake is applied when loading or unloading cargo. Failure to take these steps may allow the vehicle to move if the shift lever is inadvertently set to a different gear.

---

**3rd row seat folding**



To fold the 3rd row seat, pull the seatback folding strap, then fold the seat forward the front of the vehicle.

To unfold the 3rd row seat, lift the seatback backward by pulling on the folding strap. Pull the seatback firmly until it clicks into place. Make sure the seatback is locked in place.

**Rear seat adjustment for power seat**

**Forward and backward (2nd row seat)**



To move the seat forward or backward:

1. Push the control switch forward or backward to move the seat to desired position.
2. Release the switch once the seat reaches the desired position.

### **Seatback angle (2nd row seat)**



OLQ2AH066003

To recline the seatback:

1. Push the control switch forward or backward to move the seatback to desired angle.
2. Release the switch once the seat reaches the desired position.

## Walk-in seat (2nd row seat)

To get in or out of the 3rd row seat:


1. Route the seat belt webbing through the 2nd row seat belt guide clip. Insert the seat belt and tighten the belt webbing by pulling it up.



OLQ2A065009

2. Press and hold the switch (1) on the top of the 2nd row seat or the switch (2) on the bottom of the 2nd row seat to move the seat to the desired position.

for 7 passenger

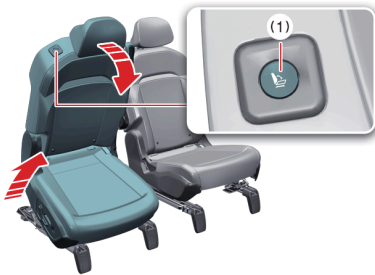

OLQ2AH066012



OLQ2AH066013


for 8 passenger (right side seat)



OLQ2AH066014\_2

When you press and hold the walk-in switch at the top of the 2nd row seat seat-back or on the outside of the seat, both the seat cushion and seatback tilt forward and the seat moves.

for 8 passenger (center and left and side seat)

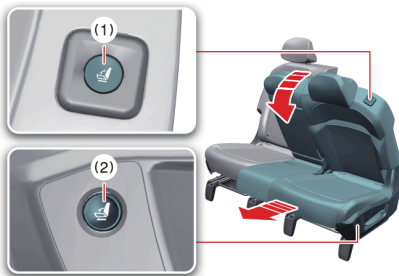

OLQ2AH066015\_2

When you press and hold the walk-in switch at the top of the 2nd row seat seat-back or on the outside of the seat, the seat slightly moves forwards.

3. Release the walk-in switch once the seat reaches the desired position.

**⚠ WARNING**

Never attempt to adjust using the 2nd row seat walk-in switch while the vehicle is moving, as the seat may suddenly move and cause injury to the passenger.

4. After getting in or out, press the switch (1) or (2).
5. Push the forward/backward adjustment switch and seatback angle adjustment switch backward to move location the proper seating position.

**⚠ WARNING**

Do not press the switch (1) or (2) when the 2nd row seats are occupied or while an occupant is entering or exiting the vehicle. Failure to do so increases the risk

of serious injury or death. Children occupying the 2nd row should be supervised at all times. After use, adjust the 2nd row seatback angle to proper seating position.

**ⓘ TIP**

The walk-in feature cannot be used if a Child Restraint System is installed or if there is a passenger in the seat. To use the feature, first remove the Child Restraint System from the seat.

### Emergency folding strap (for 8 passenger)

The 2nd row seat can also be unlocked by pulling the strap located behind the right side of 2nd row seat seatback.



OLQ2AH066007

### Integrated Rear Seat Control

This feature is used to provide comfort to 2nd row passengers by adjusting seat settings, such as ventilation, heating, position, and tilt.

To turn on this feature, select **Home > Seats** in the infotainment system settings. Change specific settings for the 2nd row seats, such as ventilation, heating, position, and tilt.

For more information, refer to the QR code in the quick guide of the infotainment system to access the web manual and check the updated information.

## Folding the rear seat

The rear seatbacks can be folded to facilitate carrying long items or to increase the luggage capacity of the vehicle.

### **WARNING**

Never attempt to fold the seat when there are passengers, animals, or other obstructions in the 2nd or 3rd row seats or rear seating area, or while an occupant is entering or exiting the vehicle. Failure to do so increases the risk of serious injury or death. Children occupying the 2nd or 3rd row seats or rear seating area should be supervised at all times.

### **Folded Seatback**

Do not sit on folded or not fully unfolded seatbacks. The purpose of the fold-down rear seatbacks is to allow you to carry longer objects that could not otherwise be accommodated.

- Never allow a passenger to sit on top of the folded or not fully unfolded seatback while the car is moving. This is not a proper seating position since the seat has important crash protection features and seat belts are not available in this seat configuration.
- To reduce the risk of injury caused by sliding cargo within the passenger compartment of the vehicle, objects carried on the folded seatback should not extend higher than the top of the front seats.

- 
1. Insert the rear seat belt buckle in the pocket between the rear seatback and cushion, and insert the rear seat belt webbing in the guide to prevent the seat belt from being damaged.
    - With the gear in P (Park), the seat belt unfastened, and the door open, fold the seatback forwards as far as possible, and pull the upper area of the seatback angle adjustment switch forwards until the seatback is fully folded.
    - If you stop pulling the seatback angle adjustment switch while the seatback is folding or unfolding, the seatback stops moving. To resume, pull the switch again.


---

2nd row seat

---



3rd row seat

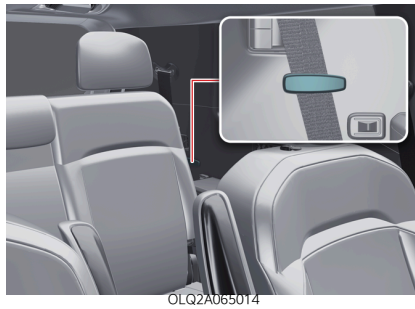

2. Set the front seatback to the upright position and, if necessary, slide the front seat forward.
3. Lower the rear headrests to the lowest position.

**⚠ WARNING**

**Objects**

Objects carried on the folded down seatback should not extend higher than top of the front seatbacks. Cargo that extends higher than the top of the front seatbacks could slide forward and cause injury or damage during sudden stops.

4. Push the seatback angle adjustment switch forward to move the 2nd row seatback forward.



OLQ2AH066004

5. Release the switch once the 2nd row seatback reaches the frontmost seating position.
6. Push the switch forward to move the 2nd row seat to the folded position.



OLQ2AH066005

7. Release the switch once the 2nd row seatback reaches the folded position.

### **Unfolding the rear seat**

1. To use the 2nd row seat, push the seatback angle adjustment switch backward.



OLQ2AH066006

**! TIP**

If you stop pulling the switch while the seatback is folding or unfolding, the seatback stops moving. To resume, pull the switch again.

---

2. Adjust the seatback angle switch to the desired position. When the seatback reaches the upright position, operation will automatically stop.

**2nd row seat folding (from the luggage room)**



The 2nd row seat folding/unfolding switch is located on the left side in the luggage room.

If you press and hold the upper switch, the left side seatback and center seatback will fold.

If you press and hold the lower switch, the right side seatback will fold.

When returning to the original position, raise the seatback by pressing the seatback folding/unfolding switch located on the left side of the luggage compartment.

**! TIP**

Functions may be limited when using functions related to the 2nd row (relaxation seat, walk-in seat, seat folding) in a location where the driver's seat and the 2nd row seat interfere.

---

**! NOTE**

If the seat is operated more than 5 times without resting, the seat motor may be overtaxed. In this case, the seat will not operate when the button is pressed to prevent overheating. Wait for about 1 minute or more before operating.

---

 **WARNING**

Do not fold the rear seatbacks down until the driver's seat is positioned properly. Failure to heed this warning could cause the driver to operate the vehicle with the seat out of position, which increases the risk of bodily injury in a sudden stop or collision.

---

 **WARNING**

**Raising the seatback upright**

When you return the seatback to its upright position, hold the seatback and return it slowly. If the seatback is returned without holding it, the back of the seat could spring forward, striking the driver or passengers and resulting in injury.

---

 **WARNING**

Never attempt to fold the seat when there are passengers, animals, or other obstructions in the 2nd or 3rd row seats or rear seating area, or while an occupant is entering or exiting the vehicle. Failure to do so increases the risk of serious injury or death. Children occupying the 2nd or 3rd row seats or rear seating area should be supervised at all times.

---

 **WARNING**

**Rear seatback**

To ensure maximum protection in the event of an accident or sudden stop, when returning the rear seat to the upright position:

- Be careful not to damage the seat belt webbing or buckle.
  - Do not allow the rear seat to pinch or catch the seat belt webbing or buckle.
  - Ensure the seatback is completely locked into its upright position by pushing on the top of the seatback.
- 

 **NOTE**

**Protecting rear seat belt buckles**

When you fold the rear seatback, insert the buckle between the rear seatback and cushion. Doing so can prevent the rear seatback from damaging the buckle.

---

 **TIP**

**Rear seat belts**

When returning the rear seatbacks to the upright position, remember to return the rear shoulder belts to their proper position.

---

## **WARNING**

### **Cargo**

Always secure cargo to prevent it from being thrown about the vehicle in a collision and causing injury to the vehicle occupants. Do not place objects in the rear seats, since they cannot be properly secured and may hit the front seat occupants in a collision.

---

## **WARNING**


### **Cargo loading**

Make sure the engine is OFF, the shift lever is set to P (Park), and the parking brake is applied when loading or unloading cargo. Failure to take these steps may allow the vehicle to move if the shift lever is inadvertently set to a different gear.

---

## **Relaxation comfort seat**

Relaxation comfort seats distribute body pressure and concentrated weight on specific body parts that occur while sitting in the same position for a long period of time. The seat relieves fatigue and discomfort by providing the optimal sit position.

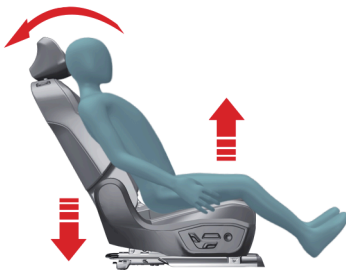

OLQ2A065110

## **WARNING**

- Do not use the relaxation comfort seat while the vehicle is moving. Using the relaxation comfort seat could increase the risk of injuries in the event of a collision or sudden stop.
  - Be careful not to get your body or objects caught while the relaxation comfort seat is operating.
  - As the risk of injury may increase in the event of a collision with the relaxation comfort seat is being operated, use it only when parked/stopped or while resting.
-

## CAUTION

Check the occupants or other cargo in the back seat before operating the relaxation comfort seat. Operate after securing sufficient distance between the front and rear seats.

## Operating relaxation comfort seat



- (1) Relaxation comfort seat return switch
- (2) Relaxation comfort seat switch

OLQ2A065069

## Operation

1. Press the rear portion of the relaxation comfort seat switch (2) to move the seat to the desired position.
2. Release the switch once the seat reaches the desired position.
3. After operating the relaxation comfort seat, you can adjust it for a more comfortable posture using the seat adjustment switch.

## TIP

Depending on the driver's seat position, the 2nd row relaxation comfort seat behind the driver's seat may not operate. Move the driver's seat forward.

## Returning relaxation comfort seat

### Operation

- While the seat is in the relaxation comfort seat position, press the front portion of the relaxation comfort seat switch (1) to return the seat to the pre-saved seat position.

## NOTE

- Do not operate both switches at the same time. It may damage the relaxation comfort seat system.
- If you pull the emergency seat folding strap located at the back, the operation of the relaxation comfort seat function and the dynamic body care function are disabled.

## ! TIP

To save the current passenger seat position as the return position, adjust the passenger seat to the desired position, then press the front side (1) of the relaxation switch located at the bottom of the seat cushion 3 times within a 2-second period. This will save the current position as the return position.

### Resetting relaxation comfort seat



- (1) Forward/backward adjustment switch
- (2) Seatback angle adjustment switch

OLQ2A065112

### Operation

1. Open the passenger's side door when the vehicle is stopped and the vehicle in ON position.
2. Move the seat forward as far as possible, and raise the seatback angle as forward as possible by using the driver's seat forward/backward adjustment switch and seatback angle adjustment switch.
3. Press the passenger's seatback angle adjustment switch and push the front portion of the passenger's seat forward/backward adjustment switch (the direction to move the seat position forward) at the same time for approximately 2 seconds.

### Non-operating condition(s)

- When the passenger's side seat adjustment switch is pressed
- When the vehicle speed is above 3 mph (5 km/h)
- When the passenger's side door is closed

## ! TIP

- If initialization stops during initialization, start initialization again. If initialization is interrupted, there may be restrictions on the operation of the relaxation function.
- Make sure there are no obstacles around the seat before initialization.

## ! TIP

After initialization, adjust the seat to fit the occupant.