



File In Section: Service Bulletin

Bulletin No.: PI0339

Date: December, 2010

## PRELIMINARY INFORMATION

**Subject:** Instrument Panel Cluster (IPC) Warning Lamps and/or MIL are Illuminated, Diesel Exhaust Fluid (DEF) Message Displayed, Various DTCs Set, Transmission May Not Shift or Defaults to Second Gear (Inspect Wiring Harnesses For Chafing, Connectors Not Fully Seated, and Backed Out or Damaged Terminals, Repair as Needed)

**Models:** 2011 Chevrolet Silverado 2500HD, 3500HD  
 2011 GMC Sierra 2500HD, 3500HD  
 Equipped with 6.6L Duramax™ Diesel Engine RPO LML or LGH

The following information might be helpful if the vehicle exhibits the symptoms described in this PI.

### Condition/Concern

Some customers may comment on any of the following conditions:

- A driver information center (DIC) message is displayed.
- Instrument panel cluster (IPC) warning lamps are illuminated.
- One or more diesel exhaust fluid (DEF) warning messages are displayed.
- The malfunction indicator lamp (MIL) is illuminated.
- The transmission may not shift or defaults to second gear.
- The technician may observe on a scan tool one or more of the following DTCs set as Current or in History:
  - DTC P0101 Mass Air Flow (MAF) Sensor Performance
  - DTC P0657 Solenoid High Control Circuit Group 1
  - DTC P0658 Solenoid High Control Circuit Group 1 Low Voltage
  - DTC P0706 Transmission Range Sensor Circuit Performance
  - DTC P0708 Transmission Range Switch Circuit High Voltage
  - DTC P0712 Transmission Fluid Temperature (TFT) Sensor Circuit Low Voltage
  - DTC P0713 Transmission Fluid Temperature (TFT) Sensor Circuit High Voltage
  - DTC P0717 Input Speed Sensor Circuit Low Voltage
  - DTC P0722 Output Speed Sensor Circuit Low Voltage
  - DTC P0751 Shift Solenoid (SS) 1 Valve Performance - Stuck Off
  - DTC P0752 Shift Solenoid (SS) 1 Valve Performance - Stuck On
  - DTC P0756 Shift Solenoid (SS) 2 Valve Performance - Stuck Off
  - DTC P0757 Shift Solenoid (SS) 2 Valve Performance - Stuck On
  - DTC P0761 Shift Solenoid (SS) 3 Valve Performance - Stuck Off
  - DTC P0762 Shift Solenoid (SS) 3 Valve Performance - Stuck On
  - DTC P0842 Transmission Fluid Pressure (TFP) Switch 1 Circuit Low Voltage
  - DTC P0843 Transmission Pressure Switch 1 Circuit High Voltage
  - DTC P0847 Transmission Fluid Pressure (TFP) Switch 2 Circuit Low Voltage
  - DTC P0848 Transmission Pressure Switch 2 Circuit High Voltage

- DTC P0872 Transmission Fluid Pressure (TFP) Switch 3 Circuit Low Voltage
- DTC P0873 Transmission Pressure Switch 3 Circuit High Voltage
- DTC P0877 Transmission Fluid Pressure (TFP) Switch 4 Circuit Low Voltage
- DTC P0878 Transmission Fluid Pressure (TFP) Switch 4 Circuit High Voltage
- DTC P0960 Main Modulation/Line Pressure Control (PC) Solenoid Control Circuit Open
- DTC P0962 Main Modulation/Line Pressure Control (PC) Solenoid Control Circuit Low Voltage
- DTC P0964 Pressure Control (PC) Solenoid 2 Control Circuit Open
- DTC P0966 Pressure Control (PC) Solenoid 2 Control Circuit Low Voltage
- DTC P0972 Shift Solenoid (SS) 1 Control Circuit Open
- DTC P0973 Shift Solenoid (SS) 1 Control Circuit Low Voltage
- DTC P0975 Shift Solenoid (SS) 2 Control Circuit Open
- DTC P0976 Shift Solenoid (SS) 2 Control Circuit Low Voltage
- DTC P0979 Shift Solenoid (SS) 3 Control Circuit Low Voltage
- DTC P2669 Solenoid High Control Circuit Group 2
- DTC P2670 Solenoid High Control Circuit Group 2 Low Voltage
- DTC P2727 Pressure Control (PC) Solenoid 1 Open
- DTC P2729 Pressure Control (PC) Solenoid 1 Control Circuit Low Voltage
- DTC P2761 Torque Converter Clutch (TCC) Pressure Control (PC) Solenoid Control Circuit
- DTC P2764 Torque Converter Clutch (TCC) Pressure Control (PC) Solenoid Control Circuit Low Voltage
- DTC P2453 Diesel Particulate Filter (DPF) Differential Pressure Sensor Performance
- DTC P2454 Diesel Particulate Filter Differential Pressure Sensor Circuit Low Voltage
- DTC P11DB NOx Sensor 1 Current Performance
- DTC P11DC NOx Sensor 2 Current Performance
- DTC P20BB Reductant Heater 1 Control Circuit Low Voltage
- DTC P20BD Reductant Heater 2 Control Circuit
- DTC P20BF Reductant Heater 2 Control Circuit Low Voltage
- DTC P20CC Exhaust Aftertreatment Fuel Injector Performance
- DTC P20C3 Reductant Heater 3 Control Circuit Low Voltage
- DTC P22A7 NOx Sensor 2 Heater Feedback Performance
- DTC P242C Exhaust Gas Temperature Sensor 3 Circuit Low Voltage
- DTC P246F Exhaust Gas Temperature Sensor 4 Performance
- DTC U029D Lost Communication with NOX Sensor Module 1
- DTC U029E Lost Communication with NOX Sensor Module 2

This may be caused by, but not limited to, any of the following:

**Condition #1**

The wiring harness of connector X107 is chafing on one of the generators on trucks equipped with dual generators and/or the assist lever for connector X107 is not fully or properly seated or has backed out or damaged terminals.

**Condition #2**

The assist lever for connector X300 is not fully or properly seated or has backed out or damaged terminals.

**Condition #3**

The assist lever for connector X395 is not fully or properly seated or has backed out or damaged terminals.

**Condition #4**

Chafing of the insulation of the wiring harness that is routed by the left front control arm.


**Recommendation/Instructions**

Do This	Don't Do This
Ensure any connector TPA is fully seated (TPA is centered in the check window).	DO NOT replace any control module or wiring harness until you have followed this procedure in its entirety.
Repair and reroute any wiring harness as needed.	
Repair any connector terminals that are damaged, have poor connections or do not mate properly.	Depending on the vehicle build, some of the procedures may not be applicable.


**Determining the Condition to Diagnose**

1. Perform the Diagnostic System Check - Vehicle.
2. Record any DTC for reference to use in the following four procedures as directed.
  - (**ARROW LIST**) If DTC P0101, P20BB, P20BD, P20BF, P20C3, P11DC, P22A7 or U029E are set or any diesel exhaust fluid (DEF) DTCs are set or DEF messages displayed proceed to Condition #1.
  - (**ARROW LIST**) If DTC P11DB, P11DC, P2453, P2454, P20CC, P242C, P246F, U029D or U029E are set, proceed to Condition #2.
  - (**ARROW LIST**) If DTC U029D or U029E are set, proceed to Condition #3.
  - (**ARROW LIST**) If DTC P0657, P0658, P0706, P0708, P0712, P0713, P0717, P0722, P0751, P0752, P0756, P0757, P0761, P0762, P0842, P0843, P0847, P0848, P0872, P0873, P0877, P0878, P0960, P0962, P0964, P0966, P0972, P0973, P0975, P0976, P0979, P2453, P2454, P2669, P2670, P2727, P2729, P2761, or P2764 are set, proceed to Condition #4.

**Condition #1**

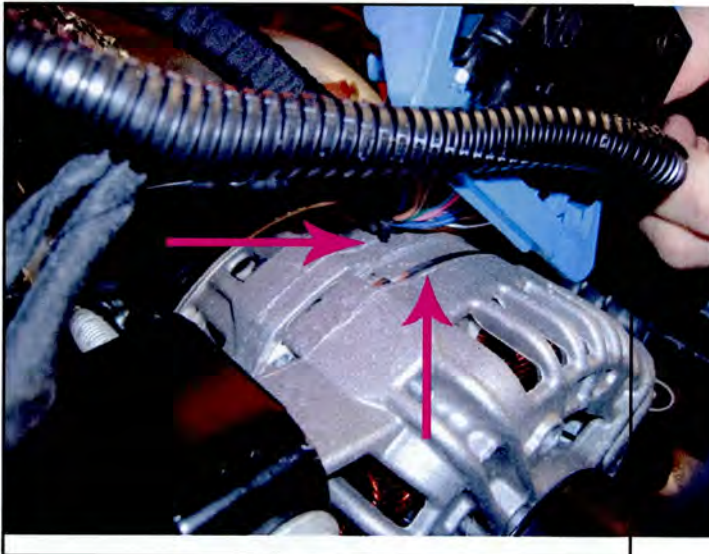

2552352

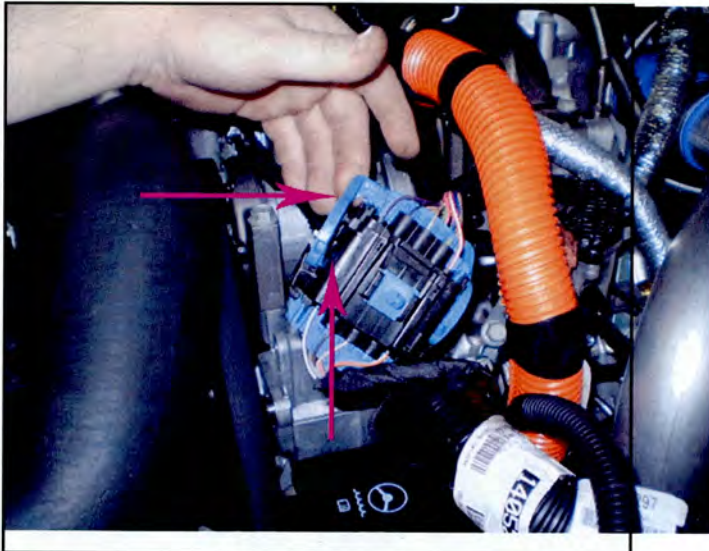

2552508

1. Inspect connector X107 and its wiring harness for the following conditions:
  - 1.1. Chafing of the wiring harness insulation from contact on the generator as shown.
  - 1.2. A connector assist lever that is not fully or properly seated as shown.
  - 1.3. Backed out or damaged connector terminals.
  - 1.4. Poor terminal contact or tension. Refer to Testing for Intermittent Conditions and Poor Connections in SI.

**(ARROW LIST)** If any of the above conditions exist, repair as needed. Refer to > Power and Signal Distribution > Wiring Systems and Power Management > Diagnostic Information and Procedures > Wiring Repairs and Repairing Connector Terminals in SI.




2552339

**Important:** If the wiring harness was contacting the generator, the wiring harness **MUST** be rerouted.

2. Route the harness of the X107 connector over the top of the orange conduit as shown.
3. Clear the DTCs with a scan tool.

## Condition #2

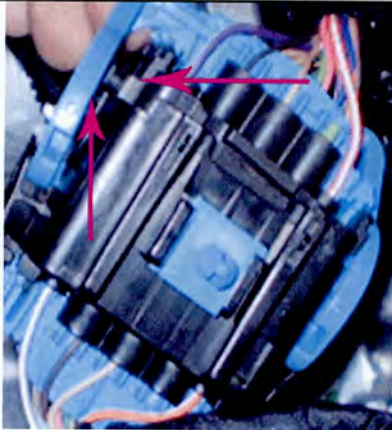Typical View of an Improperly Seated  
Connector Assist Lever

2553066

1. Inspect connector X300 for the following:
    - 1.1. A connector assist lever that is not fully or properly seated as shown.
    - 1.2. Backed out or damaged connector terminals.
    - 1.3. Poor terminal contact or tension. Refer to Testing for Intermittent Conditions and Poor Connections in SI.
- (ARROW LIST)** If any of the above conditions exist, repair as needed. Refer to > Power and Signal Distribution > Wiring Systems and Power Management > Diagnostic Information and Procedures > Wiring Repairs and Repairing Connector Terminals in SI.
2. Clear the DTCs with a scan tool.

## Condition #3

Typical View of an Improperly Seated  
Connector Assist Lever


2553066

**Note:** Connector X395 engine chassis harness to reductant jumper harness, is near the right side of the frame, above the reductant tank.

1. Inspect connector X395 for the following:

- 1.1. A connector assist lever that is not fully or properly seated as shown.
  - 1.2. Backed out or damaged connector terminals.
  - 1.3. Poor terminal contact or tension. Refer to Testing for Intermittent Conditions and Poor Connections in SI.
- (ARROW LIST)** If any of the above conditions exist, repair as needed. Refer to > Power and Signal Distribution > Wiring Systems and Power Management > Diagnostic Information and Procedures > Wiring Repairs and Repairing Connector Terminals in SI.
- 2. Clear the DTCs with a scan tool.

**Condition #4**

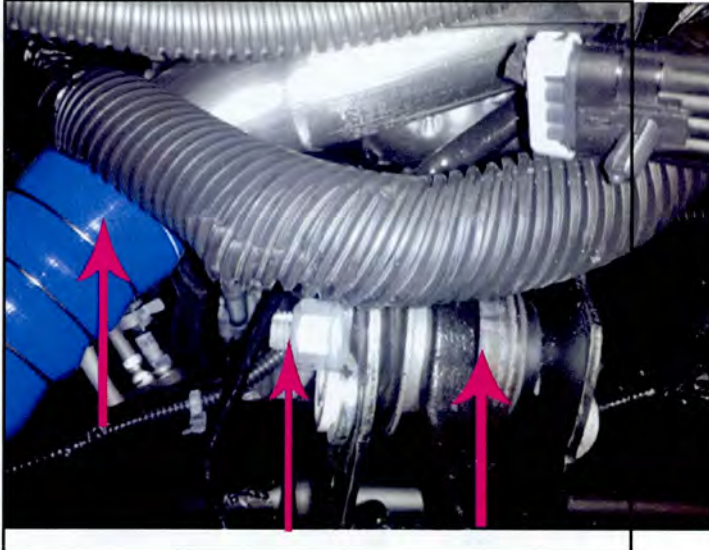

2552582

- 1. Inspect the wiring harness insulation for chafing from contact on the left front control arm in the areas as shown. **(ARROW LIST)** If chafing of the wiring harness insulation is observed, repair as needed. Refer to > Power and Signal Distribution > Wiring Systems and Power Management > Diagnostic Information and Procedures > Wiring Repairs in SI.
- 2. Clear the DTCs with a scan tool.

**Warranty Information**

**Important:** Use the appropriate labor operation for the repair that was performed. For vehicles repaired under warranty, use:

Labor Operation	Description	Labor Time
N6650*	Terminal Replacement	Use Published Labor Operation Time
N6653*	Wire to Wire Repair	

\*Additional time to gain access or repair time greater than 0.5 hours must be submitted as Other Labor Hours and requires service manager approval.