

# Initialization of Advanced Parking Guidance System

**Service Category** General

**Section** Pre-Delivery Service

**Market** USA

Toyota Supports  
ASE Certification 

## Applicability

| YEAR(S) | MODEL(S) | ADDITIONAL INFORMATION |
|---------|----------|------------------------|
| 2014    | Prius V  |                        |

## Introduction

The Advanced Parking Guidance System (or Park Assist) assists the driver during parking and parallel parking by displaying an image of the area behind the vehicle and controlling the steering wheel with the vehicle in reverse.

Removing the short pin or disconnecting the battery interrupts power to the Steering Angle Sensor. When the short pin is reinstalled or the battery terminal is reconnected, the rear view monitor will operate, but the steering angle sensor center position must be set through system initialization before park assist will become operational.

Initialize the Advanced Parking Guidance System after installing the short pin during Pre-delivery Service (PDS).

## Warranty Information

| OP CODE | DESCRIPTION                | TIME | OFP | T1 | T2 |
|---------|----------------------------|------|-----|----|----|
| N/A     | Not Applicable to Warranty | —    | —   | —  | —  |


# Initialization of Advanced Parking Guidance System

## Initialization Procedure

1. Start the hybrid system.
2. Move the shift lever to the "R" position to confirm that the Advanced Parking Guidance System is inoperative.

"System initializing." appears on the rear view monitor as shown in Figure 1.

**Figure 1. Before Initialization**

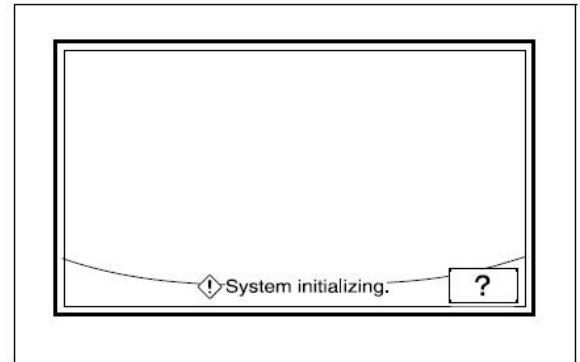

3. Move the shift lever to the "P" position and turn the steering wheel lock to lock.
4. Move the shift lever to the "R" position.
5. When "Check surroundings for safety." appears on the rear view monitor as shown in Figure 2, the initialization of the Advanced Parking Guidance System has been completed.

**Figure 2. After Initialization**

