

# Service Information

## Workshop Equipment

Number: VSE-14-11

Subject: VAS 6356 Test Instruments Box – Software  
Configuration – ODIS Service Only

Date: May 30, 2014

**Supersedes VSE-14-01 due to deletion of Windows® XP references and additional information.**

## Table of Contents

| Section                                    | Page              |
|--------------------------------------------|-------------------|
| 1.0 Introduction - <b>Must Read!</b>       | 1                 |
| 2.0 Configuration                          | <a href="#">2</a> |
| 2.1 Preparation                            | <a href="#">2</a> |
| 2.2 Procedure                              | <a href="#">2</a> |
| 2.3 <b>Connection &amp; Function Tests</b> | <a href="#">5</a> |

## 1.0 – Introduction

Use the procedures in the following sections to configure and test a VAS 6356 Test Instruments box for use with a VAS diagnostic laptop or tablet with **ODIS Service**.

**VAS 6356 software and USB driver files** are automatically installed during the ODIS Service diagnostic software installation routine. **VAS 6356 software installation via separate CD is NOT necessary.**

The procedure extracts the pre-installed USB driver and network adapter files, and configures a network connection. Successful configuration is confirmed with connection and functions tests.

This document covers initial VAS 6356 configuration on VAS diagnostic laptop and tablet devices with **Windows 7** operating systems.

### Notes:

- *The following procedures must be performed by **qualified personnel only!***
- *Please read these instructions in their entirety before performing these procedures. **If you do not have previous experience loading software or do not understand these instructions, arrange to have a qualified person perform the procedures.***
- *The latest version of ODIS Service must be present or installed **BEFORE** proceeding with these instructions.*
- *If the VAS 6356 is to be used by more than one diagnostic device, the following procedures must be performed on **each** device..*
- ***Discard all printed copies of this document after use.** Revised versions may be issued at any time. Always check ServiceNet for the latest version.*



Das Auto.

# Service Information

## 2.0 – Configuration

### 2.1 – Preparation

#### Laptop & tablet Prerequisites:

- ☐ Diagnostic device plugged in to power adapter (tablet in base station), booted to Windows desktop.
- ☐ The latest version of ODIS Service must be installed.

#### VAS 6356 Prerequisites:

Physical set up completed as per initial unpacking and setup instructions, i.e.:

- ☐ Test box plugged in to power adapter, blue LED on steady
- ☐ All test and measurement leads connected to test box
- ☐ USB cable on hand

## 2.2 – Procedure

### 2.2.1 – Extract USB Drivers


1. Connect USB cable between the test box and any available USB port on the laptop/tablet.

Windows will detect and install the necessary drivers automatically (a Windows installation message may appear during this time). No user intervention is necessary.


2. From the desktop, click the **Windows** (Start) button:



3. Select **Devices and Printers**:



4. Verify that **VAS6356** appears in the **Devices ( )** section:

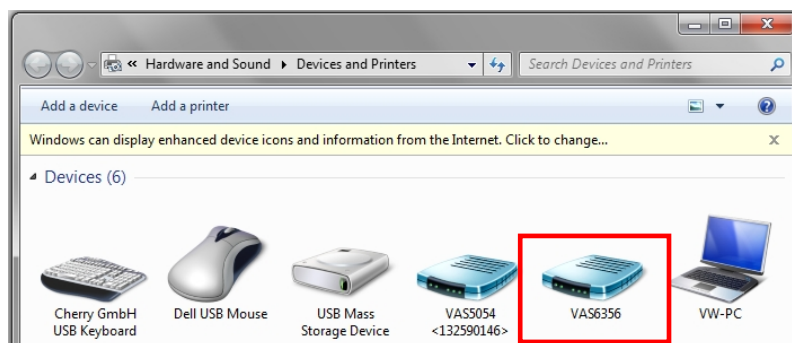

#### Note:

**VAS6356** appears in **Devices and Printers** only when connected via the USB cable.

5. Close the **Devices and Printers** window.

6. From the Windows desktop, click the **Windows** (Start) button:



Continued ...3/



Das Auto.

# Service Information

7. Select **Control Panel**:


Control Panel

8. From the Control Panel menu, select **System**:




System

9. From the submenu, select **Device Manager**:

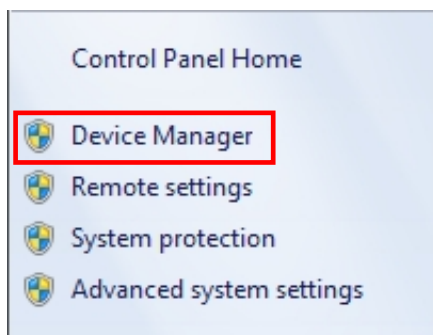

10. Expand ( + ) the **Network adapters** directory and confirm that **AVL DiTest VAS6356** is listed:

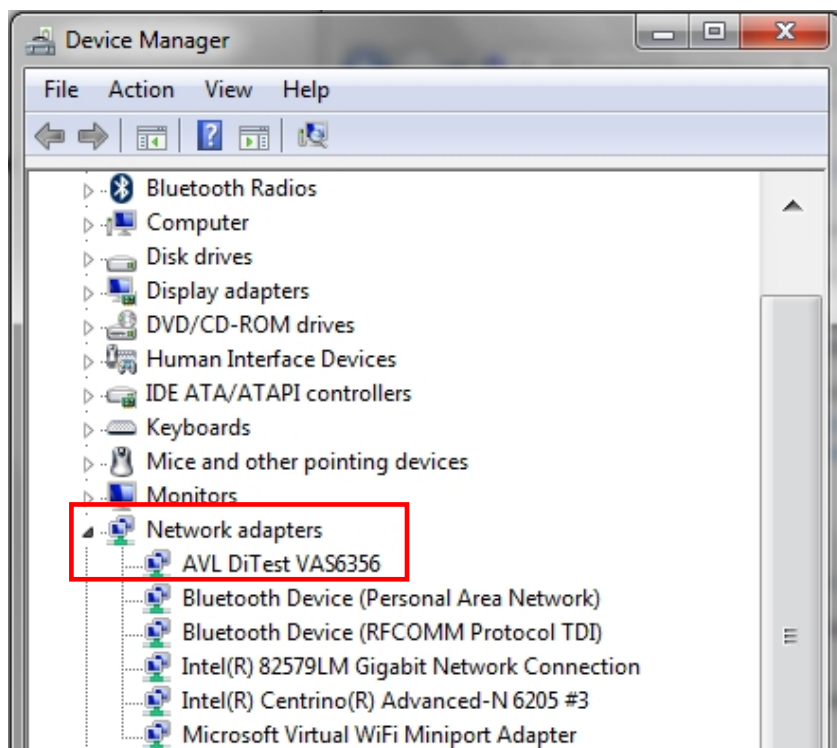

11. Close the **Device Manager** and **Control Panel** Windows

Continued ...4/



Das Auto.

# Service Information


## 2.2.2 – Configure Network Connection

1. From the Windows desktop, click the **Windows** (Start) button:



2. Go to: **All Programs > DiTest > VAS 6356**.

3. **Right click** (select) **VAS 6356 - Konfiguration**:

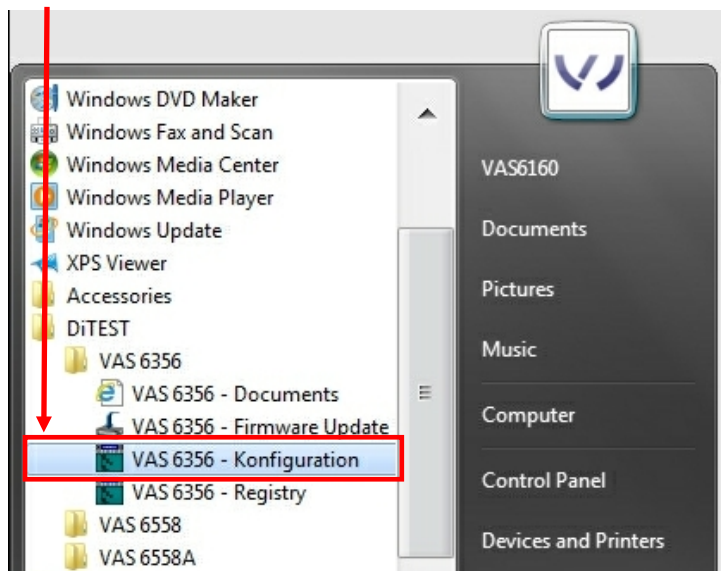

4. From the selection dropdown menu, select **Run as Administrator**.


A very brief IP configuration routine runs and the window closes automatically.

5. **Briefly disconnect, and then reconnect** the VAS 6356 USB cable from the laptop/tablet USB port.


6. Wait a moment, and then click the **Windows** (Start) button:




7. Select **Control Panel**:



8. From the Control Panel menu, select **Network and Sharing Center**:



9. From the submenu, select **Change Adapter Settings**:

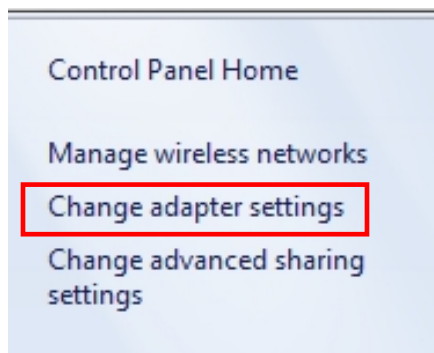


Continued ...5/



Das Auto.

# Service Information

10. Confirm that the **Local Area Connection 2** for **AVL DiTEST VAS6356** is present and is indicated as **connected** as an **unidentified network**. (If it is not present and connected, repeat Steps 1 - 5):

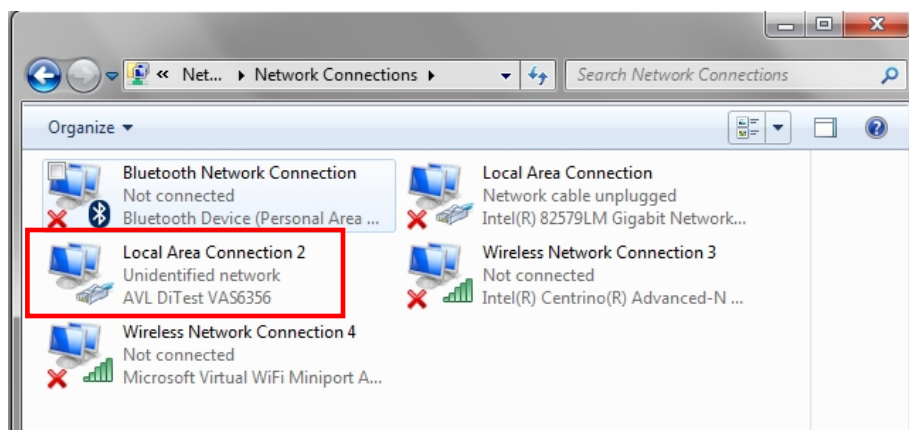


11. Close the **Network and Sharing** window.
12. **Test the connection.** Ref. Section 2.3 (below).

## 2.3 – Connection & Function Tests

The following tests confirm the **network IP** connection and **GDI Device Driver** functions.

### 2.3.1 – Connection Test

1. From the Windows desktop, click the **DiagStarter** icon and select **ODIS Service**.
2. Select the **Admin** operating mode.
3. Select the **Measurement** tab.
4. In the **GDI device driver** category, confirm **VAS6356** appears in the **Measuring device** selection:

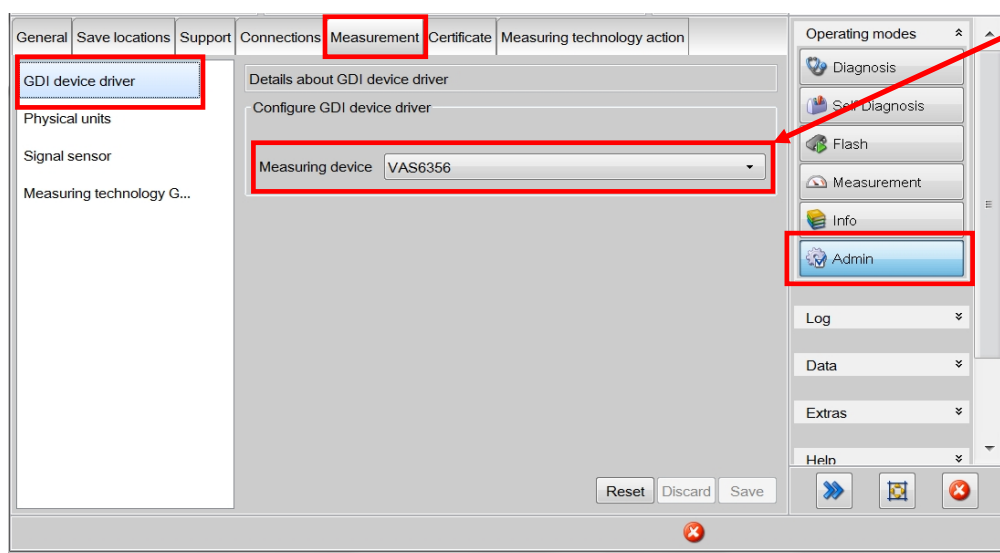


Continued ...6/




Das Auto.

# Service Information

5. Select the **Measuring technology** tab.
6. Click the **Self-test** category.
7. Click the **Measurement** button:

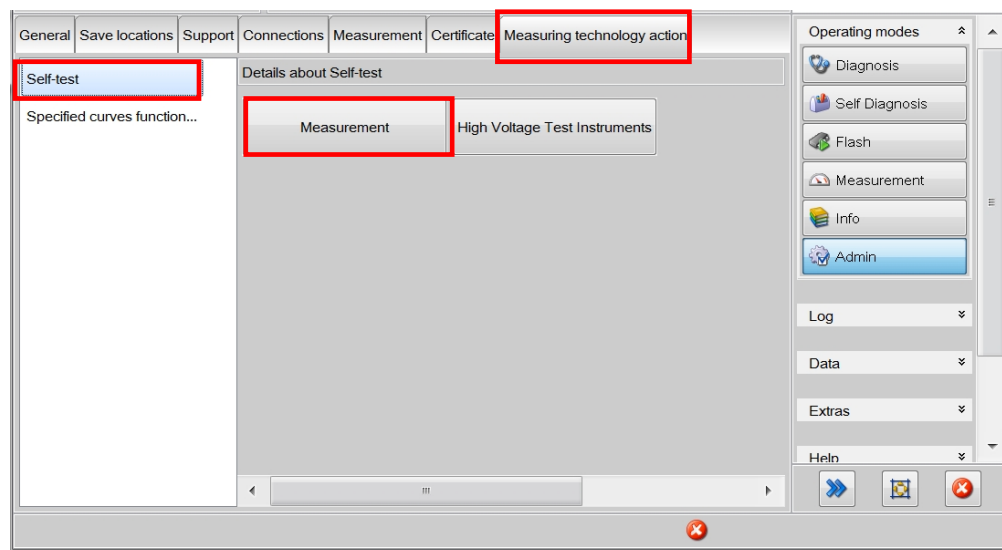

A successful test is indicated by the result **OK**:

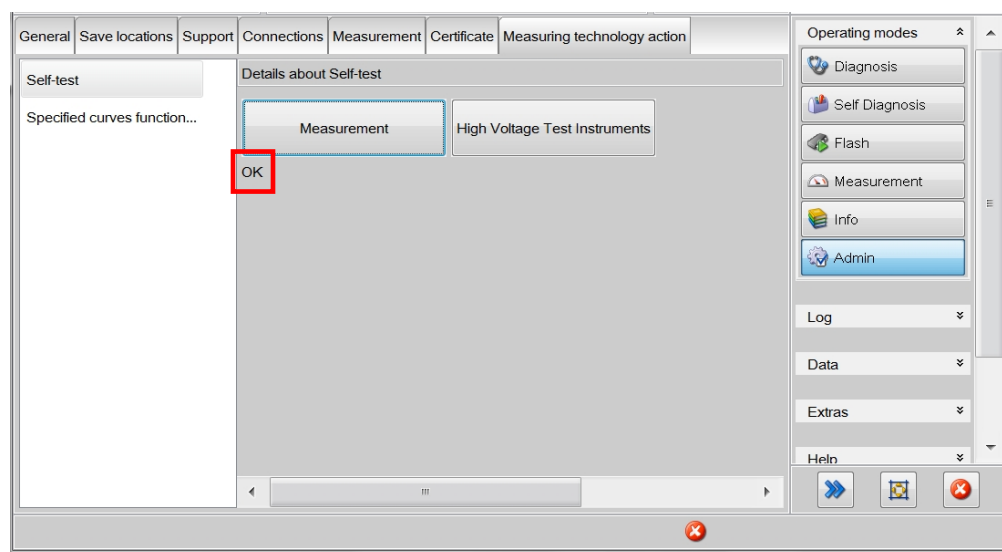

## Note:

- In some cases the connection may be delayed and the test result will be **Not OK**. In this case, wait a moment and retry the test.
- In all cases, perform the **Function Test – Page 7**.

Continued ...7/




Das Auto.


# Service Information

## 2.3.2 – Function Test


1. From the ODIS Service main/start screen, select **Measurement** (Multimeter functions are displayed by default). Select the **Diode test URDI** or **Continuity test URDI** mode:

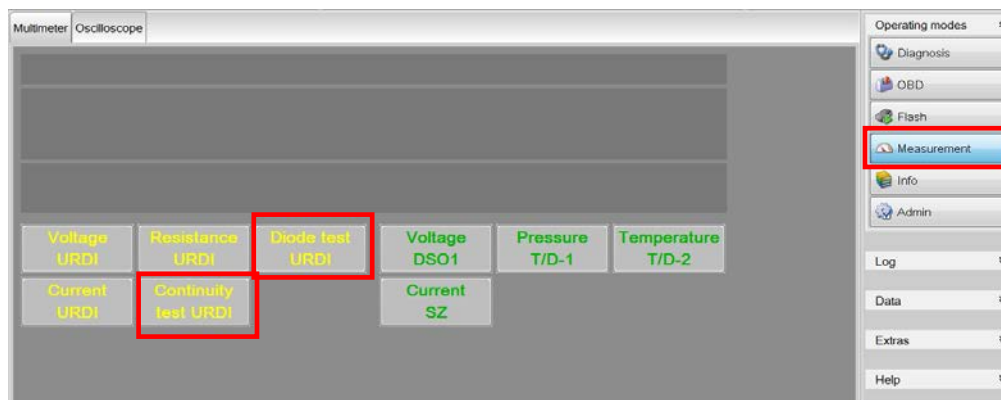

2. Briefly touch the two URDI cable probes together. The display must show continuity as illustrated:

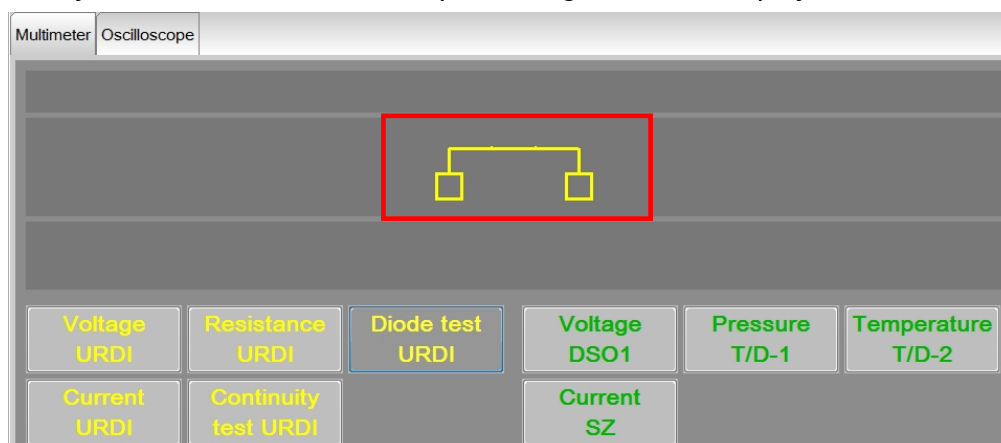

3. Select the **Resistance URDI mode**. Confirm the display is active:

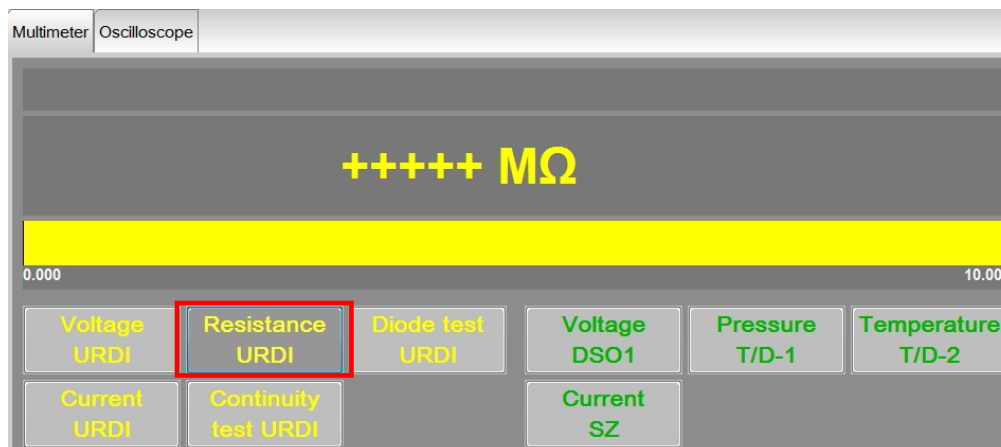


Continued ...8/




Das Auto.

# Service Information

4. Select the **Voltage URDI mode**. Confirm the display is active:

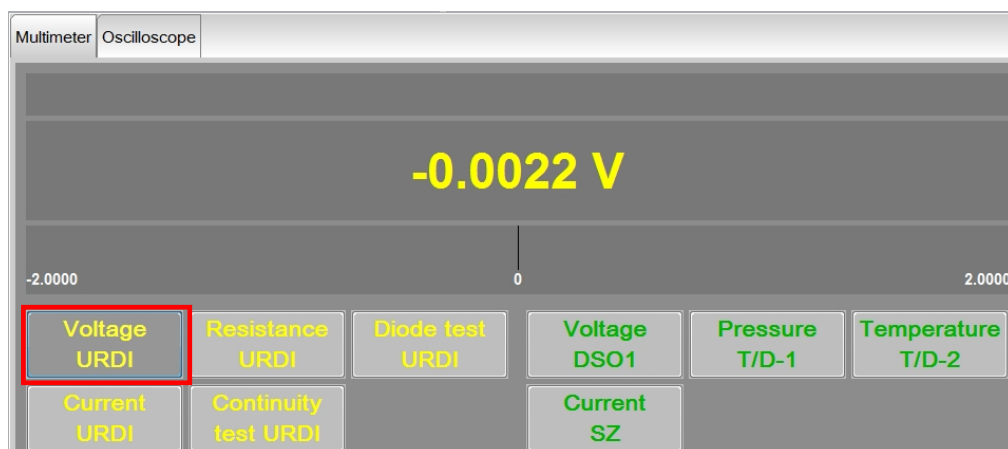

5. Select the **Current URDI mode**. Confirm the display is active:

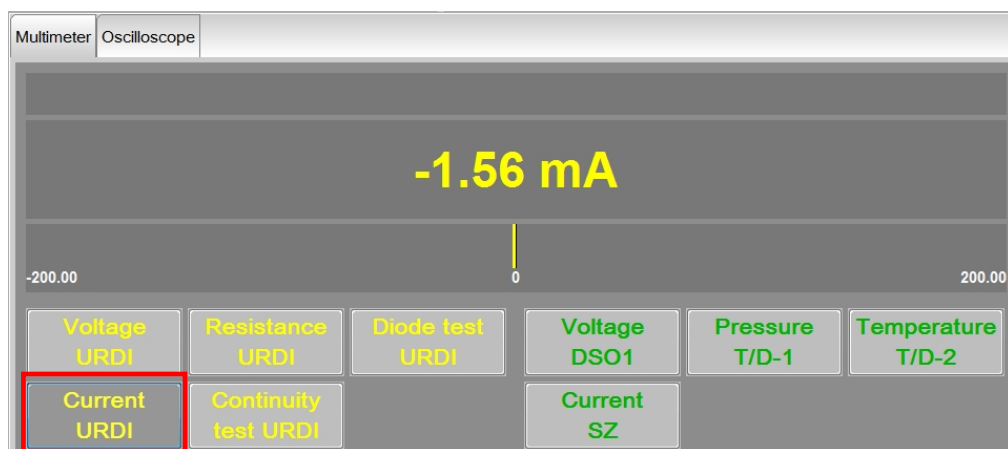

The VAS 6356 is ready for use with the laptop/tablet.

For instructions on using test instrument functions, refer to the **ODIS Service User's Manual**. Go to: **Windows (Start) > All Programs > Offboard Diagnostic Information System Service > Manual > manual\_service-XX\_US.pdf > Section 10.**