

2AZ-FXE Oil Consumption

Service
Category Engine/Hybrid System

Section Engine Mechanical

Market USA

Lexus Supports
ASE Certification 

Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2010	HS250H	Engine(s): 2AZ VDS(s): BB1BA

REVISION NOTICE

February 23, 2015 Rev1:

- The Warranty Information section has been updated.

Any previous printed versions of this bulletin should be discarded.

Introduction

NOTE

Service Bulletin No. [L-SB-0109-14](#), "2AZ-FXE Engine Oil Consumption Inspection Procedure," **MUST** be performed **BEFORE** continuing with the procedure in this bulletin.

Some 2010 model year HS 250h vehicles equipped with the 2AZ-FXE engine may exhibit engine oil consumption. The piston assembly has been changed to minimize oil consumption. Use the following Repair Procedure to address this condition.

Warranty Information

OP CODE	DESCRIPTION	TIME	OFF	T1	T2
EG9014	R & R Piston and Ring Set	16.0	13211-28120-A0 13211-28120-B0 13211-28120-C0 13211-28121-A0 13211-28121-B0 13211-28121-C0	11	99

2AZ-FXE Oil Consumption

Warranty Information (Continued)

APPLICABLE WARRANTY

- This repair is covered under the Lexus Powertrain Warranty. This warranty is in effect for 72 months or 70,000 miles, whichever occurs first, from the vehicle's in-service date.
- Warranty application is limited to occurrence of the specified condition described in this bulletin.

Parts Information

Required Kit Part Numbers

MODEL	KIT PART NUMBER	KIT PART NAME*	QTY
HS 250h	04004-11428	Repair Kit, Piston Ring	1

* See Kit Contents table for individual parts included in kit.

Additional Required Parts

MODEL	PART NUMBER	PART NAME	QTY
HS 250h	90915-YZZF1	Filter, Oil	1
	13211-28150-#0	Piston	4
	17451-28070 (17451-0D150)	Gasket, Exhaust Pipe	1
	90917-06078	Gasket, Exhaust Pipe Center	1
	90105-10381 (90080-10087)	Bolt (for Drive Shaft Bearing Bracket Setting No. 2)	3
	16258-28030 (16258-0H010)	Gasket (for Water By_pass Hose No. 1)	1
	16258-28040	Gasket (for Water Cooler Pipe)	1
	90105-12184	Bolt (for Fly Wheel	8
	90301-52006	Ring, O (for Oil Cooler	1
	91551-G0822 (90105-A0273)	Bolt, Flange (for Tansaxle Input Dampener)	6

2AZ-FXE Oil Consumption

Parts Information (Continued)

Additional Parts: Only As Needed

MODEL	PART NUMBER	PART NAME	QTY
HS 250h	13251-28020-#0 (13251-0H030-#0)	Pin, Piston	As Needed
	13201-29686-#0	Rod Sub-assy, Connecting	As Needed
	13281-28011-#0 (13281-0H031-#0)	Bearing, Connecting Rod	8 (if Needed)

2AZ-FXE Oil Consumption

Parts Information (Continued)

Kit Contents

MODEL		HS 250h
KIT PART NUMBER		04004-11428
PART NUMBER	PART NAME	QUANTITY (per Kit)
13011-28260	Ring Set, Piston	1
15708-28011	Nozzle Sub-assy, Oil, No.1	4
11115-28040	Gasket, Cylinder Head	1
11213-28021	Gasket, Cylinder Head Cover	1
13552-28010	Gasket (for Chain Tensioner)	1
17173-28010	Gasket, Exhaust Manifold	1
17177-28031	Gasket, Intake Manifold to Head	1
90177-22001	Nut (for Front Axle Shaft)	2
90311-38098	Seal, Oil (for Timing Chain Case)	1
90311-89010	Seal, Engine Rear Oil	1
90430-12031	Gasket (for Oil Pan Drain Plug)	1
90430-18008	Gasket, Drain Plug, etc.	3
90520-22025	Ring, Hole Snap (for Piston Pin)	8
90520-38015	Ring, Hole Snap (for Front Drive Shaft RH)	1
90521-33002	Ring, Hole Snap (for Front Drive Shaft LH)	1
95381-03025	Pin, Cotter (Tie Rod)	2
96721-19010	Ring, O (for Oil Level Gage Guide)	1
96761-24020	Ring, O (for Cylinder Block to Crankcase Stiffener	1
G1917-32010	Ring, O (Camshaft Timing Oil Control Valve)	1
90917-06090	Gasket, Exhaust Pipe*	1
94185-60800	Bolt (Front Exhaust Pipe No. 1 Support Bracket)*	2
90917-06076	Gasket, Exhaust Pipe Center*	1
90119-10461	Bolt (for Drive Shaft Bearing Bracket Setting No.1)*	1
90468-04193	Clip (Transmission Control Cable)*	1

* These parts are included in kit but will not be used for HS 250h vehicles.

2AZ-FXE Oil Consumption

Required Tools & Equipment

TOOLS & MATERIAL	PART NUMBER	QUANTITY
Three Bond 1324 or Equivalent	—	As Needed
FIPG Sealant or Equivalent	08826-00080	As Needed
Super Long Life Coolant (SLLC)	00272-SLLC2	7.7 US qts. 7.3 liters
ILSAC GF-4 Multi-grade SAE 0W-20 or 5W-20	—	4.5 US qts. 4.3 liters
Green Plastigage™	—	As Needed
Cylinder Ridge Reamer	—	1
Torque Yield Wrench	—	1
Precision Straight Edge	—	1
Piston Heater	—	1
Piston Ring Compressor	—	1
Torque Wrench	—	1
Large Brass Punch	—	1
Piston Ring Expander	—	1
Thread Chaser	—	1
Feeler Gauge	—	1
Caliper Gauge	—	1
Micrometer	—	1
Vernier Caliper	—	1
Engine Stand	—	1

SPECIAL SERVICE TOOLS (SST)	PART NUMBER	QTY
Gasket Seal Cutter	09032-00100	1

NOTE

Additional SSTs may be ordered by calling 1-800-933-8335.

2AZ-FXE Oil Consumption

Repair Procedure

NOTE

Verify that Service Bulletin No. [L-SB-0109-14](#), "2AZ-FXE Engine Oil Consumption Inspection Procedure," has been performed **BEFORE** continuing with this bulletin.

Replace the piston and piston ring set.

1. Remove the engine assembly and place on an engine stand.

Refer to the Technical Information System (TIS), applicable model and model year Repair Manual:

- [2010](#) HS 250h:
Engine/Hybrid System – Engine Mechanical – "2AZ-FXE Engine Mechanical: Engine Assembly: Removal"

2. Remove the cylinder head assembly.


Refer to TIS, applicable model and model year Repair Manual:

- [2010](#) HS 250h:
Engine/Hybrid System – Engine Mechanical – "2AZ-FXE Engine Mechanical: Cylinder Head Gasket: Removal"

3. Remove the pistons from the connecting rods.

- A. Remove the oil pan drain plug and gasket.

Figure 1.

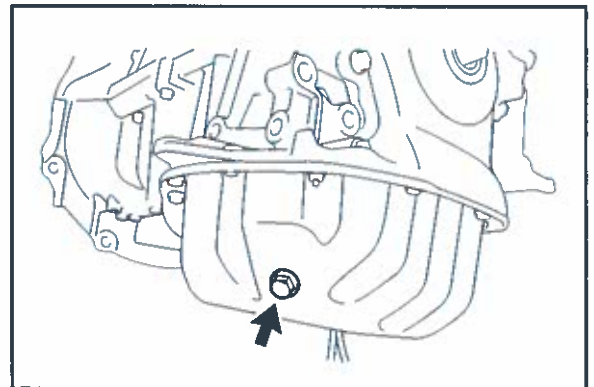


2AZ-FXE Oil Consumption

Repair Procedure (Continued)

B. Remove the oil pan sub-assembly.

- (1) Remove the 12 bolts and 2 nuts.

Figure 2.

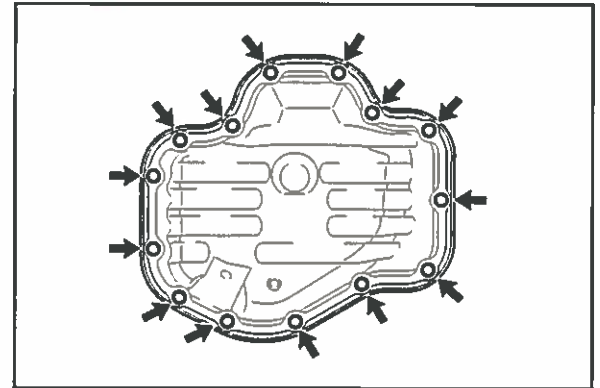


- (2) Insert the blade of the Gasket Seal Cutter between the crankcase and oil pan. Cut through the sealer and remove the oil pan.

SST: 09032-00100

NOTICE

Be careful NOT to damage the contact surfaces of the crankcase, chain cover, and oil pan.


Figure 3.

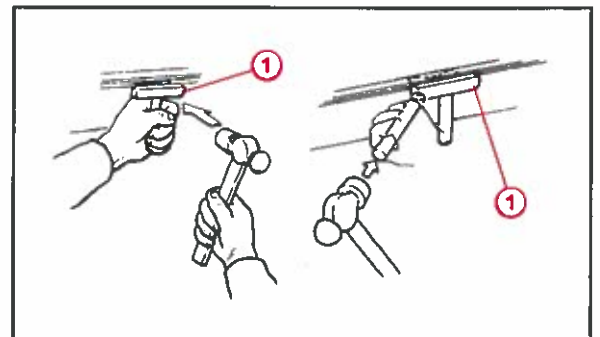

1 Gasket Seal Cutter

- C. Remove the oil pump assembly by removing the 3 bolts and gasket.

Figure 4.

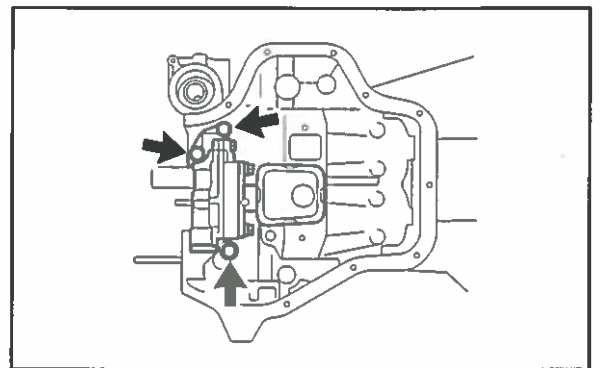

2AZ-FXE Oil Consumption

Repair Procedure (Continued)


D. Remove the engine rear oil seal.

- (1) Using a knife, cut off the oil seal lip.
- (2) Using a screwdriver (with a taped tip), pry out the oil seal.

NOTICE

After removing the oil seal, check the crankshaft for damage. If the crankshaft is damaged, smooth the surface with 400-grit sandpaper.

Figure 5.

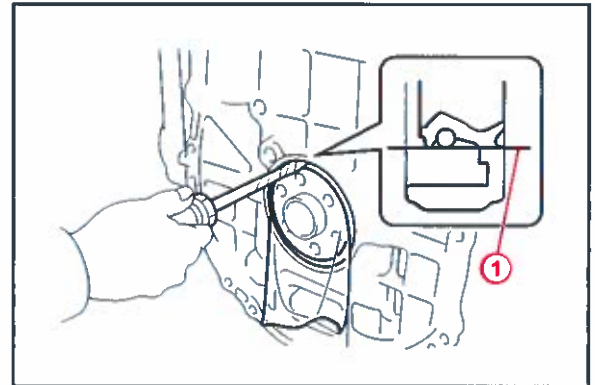

1 Cut Position


E. Remove the stiffening crankcase assembly.

NOTICE

Remove the stiffening crankcase as a unit. Do NOT separate the halves of the assembly, exposing the balance shaft bearings.

- (1) Uniformly loosen and remove the 11 bolts in the sequence shown in the illustration.

Figure 6.

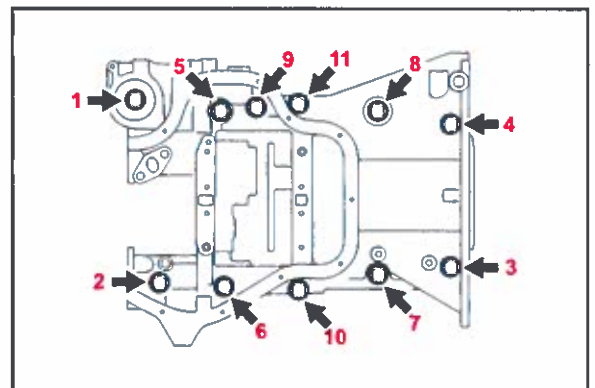

2AZ-FXE Oil Consumption


Repair Procedure (Continued)

- (2) Using a screwdriver (with a taped tip), remove the crankcase by prying between the crankcase and cylinder block.

NOTICE

Be careful NOT to damage the contact surfaces of the crankcase and cylinder block.


Figure 7.

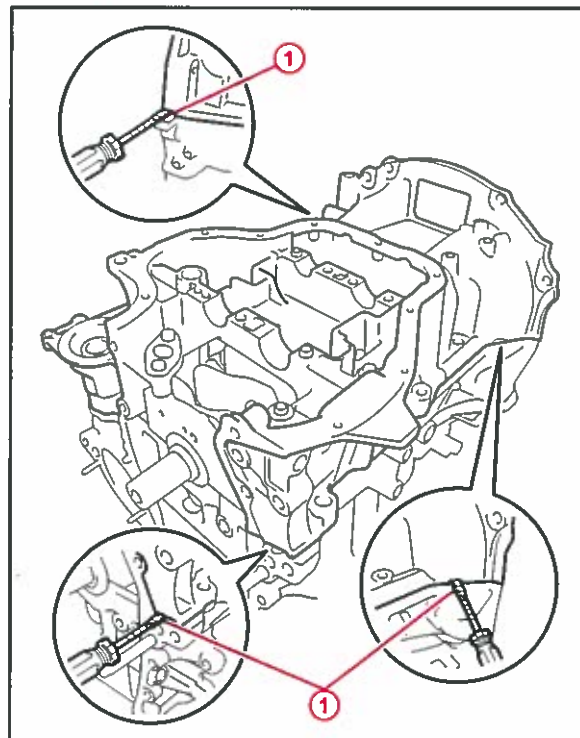

1 Protective Tape

- (3) Remove the O-ring from the cylinder block.

Figure 8.

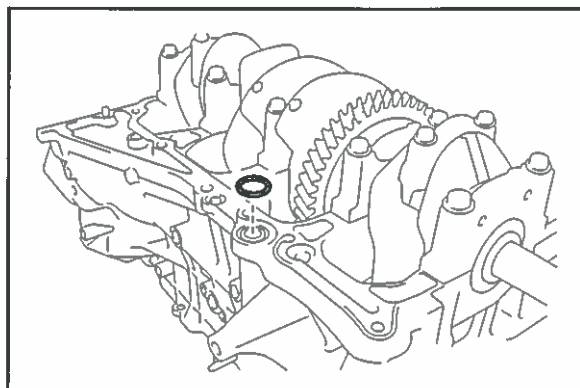


2AZ-FXE Oil Consumption

Repair Procedure (Continued)

F. Remove the piston sub-assemblies with connecting rod.


- (1) Using a ridge reamer, remove all the carbon from the top of the cylinder.

Figure 9.

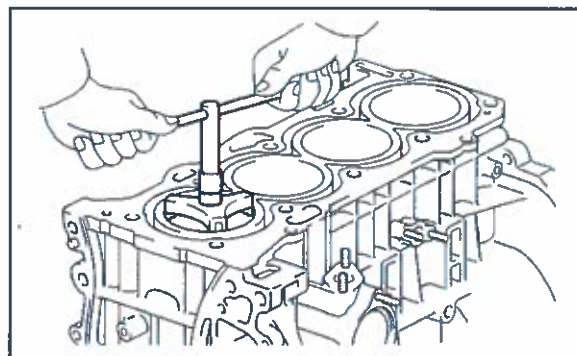

- (2) Check that the matchmarks on the connecting rod and cap are aligned to ensure correct reassembly.

Figure 10.

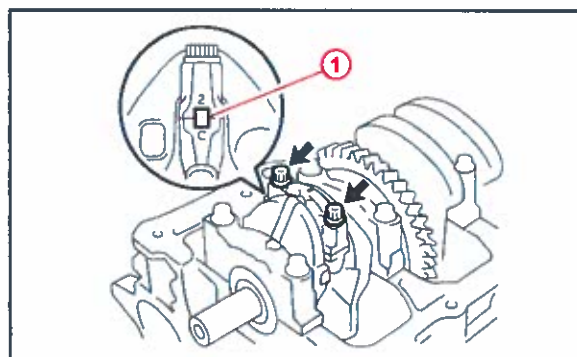


HINT

The matchmarks on the connecting rods and caps are provided for ensuring correct reassembly.

1 Matchmark

- (3) Using a 12 mm socket wrench, uniformly loosen the 2 bolts.

Figure 11.

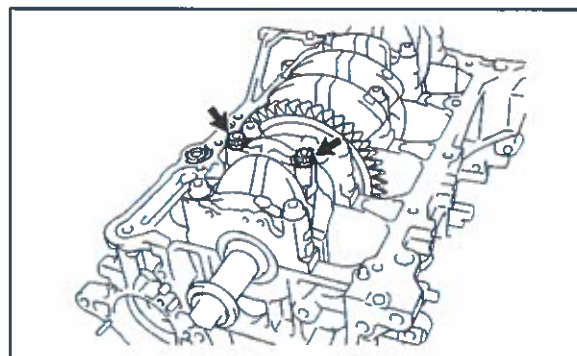

2AZ-FXE Oil Consumption

Repair Procedure (Continued)


- (4) Using the 2 removed connecting rod cap bolts, remove the connecting rod cap and lower bearing by moving the connecting rod cap right and left.

HINT

Keep the lower bearing inserted in the connecting rod cap.

- (5) Inspect the connecting rod oil clearance.
1. Clean the crank pin and bearing.
 2. Check the crank pin and bearing for pitting and scratches.
 3. Lay a strip of Plastigage™ on the crank pin.


Figure 12.

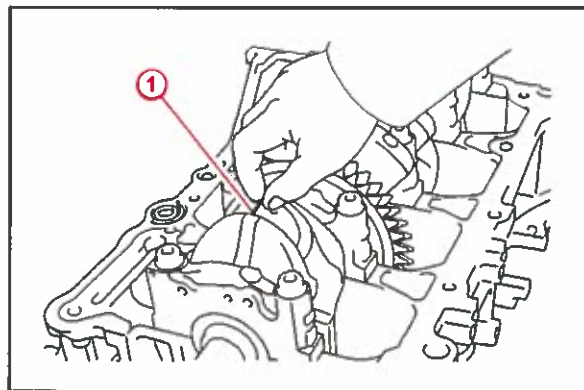

1 Plastigage™

4. Check that the front mark of the connecting rod cap is facing forward.

Figure 13.

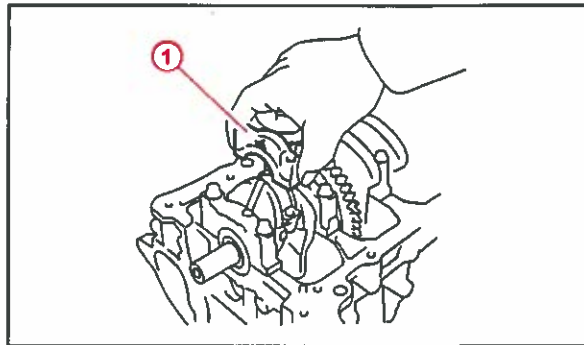


1 Front Mark

2AZ-FXE Oil Consumption

Repair Procedure (Continued)

5. Install and alternately tighten the bolts of the connecting rod cap in several steps.

Figure 14.

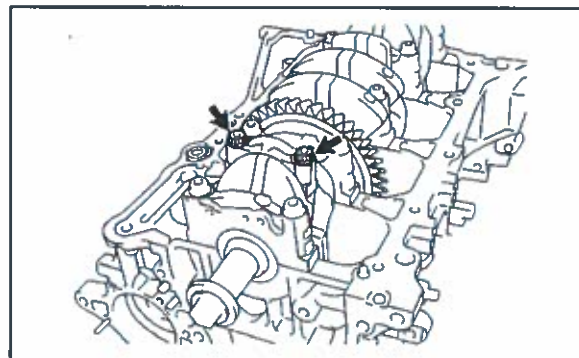


Torque: 25 N*m (250 kgf*cm, 18 ft*lbf)

NOTE

The connecting cap bolts should be tightened in 2 progressive steps.

6. Mark the front of the connecting rod cap bolts with paint.
Retighten the cap bolts by 90° as shown in the illustration.

Figure 15.

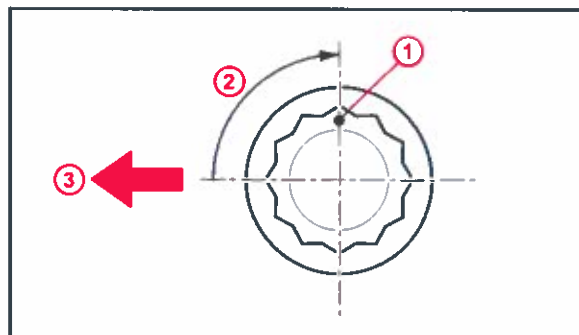

1	Paint Mark
2	90°
3	Engine Front

2AZ-FXE Oil Consumption

Repair Procedure (Continued)

7. Remove the 2 bolts and connecting rod cap.
8. Measure the Plastigage™ at its widest point.

Standard Oil Clearance: 0.024 to 0.048 mm (0.0009 to 0.0019 in.)

Maximum Oil Clearance: 0.08 mm (0.0032 in.)

If the oil clearance is greater than the maximum, replace the connecting rod bearings. If necessary, inspect the crankshaft.

NOTE

Completely remove the Plastigage™ after the measurement.

2AZ-FXE Oil Consumption

Repair Procedure (Continued)

HINT

If replacing a bearing, replace it with one that has the same number as its respective connecting rod cap. Each bearing's standard thickness is indicated by a 1, 2, or 3 mark on its surface.

Standard Connecting Rod Large End Bore Diameter:

MARK	SPECIFIED CONDITION
Mark 1	51.000 to 51.007 mm (2.0079 to 2.0082 in.)
Mark 2	51.008 to 51.013 mm (2.0082 to 2.0084 in.)
Mark 3	51.014 to 51.020 mm (2.0084 to 2.0087 in.)


Standard Connecting Rod Bearing Thickness:

MARK	SPECIFIED CONDITION
Mark 1	1.485 to 1.488 mm (0.0585 to 0.0586 in.)
Mark 2	1.489 to 1.491 mm (0.0586 to 0.0587 in.)
Mark 3	1.492 to 1.494 mm (0.0587 to 0.0588 in.)

Standard Crankshaft Pin Diameter:

MARK	SPECIFIED CONDITION
Mark 1	47.990 to 48.000 (1.8894 to 1.8898 in.)
Mark 2	
Mark 3	

Figure 16.

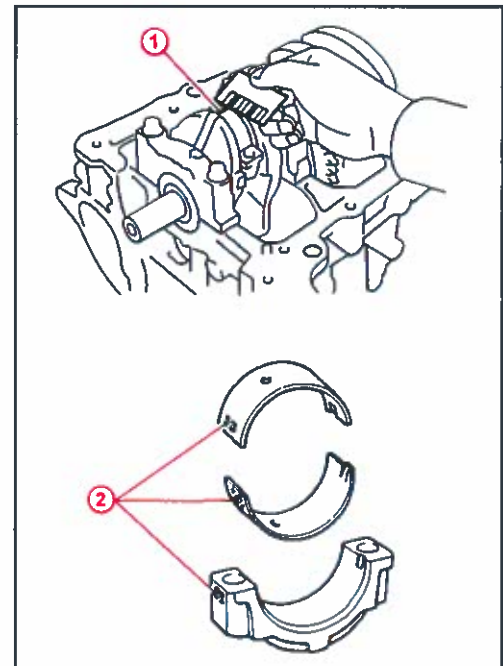

1	Plastigage™
2	1, 2, or 3 Mark

2AZ-FXE Oil Consumption

Repair Procedure (Continued)

- (6) Push the piston, connecting rod assembly, and upper bearing through the top of the cylinder block.

HINT

- Keep the bearing, connecting rod, and cap together.
- Arrange the piston and connecting rod assemblies in the correct order.

- (7) Repeat for the other 3 piston/connecting rod assemblies.

- G. Remove the connecting rod bearings.

HINT

Arrange the removed parts in the correct order.

- H. Inspect the cylinder bore for abnormal damage.

Visually check the cylinder bore for the presence of crosshatch.

- If the cylinder bore has visible crosshatch, the cylinder block is OK to re-use.
- Confirm that only light vertical marks are present, if any.

NOTE


- It is normal for an in-service block to have light markings present from carbon and should NOT be interpreted as excessive cylinder wall scratches.
- ONLY replace the short block if multiple, severe scratches are present.
- Do NOT hone the cylinder walls.

- I. Using a screwdriver, pry out the 2 piston pin hole snap rings.

HINT

If necessary, sublet the following specialized and precision operations to a local engine machining shop.

Figure 17.

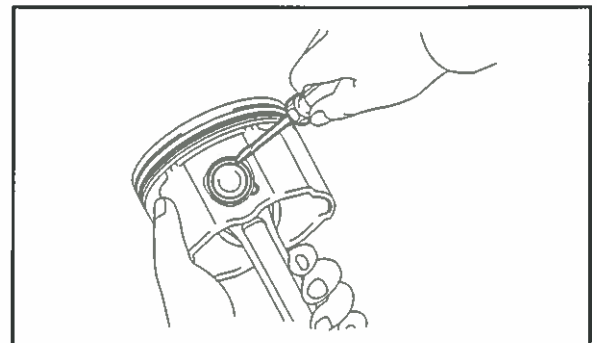


2AZ-FXE Oil Consumption

Repair Procedure (Continued)

J. Remove the piston.


- (1) Gradually heat the piston to approximately 176° to 194°F (80° to 90°C).

Figure 18.

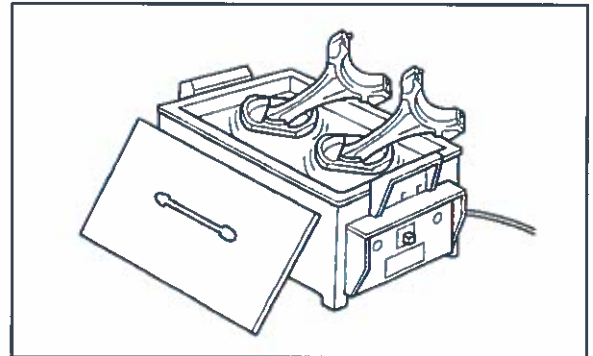

- (2) Using a plastic hammer and brass bar, lightly tap out the piston pin and remove the connecting rod.

Figure 19.

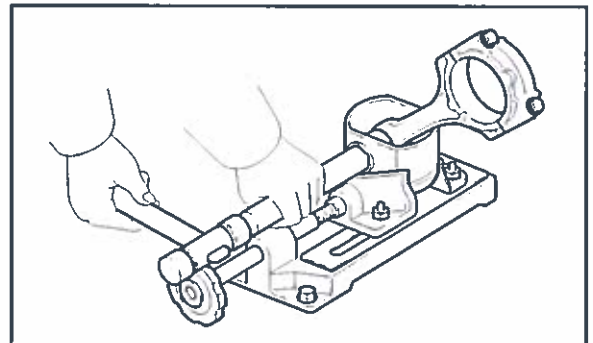

NOTE

- The piston and pin are a matched set.
- Arrange the pistons, pins, rings, connecting rods, and bearings in the correct order.

For additional information, refer to TIS, applicable model and model year Repair Manual:

- [2010](#) HS 250h:
Engine/Hybrid System – Engine Mechanical – “2AZ-FXE Engine Mechanical: Cylinder Block: Disassembly”

2AZ-FXE Oil Consumption

Repair Procedure (Continued)

4. Measure and inspect the piston pin, connecting rod, and bearings to determine replacement part numbers and if parts are suitable for re-use.

NOTE

The following steps are required to determine the correct replacement part numbers.


HINT

If necessary, sublet the following specialized and precision operations to a local engine machining shop.

- A. Inspect the original piston pin oil clearance to determine the correct replacement piston part number below.

- (1) Using a caliper gauge, measure the piston pin bore diameter.
Standard Piston Pin Bore Diameter:
22.001 to 22.010 mm (0.8662 to 0.8665 in.)

Figure 20.

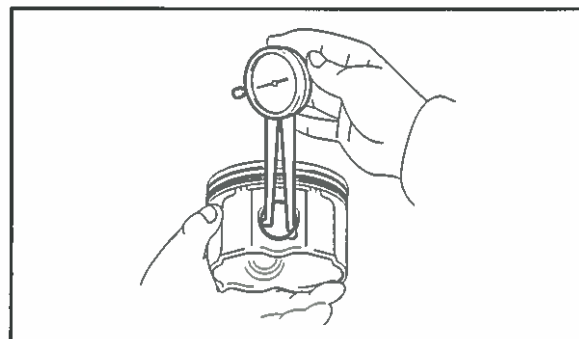

PART NUMBER	SPECIFIED CONDITION
13211-28150-A0	22.001 to 22.004 mm (0.8662 to 0.8663 in.)
13211-28150-B0	22.005 to 22.007 mm (0.8663 to 0.8664 in.)
13211-28150-C0	22.008 to 22.010 mm (0.8664 to 0.8665 in.)

2AZ-FXE Oil Consumption


Repair Procedure (Continued)

- (2) Using a micrometer, measure the piston pin diameter.

Standard Piston Pin Diameter: 21.997 to 22.006 mm (0.8660 to 0.8664 in.)

If the diameter is NOT as specified, replace the piston pin.

Figure 21.

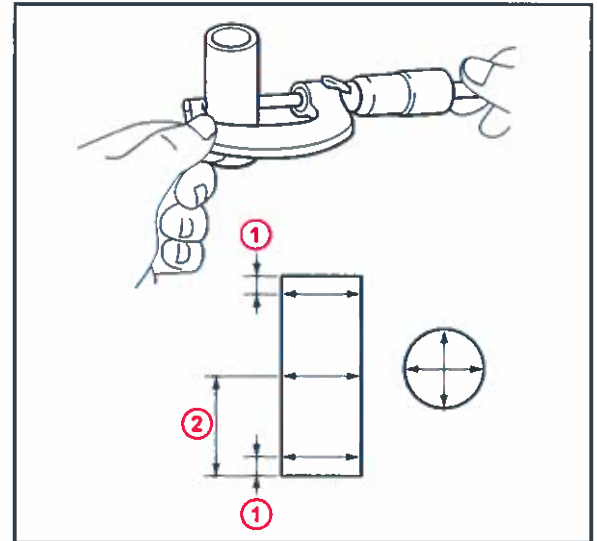

1	5 mm (0.20 in.)
2	30 mm (1.18 in.)

PART NUMBER	SPECIFIED CONDITION
13251-28020-A0	21.997 to 22.000 mm (0.8660 to 0.8661 in.)
13251-28020-B0	22.001 to 22.003 mm (0.8662 to 0.8663 in.)
13251-28020-C0	22.004 to 22.006 mm (0.8663 to 0.8664 in.)


2AZ-FXE Oil Consumption

Repair Procedure (Continued)

- (3) Using a caliper gauge, measure the connecting rod small end bore diameter.
Standard Connecting Rod Small End Bore Diameter:
 22.005 to 22.014 mm (0.8663 to 0.8667 in.)

If the diameter is NOT as specified, replace the connecting rod.

Figure 22.

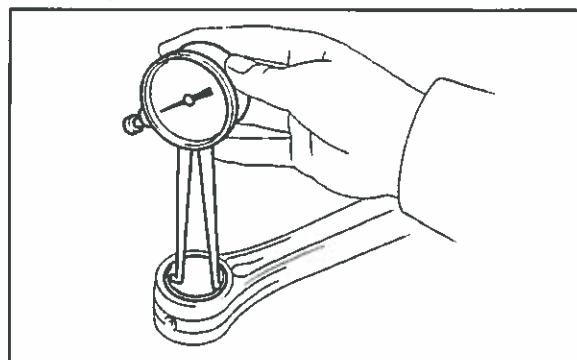

PART NUMBER	SPECIFIED CONDITION
13201-29686-A0	22.005 to 22.008 mm (0.8663 to 0.8665 in.)
13201-29686-B0	22.009 to 22.011 mm (0.8665 to 0.8666 in.)
13201-29686-C0	22.012 to 22.014 mm (0.8666 to 0.8667 in.)

B. Inspect the connecting rod bolt.


Using vernier calipers, measure the tension portion diameter of the bolt.

Standard Diameter: 7.2 to 7.3 mm
 (0.283 to 0.287 in.)

Minimum Diameter: 7.0 mm (0.276 in.)

If the diameter is less than the minimum, replace the connecting rod bolt.

Figure 23.

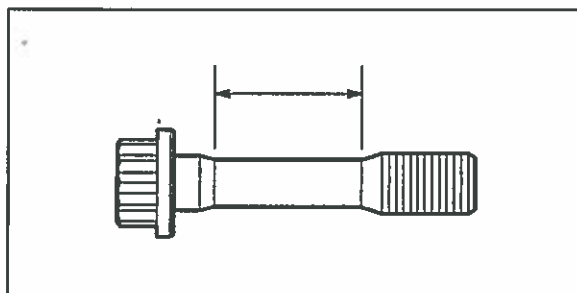

For additional information, refer to TIS, applicable model and model year Repair Manual:

- [2010](#) HS 250h:
Engine/Hybrid System – Engine Mechanical – “2AZ-FXE Engine Mechanical: Cylinder Block: Inspection”

5. Install the new pistons and rings and reassemble the engine in reverse order of disassembly.

For additional information, refer to TIS, applicable model and model year Repair Manual:

- [2010](#) HS 250h:
Engine/Hybrid System – Engine Mechanical – “2AZ-FXE Engine Mechanical: Engine Unit: Reassembly”

2AZ-FXE Oil Consumption

Repair Procedure (Continued)

- [2010](#) HS 250h:
Engine/Hybrid System – Engine Mechanical – “2AZ-FXE Engine Mechanical: Cylinder Block: Reassembly”
- [2010](#) HS 250h:
Engine/Hybrid System – Engine Mechanical – “2AZ-FE Engine Mechanical: Cylinder Head Gasket: Installation”

6. Install the engine assembly.

Refer to TIS, applicable model and model year Repair Manual:

- [2010](#) HS 250h:
Engine/Hybrid System – Engine Mechanical – “2AZ-FXE Engine Mechanical: Engine Assembly: Installation”

7. Test drive the vehicle to verify normal operation.