

Z1000SX

Ninja 1000

Motorcycle

Assembly & Preparation

Manual



Kawasaki

Foreword

In order to ship Kawasaki vehicles as efficiently as possible, they are partially disassembled before crating. Since some of the most commonly removed parts have a direct bearing on a vehicle's reliability and safety, conscientious pre-sale assembly and preparation becomes extremely important. Good setup procedures can prevent needless warranty claims and give customers a greater sense of confidence in Kawasaki and their Kawasaki Dealers.

This Assembly and Preparation Manual explains step by step procedures of the following items for all Kawasaki Z1000SX and Ninja 1000.

1. Uncrating
2. Assembly
3. Preparation

The selling dealer assumes sole responsibility for any unauthorized modifications prior to sale. Refer to your Service Binder for any Service Bulletins specifying Factory Directed Modifications (Special Claims) which must be performed before the vehicle is ready for sale.

Whenever you see the following symbols heed their instructions! Always follow safe operating and maintenance practices.

DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

NOTICE

NOTICE is used to address practices not related to personal injury.

NOTE

○*NOTE* indicates information that may help or guide you in the operation or service of the vehicle.

Kawasaki Heavy Industries, Ltd. accepts no liability for any inaccuracies or omissions in this publication, although every possible measure has been taken to make it as complete and accurate as possible. All procedures and specifications subject to change without notice.

Table of Contents

Uncrating	3
Opening Crate	3
Parts Check	6
Assembly	8
Steering Stem Head Bolt	8
Handlebar Weights	8
Windshield	8
Rider's Seat	9
Brake Disc Cleaning	9
French Labels (For Canada Model)	9
Preparation	9
Battery Service	9
Coolant	13
Front Brake	14
Rear Brake	16
Clutch Lever and Cable	17
Drive Chain	22
Front Fork	23
Rear Shock Absorber	24
Tire Air Pressures	25
Fuel	25
Engine Oil (4-stroke)	25
Throttle Grip and Cable	26
Rear Brake Light Switch	27
Idle Speed Adjustment	27
Headlight Aim	28
Digital Meter	29
Fastener Check	30
Standard Torque Table	32
Test Ride the Motorcycle	32
A & P Check List	32

Uncrating

Opening Crate

⚠ WARNING

Crates have sharp edges and may have nails or screws that can cause cuts and injury. Always wear protective gloves, boots and eye protection when uncrating to prevent injury.



MC03003B S

⚠ WARNING

The steel crate panel plates and fasteners have sharp edges. Always wear protective gloves, boots and eye protection when uncrating to prevent injury.




MC03004B S

- Clear a space about 6 m (20 ft) square to give yourself plenty of space to work.
- Place the crate upright on its base.
- Remove the cardboard cover.
- Remove the parts box.

NOTICE

When removing the crate bracket from the motorcycle, be careful not to drop any parts or the bracket onto the fuel tank and other components, and not to scratch the fuel tank or other components with the crate bracket.

- First, remove the lower bolt (D = 22, L = 10) (1) at the steering stem and discard it.
- Remove the upper bolts (D = 8, L = 12) (2) to take off the crate bracket and discard them.

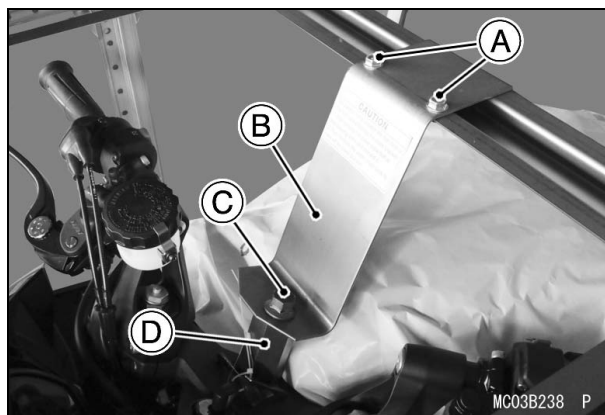

A. Upper Bolts (D = 8, L = 12)

B. Crate Bracket

C. Lower Bolt (D = 22, L = 10)


D. Dummy Bolt

- Take out all the bolts and screws and remove the top and sides of the crate.

NOTE

○ Remove the dummy bolt after rolling the vehicle off the crate base.

- Remove the lower support bracket bolts (D = 8, L = 12) on the left and right sides and discard them.
- Lift the vehicle upward about 10 cm (4 in.) and remove the lower support brackets and rubber washers (D = 11.5 × 30) on the left and right sides. Roll the vehicle off the crate base.

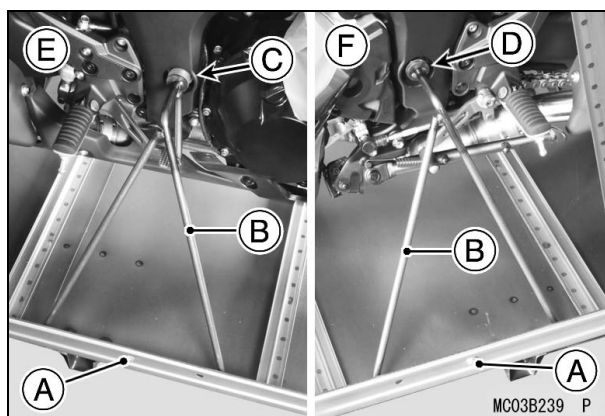

A. Lower Support Bracket Bolt (D = 8, L = 12)

B. Lower Support Bracket

C. Rubber Washers (D = 11.5 × 30) (4)

D. Rubber Washer (D = 11.5 × 30) (1)

E. Right Side

F. Left Side

4 UNCRATING

<i>NOTICE</i>
When rolling the vehicle off the crate base, sharp edges on the crate can cut or damage tires. Cover sharp edges with waste cloth for tire protection as necessary.

- Remove the dummy bolt and discard it.

NOTE


- *Do not remove the flat washer (D = 27) under the dummy bolt.*

This page intentionally left blank.

6 UNCRATING

Parts Check

- Open the parts box, and check the parts against the illustrations. There may be minor differences between these illustrations and the actual vehicle parts. In the following charts under Remarks, D = diameter in millimeters, and L = length in millimeters.

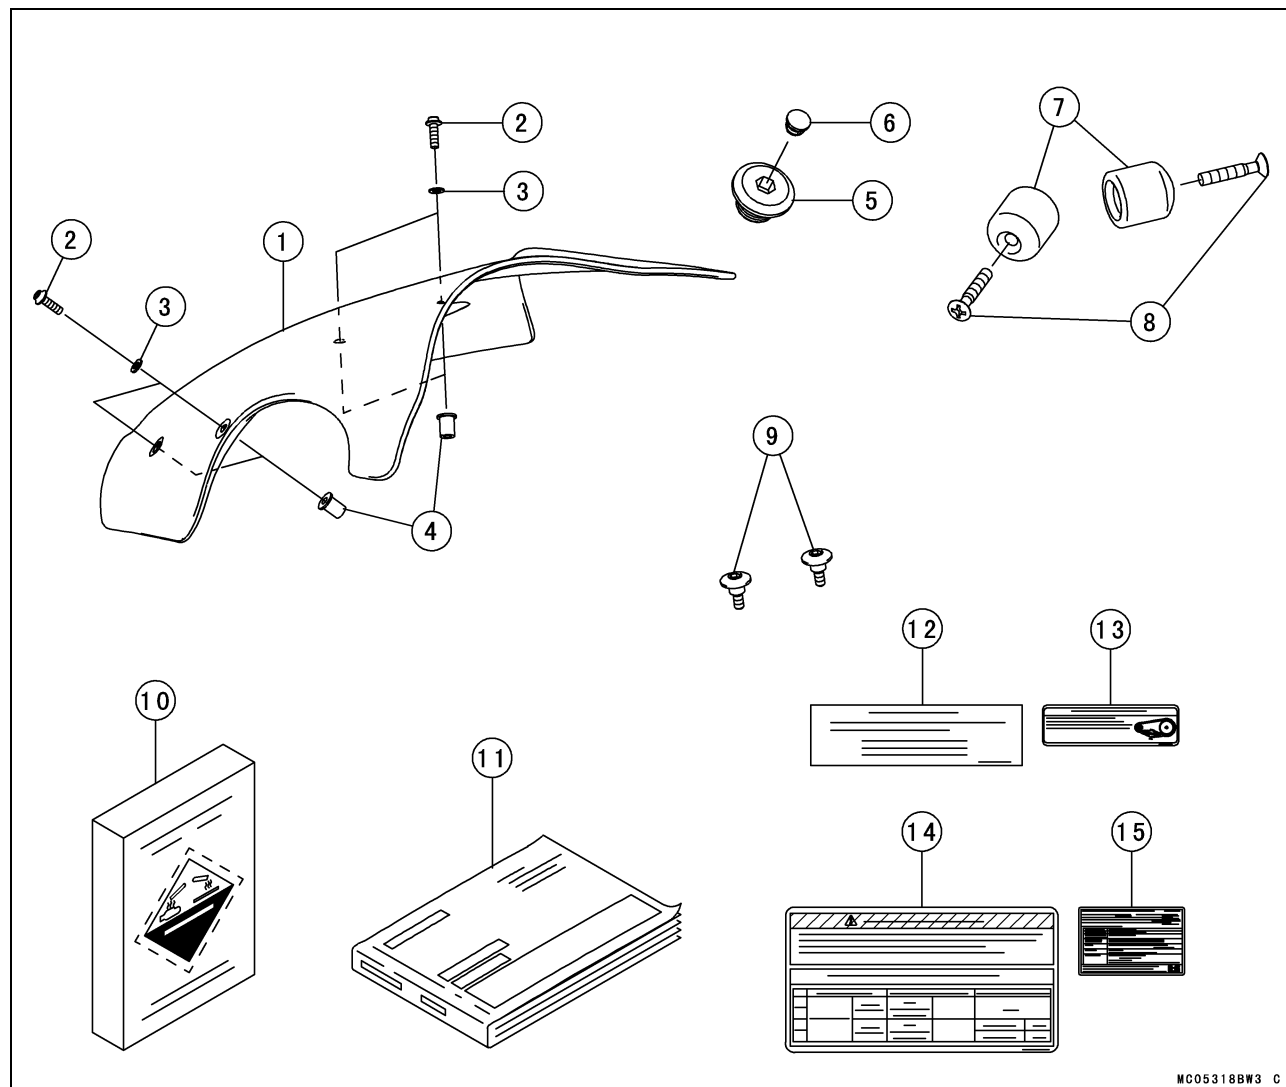

No.	Part Name	Qty	Remarks
1	Windshield	1	
2	Socket Bolt, Windshield	4	D = 5, L = 18
3	Plastic Washer, Windshield	4	D = 5.2 × 10
4	Wellnut, Windshield	4	D = 5
5	Steering Stem Head Bolt	1	D = 26, L = 18
6	Plastic Plug	1	
7	Handlebar Weight	2	
8	Weight Screw with a Non-permanent Locking Agent	2	D = 8, L = 45
9	Socket Bolt, Rider's Seat	2	D = 6, L = 20
10	Battery Electrolyte, YTX9-BS	1	12 V 10 Ah
11	Owner's Manual	1	
	(French Label for Canada Model only)		
12	French Table	1	
13	Important Drive Chain Information	1	
14	Tire and Load Data	1	
15	Vehicle Emission Control Information	1	


Assembly

Steering Stem Head Bolt

- Install the steering stem head bolt (D = 26, L = 18) on the flat washer and tighten the bolt to the specified torque.

Torque: 110 N·m (11.2 kgf·m, 81.1 ft·lb)


- Install the plastic plug into the steering stem head bolt.

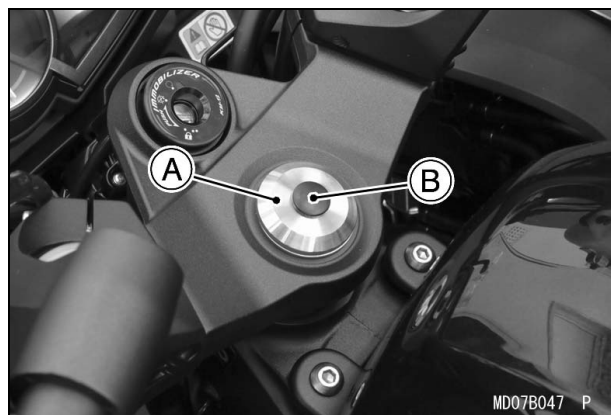

A. Steering Stem Head Bolt (D = 26, L = 18)
B. Plastic Plug

Handlebar Weights


- Install both handlebar weights on the left and right end of the handlebar with the screws (D = 8, L = 45) with a non-permanent locking agent and tighten them.

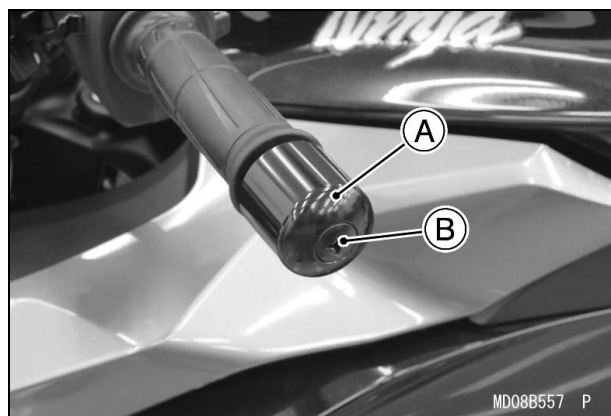

A. Handlebar Weight (Left)
B. Screw (D = 8, L = 45)


Windshield

- Fit the four wellnuts (D = 5) into the windshield bracket holes from the outside with their flanges out.

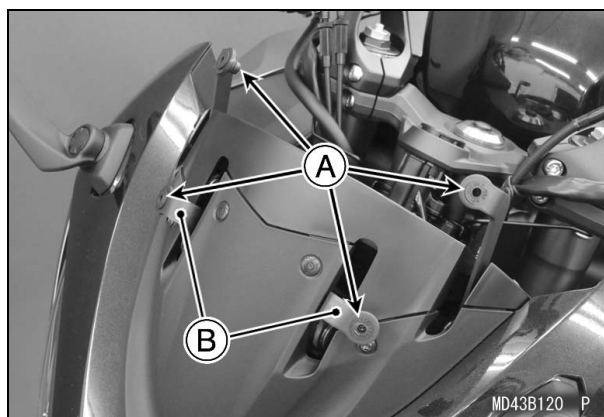

A. Wellnuts (D = 5)
B. Windshield Brackets

- Install and tighten the four plastic washers (D = 5.2 × 10) and the bolts (D = 5, L = 16) on the windshield securely.

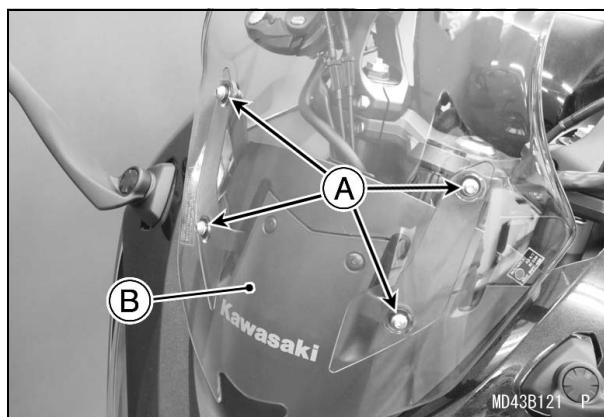


A. Plastic Washers (D = 5.2 × 10) and Bolts (D = 5, L = 16)
B. Windshield

Windshield Height Adjustment


The windshield can be adjusted within 3 positions in height to suit the rider's preference.

- Hold the windshield by the hand.
- Adjust the windshield mounting positions while pushing the knob located the lower side of the meter cover.

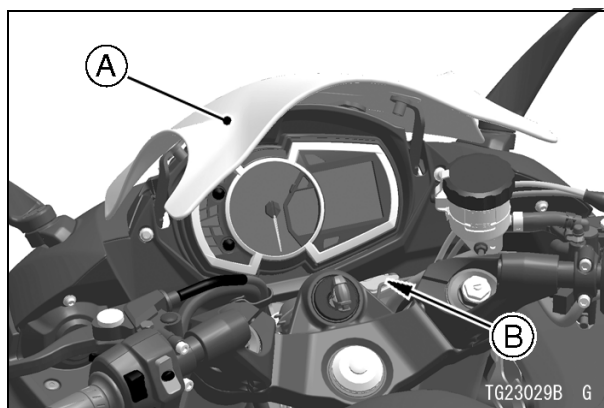

A. Windshield
B. Knob

- Align the mark of the meter cover and the groove of the windshield bracket.

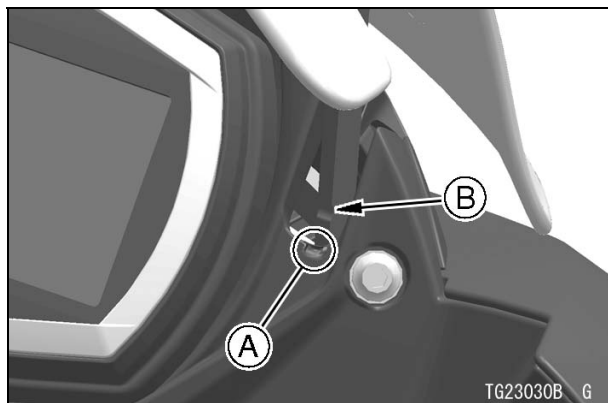

A. Mark

B. Groove

- Return the knob to the original position.
- Be sure the windshield is fixed securely.

Rider's Seat

NOTE


○ Install the rider's seat mounting bolts in the "Battery Service" section in the PREPARATION chapter.

Brake Disc Cleaning

- Clean the front and rear brake discs using oilless solvent.

⚠ WARNING

An anticorrosive treatment applied to the brake discs will increase braking distance and can cause an accident resulting in serious injury or death. Remove the anticorrosive treatment using an oilless solvent.

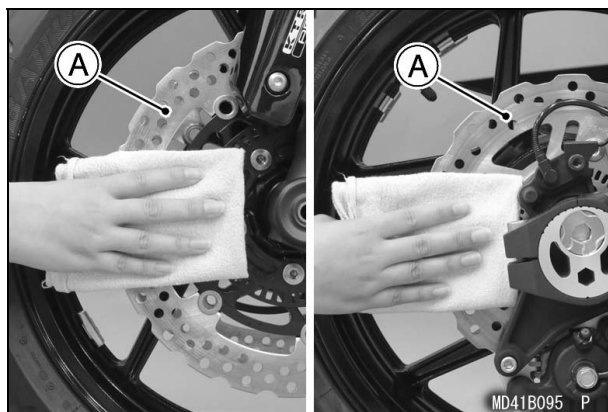


A. Brake Disc

French Labels (For Canada Model)


When required, apply French labels in the parts bag over English labels on the vehicle.

- Wipe off any oil or grease from English labels. Refer to the following figures for the label locations.
- Peel each label in the parts bag off the backing sheet and apply it over English label.

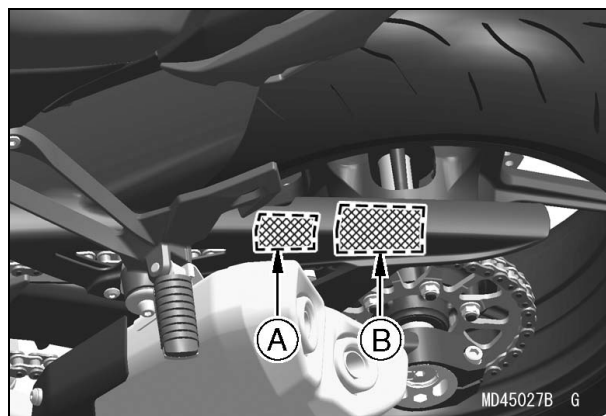

A. Important Drive Chain Information

B. Tire and Load Data

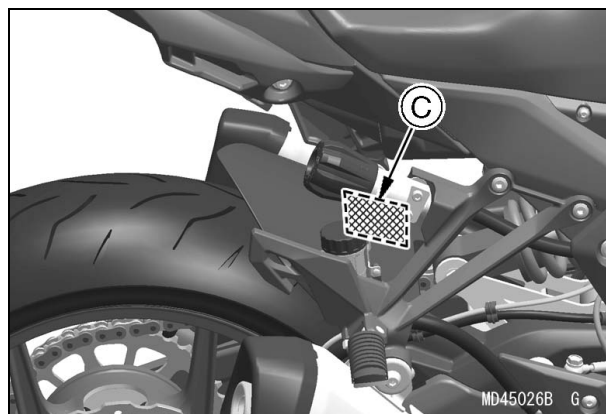

C. Vehicle Emission Control Information Label

Preparation


Battery Service

The battery used in this motorcycle is a sealed type and never needs to be refilled. Follow the procedure for activating a new battery to ensure the best possible battery performance.

Battery Removal

- Insert the ignition key into the seat lock.
- Lift the front of passenger's seat while turning the key clockwise.

10 PREPARATION

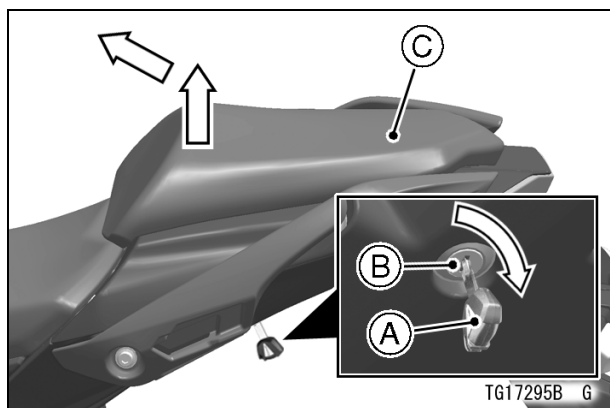

- A. Ignition Key
- B. Seat Lock
- C. Passenger's Seat

- Remove the rider's seat and the battery.
- Clean the battery terminals.


Battery Activation

Electrolyte Filling

- Make sure that the model name of the electrolyte container matches the model name of the battery. These names must be the same.

Battery Model Name

ZX1000W: YTX9-BS

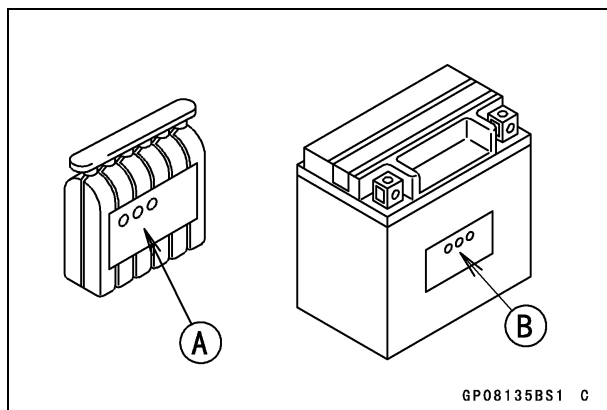

- A. Model Name of the Electrolyte
- B. Model Name of the Battery

NOTICE

Each battery comes with its own specific electrolyte container; using the wrong container may overfill the battery with incorrect electrolyte, which can shorten battery life and deteriorate battery performance. Be sure to use the electrolyte container with the same model name as the battery since the electrolyte volume and specific gravity vary with the battery type.

NOTICE

Do not remove the aluminum sealing sheet from the filler ports until just prior to use. Be sure to use the dedicated electrolyte container for correct electrolyte volume.


⚠ DANGER

Sulfuric acid in battery electrolyte can cause severe burns. To prevent burns, wear protective clothing and safety glasses when handling electrolyte. If the electrolyte comes in contact with your skin or eyes, wash the area with liberal amounts of water and seek medical attention for more severe burns.

- Place the battery on a level surface.
- Check to see that the sealing sheet has no peeling, tears, or holes in it.
- Remove the sealing sheet.

NOTE

- *The battery is vacuum sealed. If the sealing sheet has leaked air into the battery, it may require a longer initial charge.*

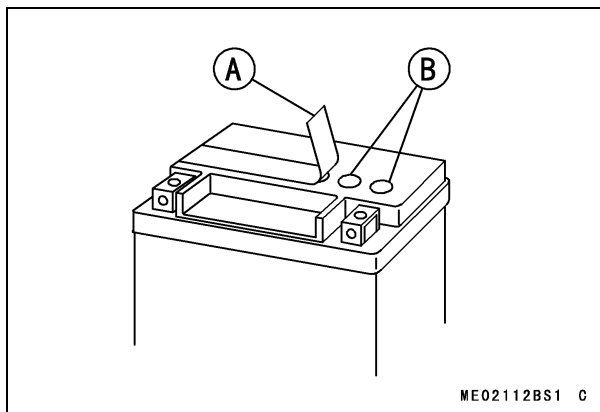


- A. Sealing Sheet
- B. Filler Ports

- Remove the electrolyte container from the vinyl bag.
- Detach the strip of caps from the container and set aside, these will be used later to seal the battery.

NOTE

- *Do not pierce or otherwise open the sealed cells of the electrolyte container. Do not attempt to separate individual cells.*

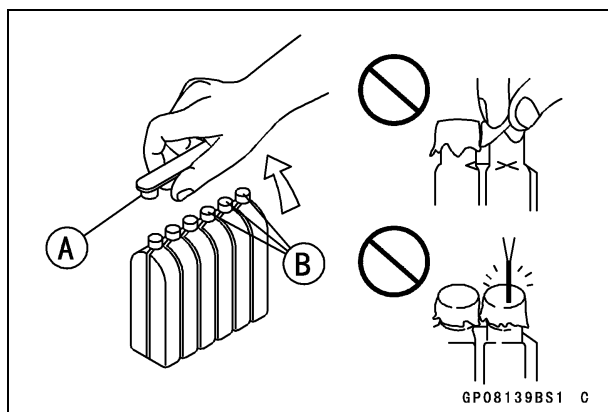


A. Strip of Caps

B. Sealed Cells

- Place the electrolyte container upside down with the six sealed cells into the filler ports of the battery. Hold the container level, push down to break the seals of all six cells. You will see air bubbles rising into each cell as the ports fill.

NOTE


- Do not tilt the electrolyte container.

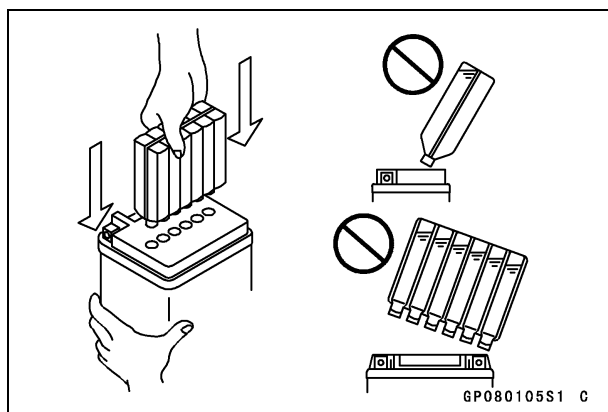

- Check the electrolyte flow.
- If no air bubbles are coming up from the filler ports, or if the container cells have not emptied completely, tap the container a few times.

NOTE

- Be careful not to have the battery fall down.

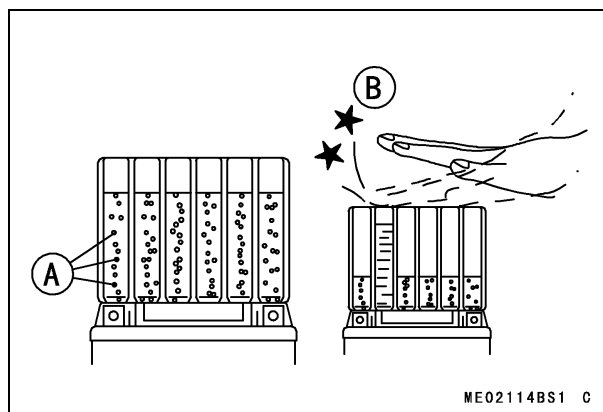

A. Air Bubbles


B. Tap the Container

- Keep the container in place. Don't remove the container from the battery, the battery requires all the electrolyte from the container for proper operation.

NOTICE


Removal of the container before it is completely empty can shorten the service life of the battery. Do not remove the container until it is completely empty.

- After filling, let the battery sit for 20 ~ 60 minutes with the electrolyte container kept in place, which is required for the electrolyte to fully permeate into the plates.
- Make sure that the container cells have emptied completely, and remove the container from the battery.
- Place the strip of caps loosely over the filler ports, press down firmly with both hands to seat the strip of caps into the battery (don't pound or hammer). When properly installed, the strip of caps will be level with the top of the battery.

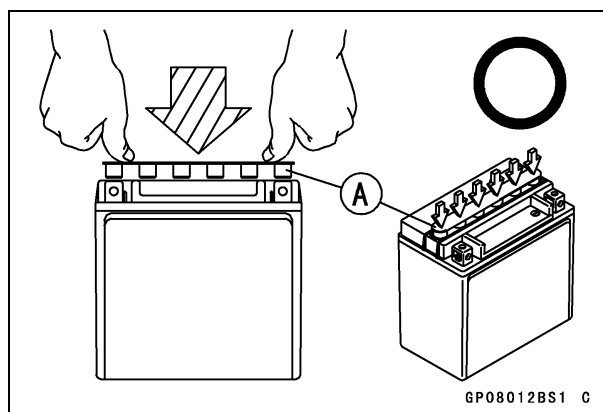

A. Strip of Caps

12 PREPARATION

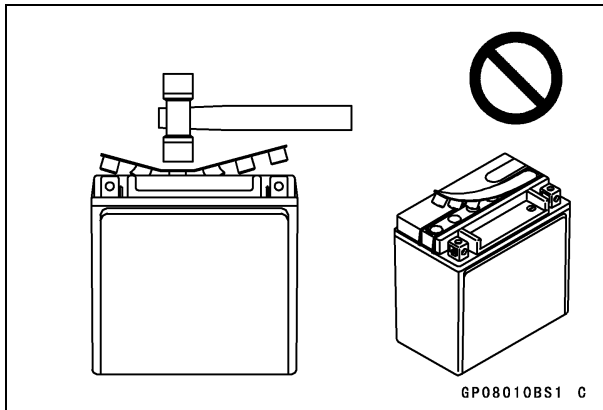

NOTICE

Once the strip of caps is installed onto the battery, never remove the caps, nor add water or electrolyte to the battery.

NOTE

- Charging the battery immediately after filling can shorten service life.

Initial Charge

- Newly activated sealed batteries require an initial charge.

Standard Charge: 1.2 A × 5 ~ 10 hours

- If using a recommended battery charger, follow the charger's instructions for newly activated sealed battery.

Kawasaki-recommended chargers:

Battery Mate 150-9

OptiMate PRO 4-S/PRO S/PRO 2

Yuasa MB-2040/2060

Christie C10122S


- If the above chargers are not available, use equivalent one.
- Let battery sit 30 minutes after initial charge, then check voltage using a voltmeter. (Voltage immediately after charging becomes temporarily high. For accurate measuring, let the battery sit for given time.)

NOTE

- Charging rates will vary depending on how long the battery has been stored, temperature, and the type of charger used. If voltage is not at least 12.8 volts, repeat charging cycle.
- To ensure maximum battery life and customer satisfaction, it is recommended the battery be load tested at three times its amp-hour rating for 15 seconds.
Re-check voltage and if less than 12.8 volts repeat the charging cycle and load test. If still below 12.8 volts the battery is defective.

Battery Installation

- Turn the ignition switch off.
- Place the battery upright on the battery case with the terminal faces the right.
- Connect the red capped positive (+) cable to the positive (+) terminal first.
- Then connect the negative (–) cable to the negative (–) terminal
- Put a light coat of grease on the terminals to prevent corrosion.
- Cover the positive (+) terminal with the red cap.

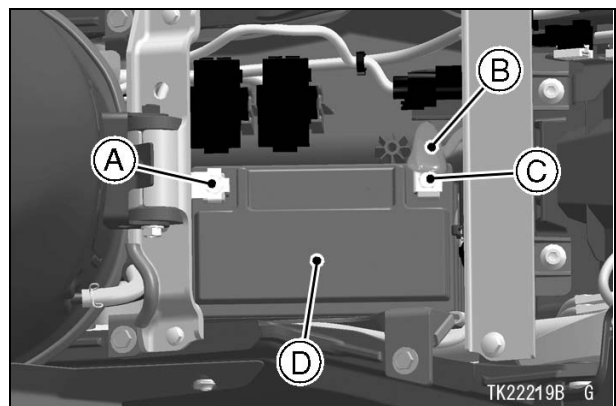

A. Negative (–) Terminal


B. Red Cap

C. Positive (+) Terminal

D. Battery

Rider's Seat Installation

- Insert the tabs on the front of the rider's seat to the slot under the fuel tank bracket.

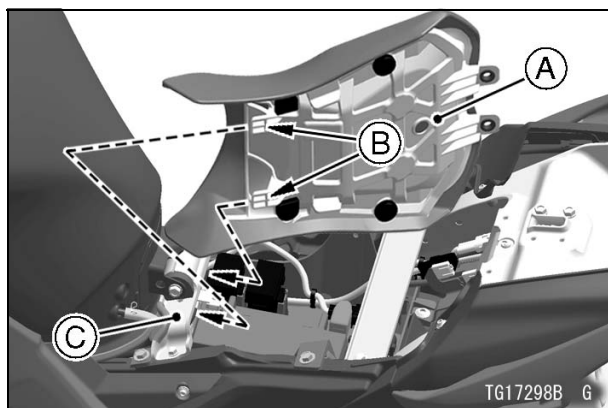


A. Rider's Seat

B. Tabs

C. Fuel Tank Bracket

- Tighten the two rider's seat mounting bolts (D = 6, L = 20) (2).

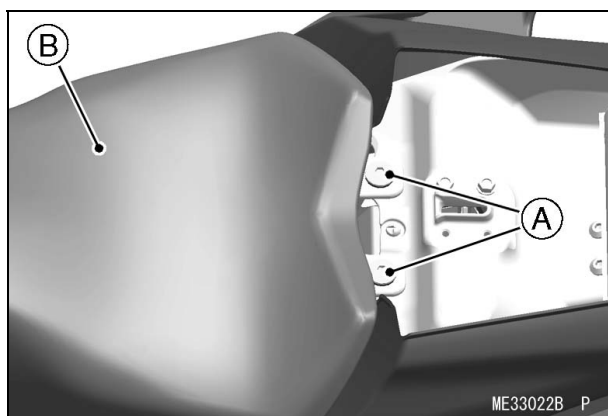


A. Rider's Seat Mounting Bolts (D = 6, L = 20)

B. Rider's Seat

Passenger's Seat Installation

- Insert the tab on the rear of the passenger's seat into the slot in the frame bracket.
- Insert the hook at the front of the passenger's seat into the hole on the frame.

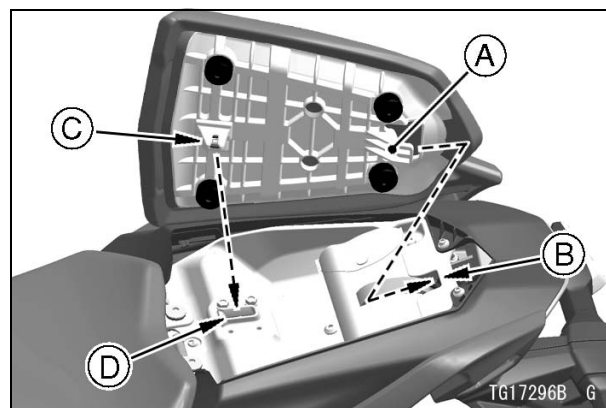

A. Tab

B. Slot

C. Hook

D. Hole

- Push down the front part of the passenger's seat until the lock clicks.
- Pull up the front and rear ends of the passenger's seat to make sure they are securely locked.

NOTE

- If there is difficulty removing the ignition key from the seat lock, turn it lightly counterclockwise while pulling it out.

Coolant


Coolant Level Inspection

- Position the motorcycle so that it is perpendicular to the ground.
- Check the coolant level through the coolant level gauge on the reserve tank located to the behind of the engine. The coolant level should be between the F (Full) and L (Low) level lines.

NOTE

- Check the level when the engine is cold (room or atmospheric temperature).

14 PREPARATION

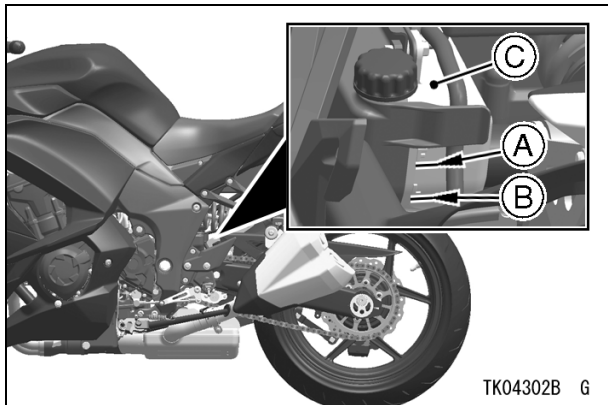

A. F (Full) Level Line


B. L (Low) Level Line

C. Reserve Tank

- If the amount of coolant is insufficient, add coolant into the reserve tank.

Coolant filling

- Remove the cap from the reserve tank and add coolant through the filler opening to the F (Full) level line.

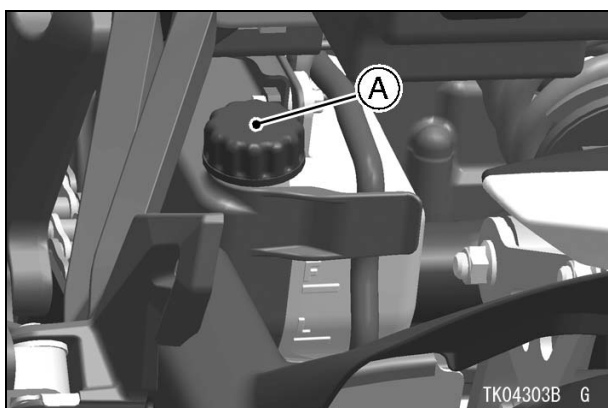

A. Reserve Tank Cap

- Install the reserve tank cap.


NOTE

○A permanent type of antifreeze is installed in the cooling system when shipped. It is mixed at 50% and has the freezing point of -35°C (-31°F).

Front Brake

Front Brake Fluid Level Inspection

- With the front brake fluid reservoir held horizontal, check that the fluid level is between the upper and lower level lines.

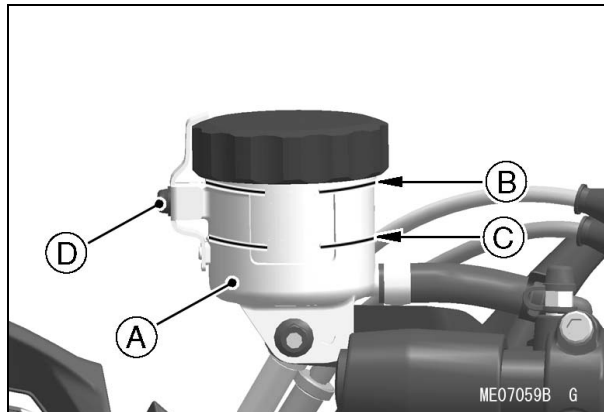

A. Front Brake Fluid Reservoir

B. Upper Level Line

C. Lower Level Line

D. Reservoir Cap Stopper Screw

- If the fluid level in the reservoir is lower than the lower level line, check for fluid leaks in the front brake lines and fill the reservoir.
- Loosen the reservoir cap stopper screw to remove the front brake fluid reservoir cap and diaphragm.
- Fill the reservoir to the upper level line with DOT4 brake fluid, reinstall the diaphragm and reservoir cap.


⚠ WARNING

When working with the disc brake, observe the precautions listed below.

- Never reuse old brake fluid.
- Do not use fluid from a container that has been left unsealed or that has been open for a long time.
- Do not mix two types and brands of fluid for use in the brake. This lowers the brake fluid boiling point and could cause the brake to be ineffective. It may also cause the rubber brake parts to deteriorate.
- Do not leave the reservoir cap off for any length of time to avoid moisture contamination of the fluid.
- Do not change the fluid in the rain or when a strong wind is blowing.
- Brake fluid quickly damages painted surfaces; any spilled fluid should be completely wiped up immediately.
- If any of the brake line fittings or the bleed valve is opened at any time, the **AIR MUST BE BLED FROM THE BRAKE LINE.**

NOTE

- First, tighten the front brake fluid reservoir cap clockwise by hand until slight resistance is felt indicating that the cap is seated on the reservoir body, then tighten the cap an additional 1/6 turn while holding the brake fluid reservoir body.

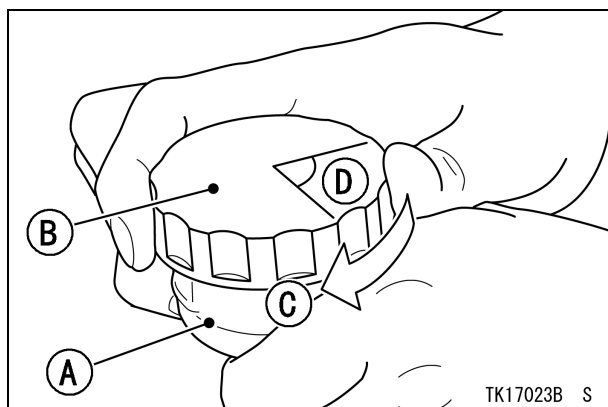

- A. Reservoir
- B. Cap
- C. Clockwise
- D. 1/6 turn

- Operate the brake lever several times.
- If it feels spongy, there might be air in the brake line.
- If necessary, bleed the air in the front brake line.
- Also check for fluid leakage around the fittings.


Brake Line Air Bleeding

- Loosen the cap stopper screw to remove the front brake fluid reservoir cap and diaphragm, and check that there is plenty of fluid in the reservoir.

NOTE

- The fluid level must be checked several times, during the bleeding operation and replenished as necessary. If the fluid in the reservoir runs completely out any time during bleeding, the bleeding operation must be repeated from the beginning since air will have entered the line.

- Attach a clear plastic hose to the bleed valve on the front master cylinder and run the other end of the hose into a container.
- With the reservoir cap off, slowly pump the brake lever several times until no air bubbles can be seen rising up through the fluid from the holes at the bottom of the reservoir. This bleeds the air from the brake master cylinder end of the line.
- Pump the brake lever a few times until it becomes hard and then, holding the lever squeezed, quickly open (turn counterclockwise) and close the bleed valve. Then release the lever. Repeat this operation until no more air can be seen coming out into the plastic hose.

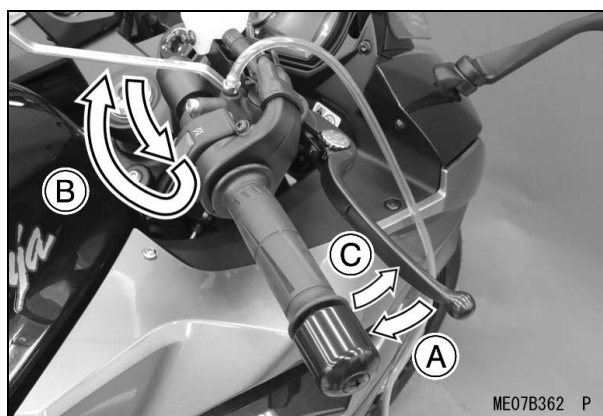


- A. Hold the brake lever applied.
- B. Quickly open and close the bleed valve on the front master cylinder.
- C. Release the brake lever.

- Tighten the bleed valve to the specified torque.

Torque: 5.4 N·m (0.55 kgf·m, 48 in·lb)

- Attach a clear plastic hose to the bleed valve on each front brake caliper and run the other end of the hose into a container.
- With the reservoir cap off, slowly pump the brake lever several times until no air bubbles can be seen rising up through the fluid from the holes at the bottom of the reservoir. This bleeds the air from the brake master cylinder end of the line.
- Pump the brake lever a few times until it becomes hard and then, holding the lever squeezed, quickly open (turn counterclockwise) and close the bleed valve. Then release the lever. Repeat this operation until no more air can be seen coming out into the plastic hose.

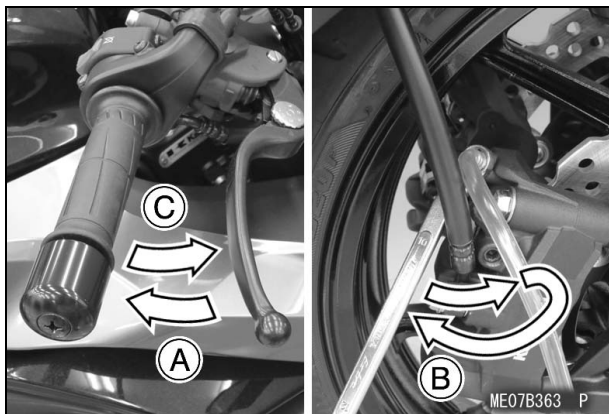

- A. Hold the brake lever applied.**
- B. Quickly open and close the bleed valve on the front brake caliper.**
- C. Release the brake lever.**

- Repeat the previous step one more time for the other front disc brake.
- When air bleeding is finished, check that the fluid level is between the upper and lower level lines.
- Reinstall the diaphragm and reservoir cap.
- Tighten the bleed valve(s) to the specified torque.

Torque: 8.0 N·m (0.82 kgf·m, 71 in·lb)

- Tighten the reservoir cap stopper screw to the specified torque.


Torque: 1.5 N·m (0.15 kgf·m, 13 in·lb)

- Apply the brake forcefully for a few seconds, and check for fluid leakage around the fittings.

Rear Brake

Rear Brake Fluid Level Inspection

- With the rear brake fluid reservoir held horizontal, check that the fluid level is between the upper and lower level lines.

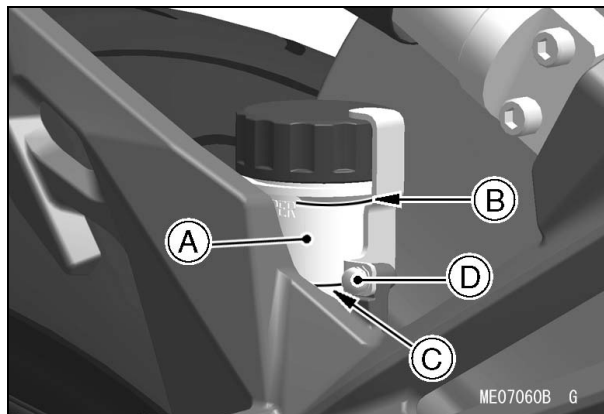

- A. Rear Brake Fluid Reservoir**
- B. Upper Level Line**
- C. Lower Level Line**
- D. Reservoir Cap Stopper Screw**


- If the fluid level in the reservoir is lower than the lower level line, check for fluid leaks in the brake line, and fill the reservoir.
- Loosen the reservoir cap stopper screw to remove the reservoir cap and diaphragm.
- Fill the reservoir to the upper level line with DOT4 brake fluid, reinstall the diaphragm and reservoir cap.

NOTICE

Brake fluid quickly damages painted surfaces. Wipe up any spilled fluid immediately.

NOTE

- First, tighten the rear brake fluid reservoir cap clockwise by hand until slight resistance is felt indicating that the cap is seated on the reservoir body, then tighten the cap an additional 1/6 turn while holding the brake fluid reservoir body.

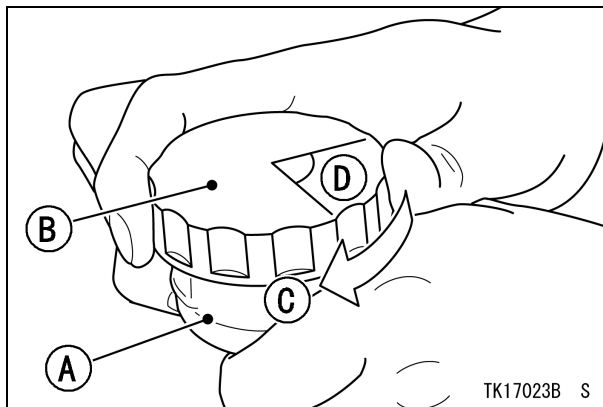

- A. Rear Brake Fluid Reservoir**
- B. Reservoir Cap**
- C. Clockwise**
- D. 1/6 turn**


- Operate the brake pedal several times.
- If it feels spongy, there might be air in the brake line.
- If necessary, bleed the air in the rear brake line.
- Also check for fluid leakage around the fittings.

Brake Line Air Bleeding

- Loosen the reservoir cap stopper screw to remove the rear brake reservoir cap and diaphragm, and check that there is plenty of fluid in the reservoir.

NOTE

- *The fluid level must be checked several times, during the bleeding operation and replenished as necessary. If the fluid in the reservoir runs completely out any time during bleeding, the bleeding operation must be repeated from the beginning since air will have entered the line.*
- Attach a clear plastic hose to the bleed valve on the rear brake caliper and run the other end of the hose into a container.
- With the reservoir cap off, slowly pump the brake pedal several times until no air bubbles can be seen rising up through the fluid from the holes at the bottom of the reservoir. This bleeds the air from the rear brake master cylinder end of the line.
- Pump the brake pedal a few times until it becomes hard and then, holding the pedal pushed down, quickly open (turn counter-clockwise) and close the bleed valve. Then release the pedal. Repeat this operation until no more air can be seen coming out into the plastic hose.

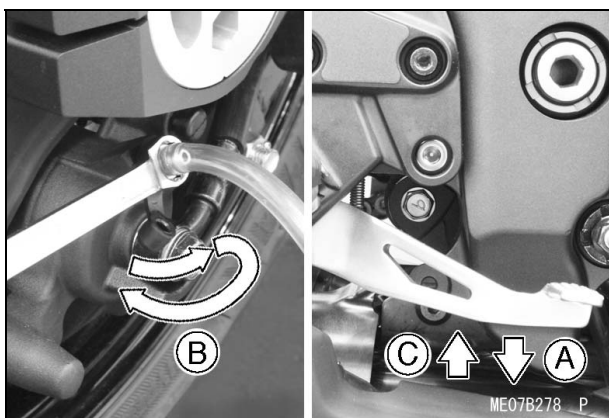

- A. Hold the brake pedal applied.**
- B. Quickly open and close the bleed valve on the rear brake caliper.**
- C. Release the brake pedal.**

- When air bleeding is finished, check that the fluid level is between the upper and lower level lines.
- Tighten the bleed valve to the specified torque.

Torque: 8.0 N·m (0.82 kgf·m, 71 in·lb)

- Reinstall the diaphragm and reservoir cap.

NOTE

- *First, tighten the rear brake fluid reservoir cap clockwise by hand until slight resistance is felt indicating that the cap is seated on the reservoir body, then tighten the cap an additional 1/6 turn while holding the brake fluid reservoir body.*

- Tighten the reservoir cap stopper screw.

Torque: 1.5 N·m (0.15 kgf·m, 13 in·lb)

- Apply the brake forcefully for a few seconds, and check for fluid leakage around the fittings.


Clutch Lever and Cable

Clutch Lever Free Play Inspection

- Check that the clutch lever has the specified amount of free play as shown.

Clutch Lever Free Play:

2 ~ 3 mm (0.08 ~ 0.12 in.)

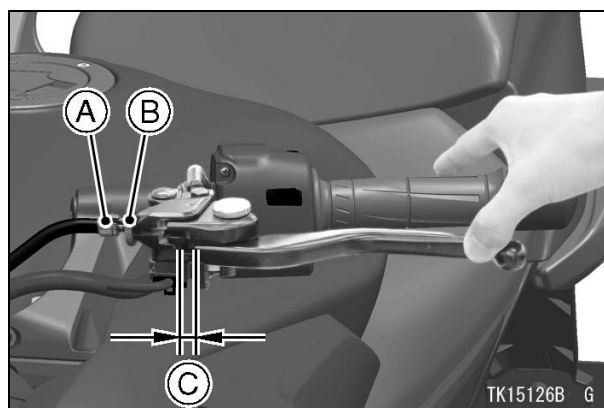

A. Adjuster

B. Locknut


C. Free Play: 2 ~ 3 mm (0.08 ~ 0.12 in.)

- If the free play is incorrect, adjust the lever free play.

18 PREPARATION


Clutch Lever Free Play Adjustment

- Turn the adjuster so that the clutch lever will have 2 ~ 3 mm (0.08 ~ 0.12 in.) of free play.
- If it cannot be done at the clutch lever, remove the right lower fairing assembly to use the adjusting nuts of the clutch cable lower end.
- Remove the middle fairing bolt and quick rivet.

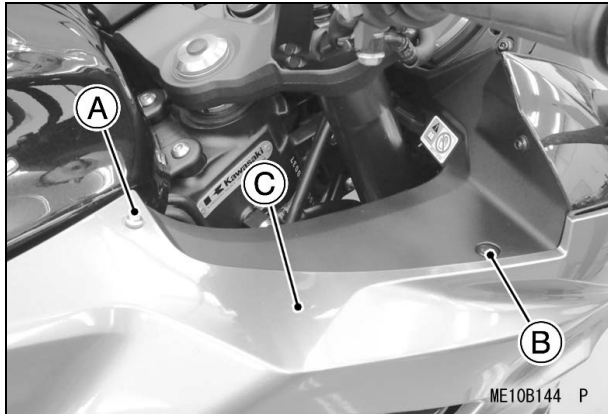


- A. Middle Fairing Bolt**
- B. Quick Rivet**
- C. Right Middle Fairing**

- Clear the projections of the right middle fairing from the grommets.
- Pull the right middle fairing forward to clear the hooks from the upper fairing.
- Remove the right middle fairing.

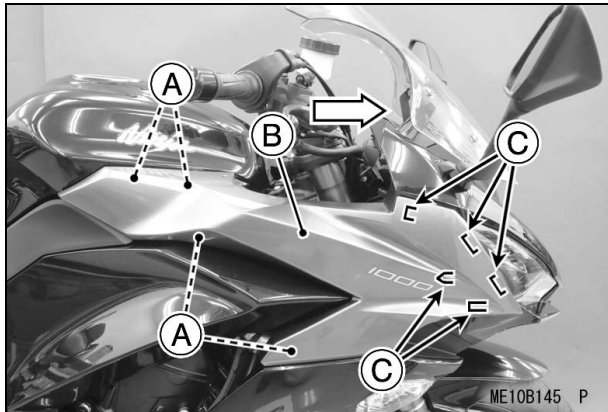


- A. Projections**
- B. Right Middle Fairing**
- C. Hooks**

- Remove the side cover bolt (front) with washer.
- Remove the side cover bolt (rear) with washer.
- Pull the right side cover outward to clear the projections.

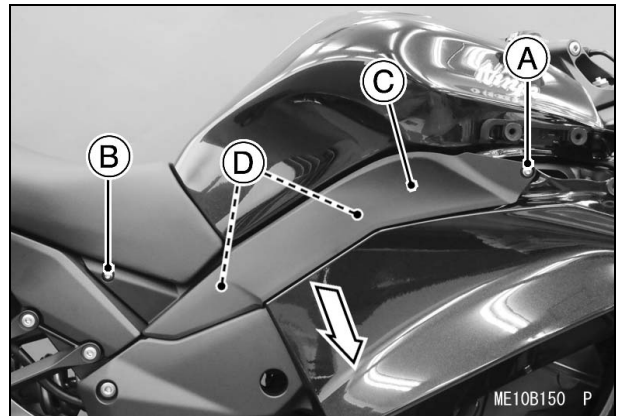



- A. Side Cover Bolt (Front) with Washer**
- B. Side Cover Bolt (Rear) with Washer**
- C. Right Side Cove**
- D. Projections**

- Remove the bolt.
- Pull the rear lower fairing outward to clear the projection.
- Pull the rear lower fairing downward to clear the projection.

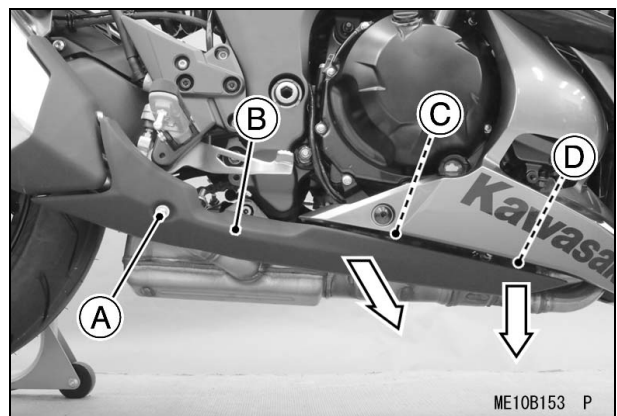


- A. Bolt**
- B. Right Rear Lower Fairing**
- C. Projection**
- D. Projection**

- Remove the quick rivets.

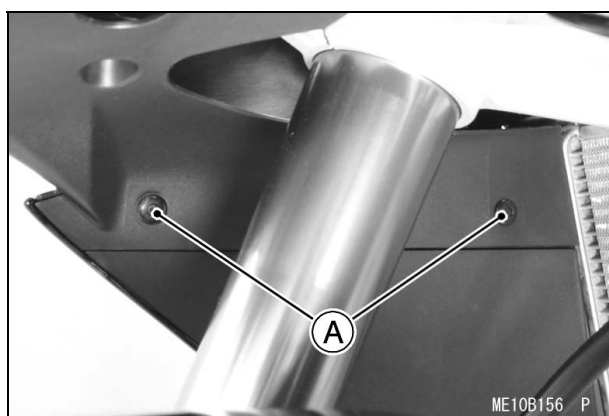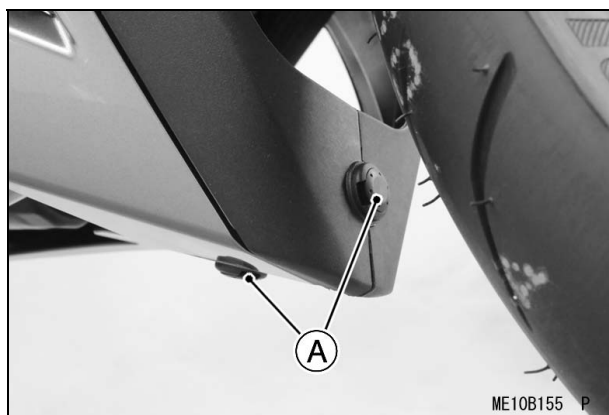


A. Quick Rivets

- Remove the bolt.

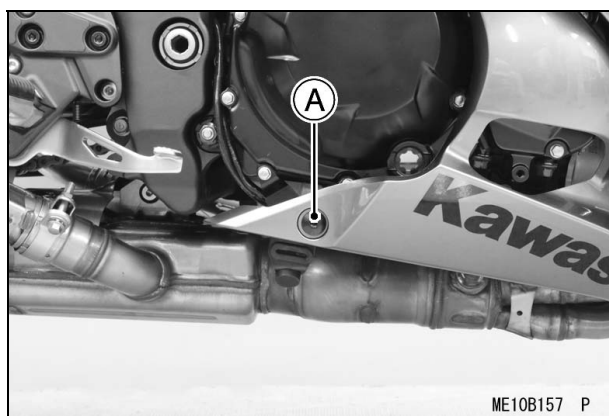


A. Bolt

- Disconnect the right turn signal light lead connector.
- Remove the right turn signal light lead connector from right lower fairing.
- Remove the lower fairing bolts (front) with washer.
- Remove the lower fairing bolt (rear).

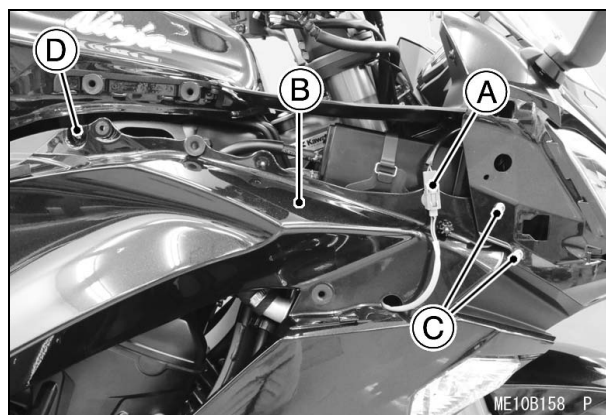


- A. Right Turn Signal Light Lead Connector
- B. Right Lower Fairing
- C. Lower Fairing Bolts (Front) with Washer
- D. Lower Fairing Bolt (Rear)

- Pulling out the right lower fairing to clear the projection.
- Remove the hook (rear) from the frame.
- Pull the right lower fairing rearward to clear the hooks (front).
- Remove the right lower fairing.

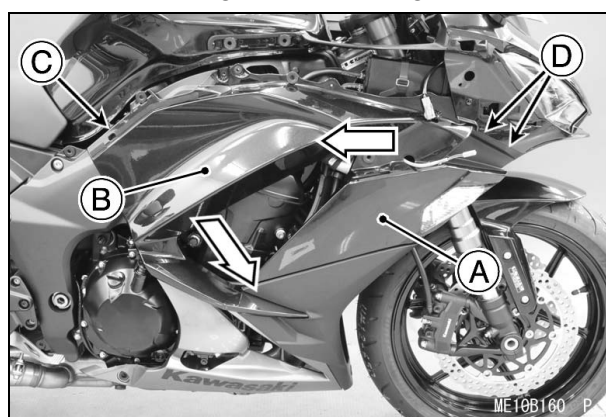

- A. Right Lower Fairing
- B. Projection
- C. Hook (Rear)
- D. Hooks (Front)


- Turn the adjusting nuts so that the clutch lever will have 2 ~ 3 mm (0.08 ~ 0.12 in.) of free play.

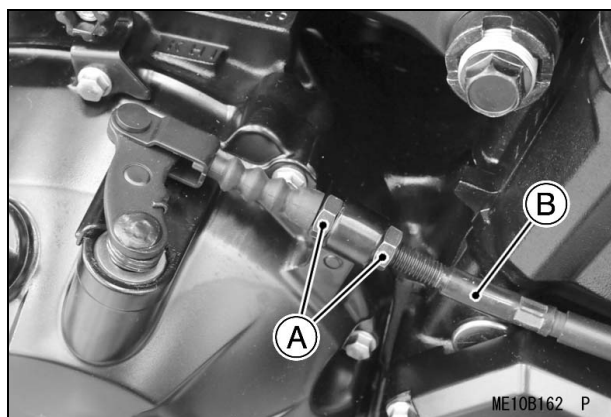

A. Adjusting Nuts

B. Clutch Cable


- Insert the hooks of the right lower fairing into the hooks of the upper fairing.

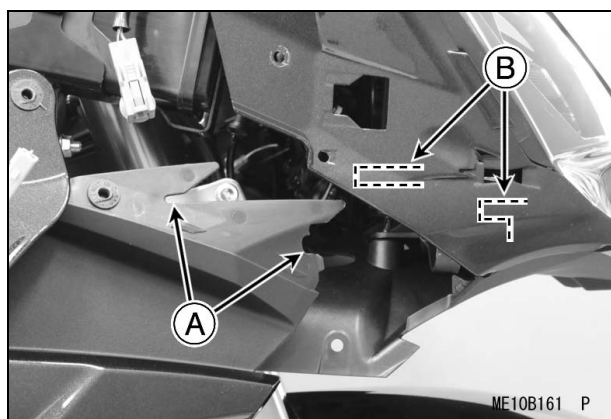

A. Hooks

B. Hooks

- Hang the hook to the frame.

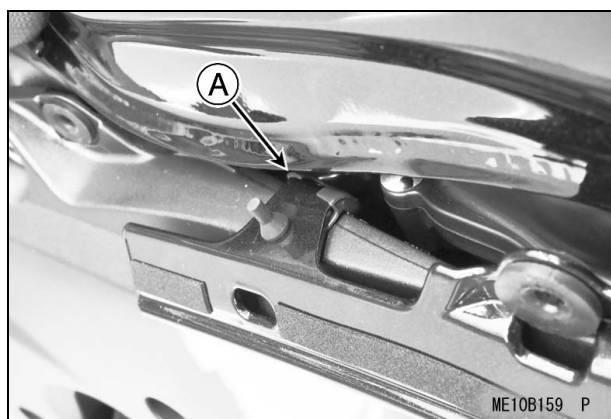

A. Hook


- Insert the projection into the grommet.
- Tighten the lower fairing bolt (front) to the specified torque.

Torque: 0.50 N·m (0.05 kgf·m, 4.4 in·lb)

- Tighten the lower fairing bolt (rear) to the specified torque.

Torque: 3.0 N·m (0.31 kgf·m, 27 in·lb)

- Install the right turn signal light lead connector to right lower fairing.
- Connect the right turn signal light lead connector.

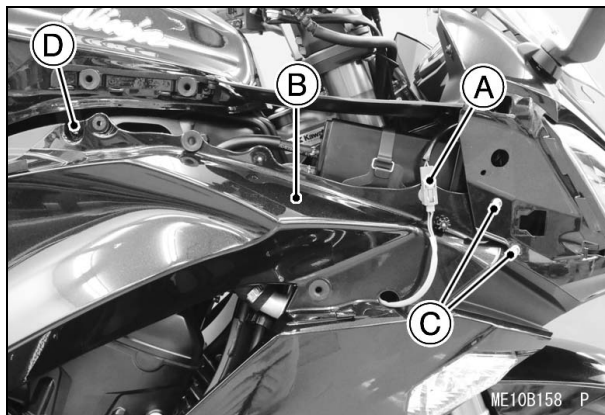


A. Right Turn Signal Light Lead Connector

B. Right Lower Fairing

C. Lower Fairing Bolts (Front)

D. Lower Fairing Bolt (Rear)

- Check that the grommets are in place.
- Insert the projections into the grommets.
- Tighten the bolt.

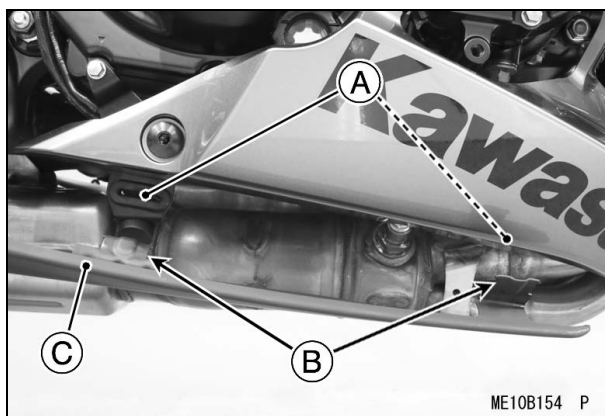


A. Grommets

B. Projections


C. Rear Lower Fairing

- Check that the grommets are in place.
- Insert the projections into the grommets and hole.

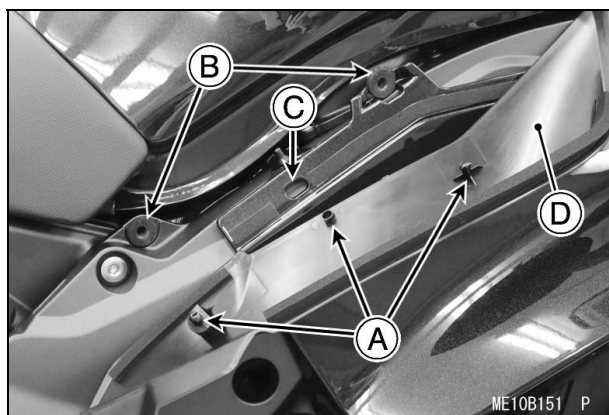


- A. Projections**
- B. Grommets**
- C. Hole**
- D. Right Side Cover**

- Tighten the bolt (front) with washer to the specified torque.
Torque: 0.50 N·m (0.05 kgf·m, 4.4 in·lb)
- Tighten the bolt (rear) with washer to the specified torque.
Torque: 3.0 N·m (0.31 kgf·m, 27 in·lb)
- Check that the grommets and damper are in place.

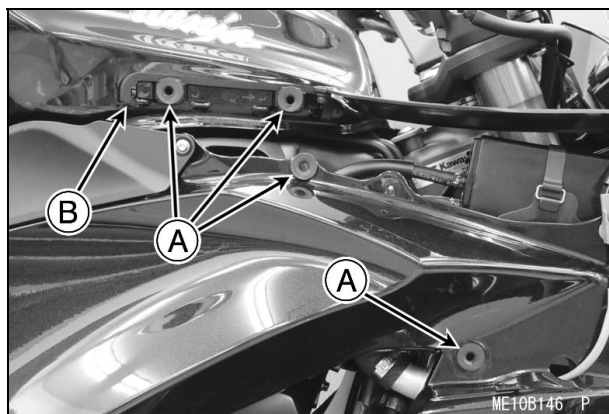


- A. Grommets**
- B. Damper**

- Insert the hooks of the right middle fairing into the holes.
- Slide the right middle fairing rearward to fit the hooks.

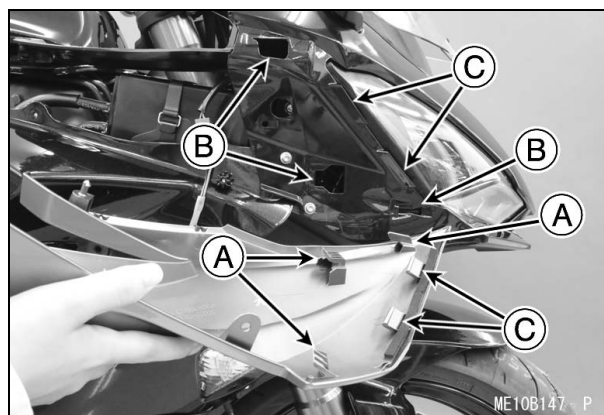

- A. Hooks**
- B. Holes**
- C. Hooks**


- Insert the projections of the right middle fairing into the grommets.

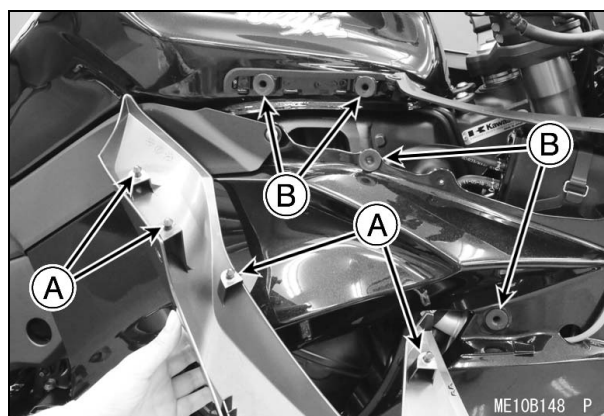

- A. Projections**
- B. Grommets**

- Insert the meter cover between right middle fairing and tab.
- Install the quick river.
- Tighten the middle fairing bolt to the specified torque.

Torque: 0.50 N·m (0.05 kgf·m, 4.4 in·lb)

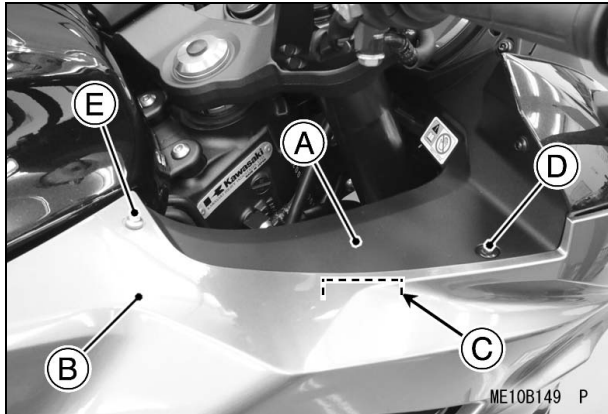

- A. Meter Cover
- B. Right Middle Fairing
- C. Tab
- D. Quick Rivet
- E. Middle Fairing Bolt

Drive Chain

Drive Chain Slack and Wheel Alignment Inspection

- Set the motorcycle up on its side stand.
- Check the wheel alignment. Confirm that the notch on the swingarm and the mark on the chain adjuster are at the same position on the left and right sides. If they are different, adjust the wheel alignment. (See "Drive Chain Slack Adjustment" in this section.)


⚠ WARNING

Misalignment of the wheel will result in abnormal tire wear and can cause an unsafe riding condition. Be sure the wheel is properly aligned.

- Rotate the rear wheel to find the position where the chain is tightest, and measure the maximum chain slack by pulling up and pushing down the chain midway between the engine sprocket and rear wheel sprocket.

Drive Chain Slack:

20 ~ 30 mm (0.8 ~ 1.2 in.)

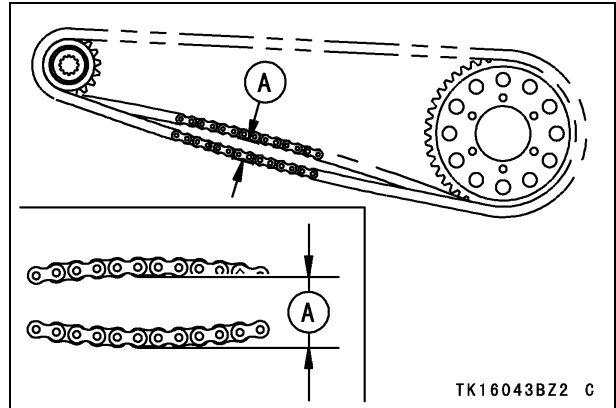

A. 20 ~ 30 mm (0.8 ~ 1.2 in.)


- If the drive chain is too tight or too loose, adjust it so that the chain slack will be within the standard value.

⚠ WARNING

A chain that breaks or jumps off the sprockets could snag on the engine sprocket or lock the rear wheel, severely damaging the motorcycle and causing it to go out of control. Inspect the chain for damage and proper adjustment.

Drive Chain Slack Adjustment

- Loosen the chain adjuster clamp bolts on the left and right sides.
- Turn the both chain adjusters evenly with the allen wrench until the drive chain has the correct amount of slack.

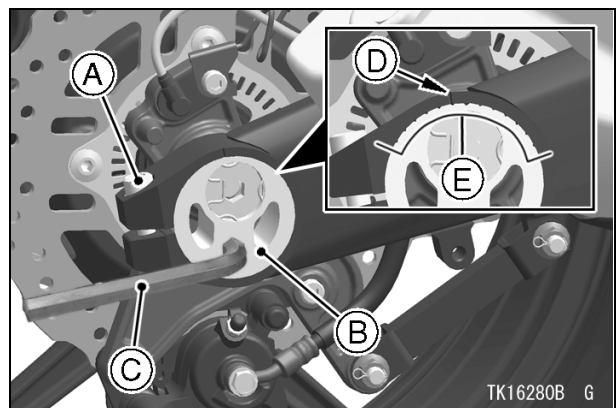

- A. Chain Adjuster Clamp Bolt
- B. Chain Adjuster
- C. Allen Wrench
- D. Notch
- E. Marks

- To keep the chain and wheel properly aligned, the chain adjuster notches should align with the same marks in each side of the swingarm.
- Tighten the chain adjuster clamp bolts to the specified torque.

Torque: 65 N·m (6.6 kgf·m, 48 ft·lb)

- Rotate the wheel, measure the chain slack again at the tightest position, and readjust if necessary.

⚠ WARNING

A loose clamp bolt can lead to an accident resulting in serious injury or death. Tighten the clamp bolt to the proper torque.

- Check the wheel alignment.
- Check the rear brake effectiveness.


Front Fork

Spring Preload Adjustment

- Check the position of the spring preload adjusters on the left and right fork legs.

STD Spring Preload:

5 turns in (Clockwise from the fully seated position).

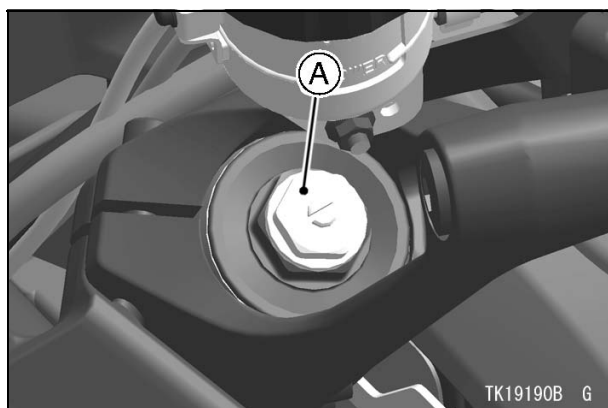

A. Spring Preload Adjuster

- Turn in the spring preload adjusters to increase spring force and out to decrease spring force. Adjust the spring preload to the standard setting position.

NOTICE

The right and left fork tubes must be adjusted evenly.

⚠ WARNING


If both spring preload adjusters and both rebound and compression damping force adjusters are not adjusted equally, handling may be impaired and a hazardous condition may result. Set all suspension adjusters equally to the recommended settings.

Rebound Damping Force Adjustment

- Check the position of the rebound damping force adjusters on the left and right fork legs.

STD Rebound Damping Force:

2 3/4 turns out (Counterclockwise from the fully seated position).

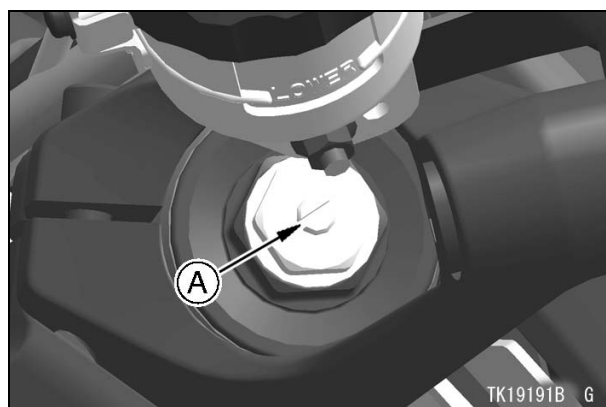

A. Rebound Damping Force Adjuster

- To adjust the rebound damping force, turn the adjuster with a flat tip screwdriver. Adjust the rebound damping force to the standard setting position.

NOTICE

The right and left fork legs must be adjusted evenly.

NOTICE

Do not force to turn the rebound damping force adjuster from the fully seated position or the adjusting mechanism may be damaged.

Compression Damping Force Adjustment


- Check the position of the compression damping force adjuster on the bottom of the right fork leg.

NOTE

- The left fork leg does not have the compression damping force adjuster.

STD Compression Damping Force:

1 3/4 turns out (Counterclockwise from the fully seated position).

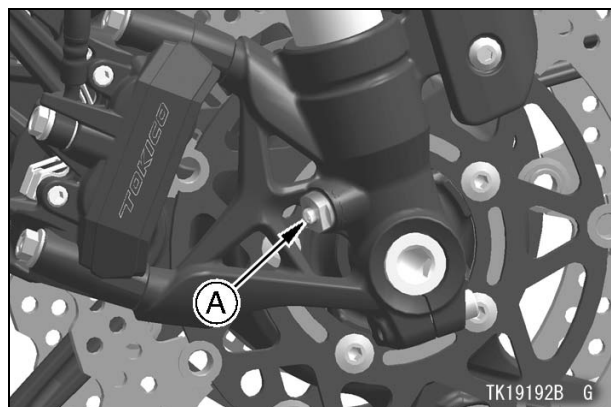**A. Compression Damping Force Adjuster**

- To adjust the compression damping force, turn the adjuster with a flat tip screwdriver. Adjust the compression damping force to the standard setting position.

NOTICE

Do not force to turn the compression damping force adjuster from the fully seated position or the adjusting mechanism may be damaged.


Rear Shock Absorber*Spring Preload Adjustment***NOTICE**

Be careful not to damage the motorcycle parts when adjusting the spring preload.

- Check the position of the spring preload adjuster on the rear shock absorber.

STD Spring Preload:

8 clicks (Clockwise from the fully seated position)

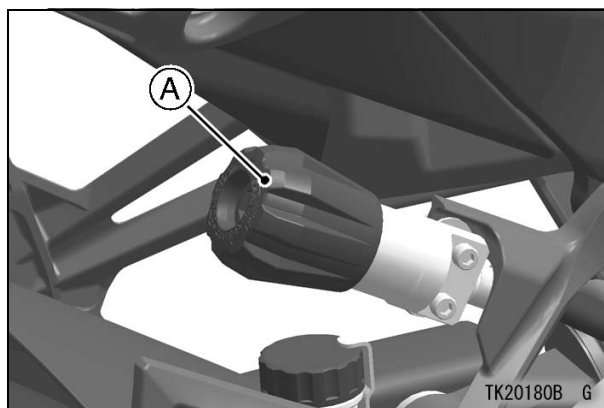**A. Spring Preload Adjuster**


- To adjust the spring preload, turn the adjuster. Adjust the spring preload to the standard setting position.

Rebound Damping Force Adjustment

- Check the position of the rebound damping force adjuster at the lower end of the rear shock absorber.

STD Rebound Damping Force:

2 1/2 turns out (Counterclockwise from the fully seated position).

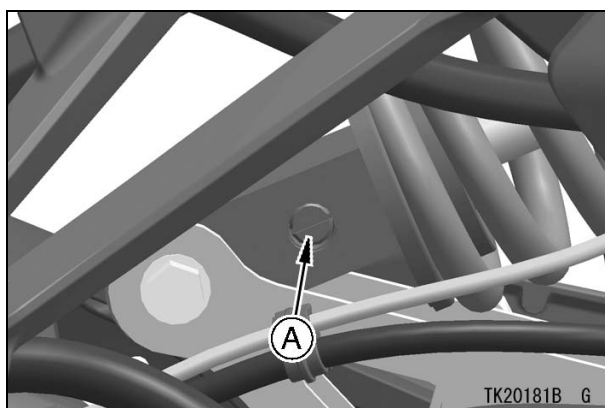**A. Rebound Damping Force Adjuster**

- Turn the rebound damping force adjuster all the way clockwise to make the damping force greatest.
- Turn the rebound damping force adjuster counterclockwise to decrease damping force.
- To adjust the rear shock absorber rebound damping force, turn the adjuster with a flat tip screwdriver. Adjust the rebound damping force to the standard setting position.

NOTICE

Do not force to turn the rebound damping force adjuster from the fully seated position or the adjusting mechanism may be damaged.


Tire Air Pressures

- To prevent flat-spotting during shipment, the tires are over-inflated before crating. Adjust the pressures to the specified values in the front and rear, and make sure to tighten the caps securely.

Tire Air Pressure [when cold]:

Front: 250 kPa (2.50 kgf/cm², 36 psi)

Rear: 290 kPa (2.90 kgf/cm², 42 psi)

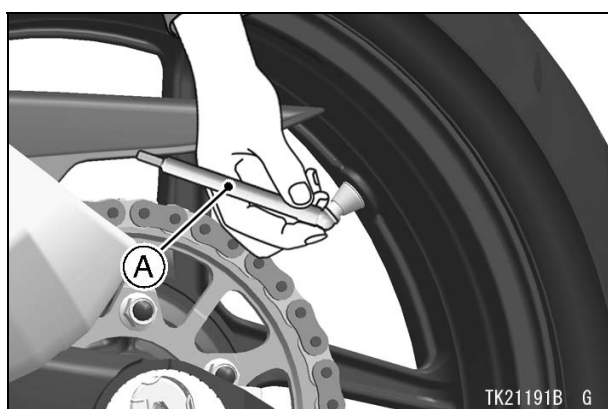

A. Tire Air Pressure Gauge

Fuel

⚠ WARNING

Gasoline is extremely flammable and can be explosive under certain conditions, creating the potential for serious burns. When filling the tank, turn the ignition switch off. Do not smoke. Make sure the area is well ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

- Open the fuel tank cap, and check for debris in the fuel tank.
- Fill the fuel tank with one gallon or four liters of unleaded gasoline. Use a gasoline with a minimum octane rating shown below.

For US and Canada Specifications

Fuel Type	Unleaded Gasoline	
Minimum Octane Rating	Antiknock Index	(RON + MON)
	90	2

For Other than US and Canada Specifications

Use clean, fresh unleaded gasoline with an octane rating equal to or higher than that shown in the table.

Fuel Type	Unleaded Gasoline
Minimum Octane Rating	Research Octane Number (RON) 95

- Close the fuel tank cap and check for any leaks.


Engine Oil (4-stroke)

Engine Oil Level Inspection

NOTE

○ This vehicle's engine is filled with 10W-40 oil from the factory. DO NOT DRAIN and refill the crankcase before use. Check oil level and drain bolt tightness.

Torque: 29 N·m (3.0 kgf·m, 21 ft·lb)

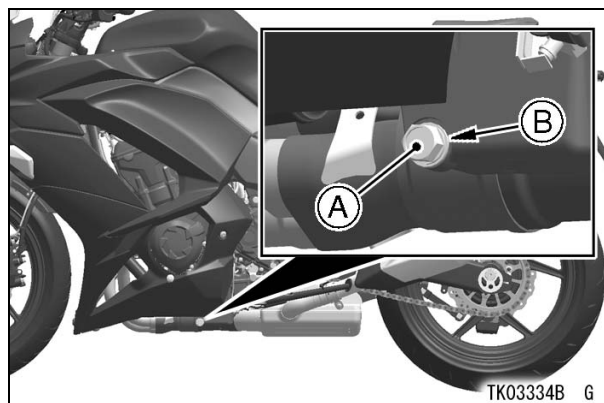

A. Engine Oil Drain Bolt


B. Gasket

- Park the vehicle on level ground.
- Before starting the engine, check that the engine has oil.
- With the motorcycle held level, check that the engine has oil through the oil level inspection window in the lower right side of the engine.

NOTICE

If the engine is run without oil, it will be severely damaged.

- Start the engine and run it for several minutes at idle speed. Stop the engine, then wait several minutes until the oil settles.
- With the motorcycle held level, check the engine oil level through the oil level inspection window. The oil level should come up between the upper and lower level lines next to the oil level inspection window.

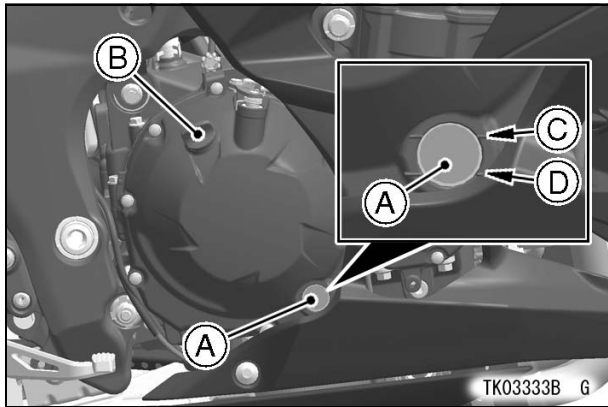**A. Oil Level Inspection Window****B. Oil Filler Cap****C. Upper Level Line****D. Lower Level Line**

- If the oil level is too high, remove the excess oil through the oil filler opening, using a syringe or some other suitable device.
- If the oil level is too low, add oil to reach the correct level. Use the same type of oil that is already in the engine.
- When replacing the cap, be sure the O-ring is in place, and tighten the cap in finger tight.

Recommended Engine Oil

Type: API SG, SH, SJ, SL or SM with JASO MA, MA1 or MA2


Viscosity: SAE 10W-40

Capacity: 3.2 L (3.4 US qt)
[when filter is not removed]
3.8 L (4.0 US qt)
[when filter is removed]

NOTE

○Do not add any chemical additive to the oil. Oils fulfilling the above requirements are fully formulated and provide adequate lubrication for both the engine and the clutch.

Although 10W-40 engine oil is the recommended oil for most conditions, the oil viscosity may need to be changed to accommodate atmospheric conditions in your riding area.

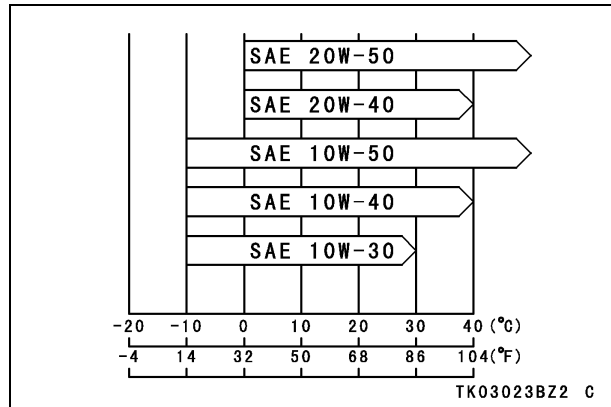
**Throttle Grip and Cable****Throttle Grip Free Play Inspection**

- Inspect the throttle grip free play. If the free play is incorrect, adjust the throttle cables.

Throttle Grip Free Play:

2 ~ 3 mm (0.08 ~ 0.12 in.)

- Check that the throttle grip moves smoothly from full open to close, and the throttle closes quickly and completely in all steering positions by the return spring.
- If the throttle grip does not return properly, check the throttle cable routing, grip free play, and for possible cable damage. Then lubricate the throttle cables.

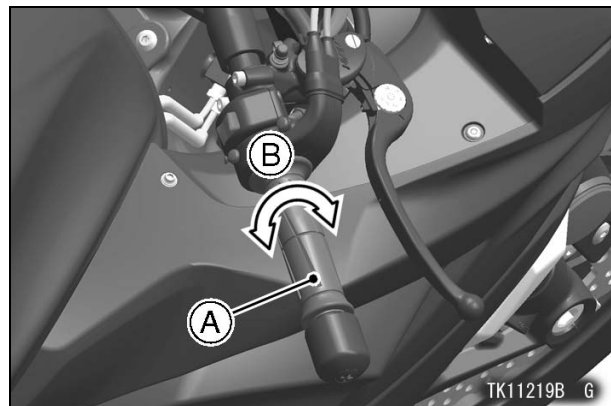**A. Throttle Grip**

B. 2 ~ 3 mm (0.08 ~ 0.12 in.)


- Run the engine at idle speed, and turn the handlebar all the way to the right and left to ensure that the idle speed does not change. If the idle speed increases, check the throttle grip free play.

⚠ WARNING

Operation with incorrectly routed, improperly adjusted or damaged cables could result in an unsafe riding condition. Be sure the cables are routed correctly, properly adjusted and are not damaged in any way.

Throttle Grip Free Play Adjustment

- Loosen both locknuts of the throttle cables and turn both adjusters in completely to give the throttle grip plenty of play.
- Turn out the decelerator cable adjuster until there is no play when the throttle grip is completely closed. Tighten the locknut.

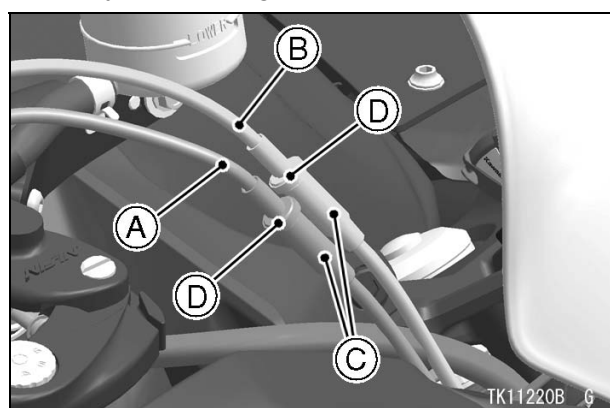


- A. Decelerator Cable
- B. Accelerator Cable
- C. Adjusters
- D. Locknuts

- Turn out the accelerator cable adjuster until the specified amount of play is obtained. Tighten the locknut.

Rear Brake Light Switch

Rear Brake Light Switch Adjustment


- Turn the ignition switch on. The brake light should illuminate when the brake pedal is depressed about 10 mm (0.39 in.)
- If it does not, turn the adjusting nut at the rear brake light switch as required.
- Cover the clean cloth on the muffler body to prevent damage.
- Remove the right front footpeg bracket bolts (D = 8, L = 20) (2).

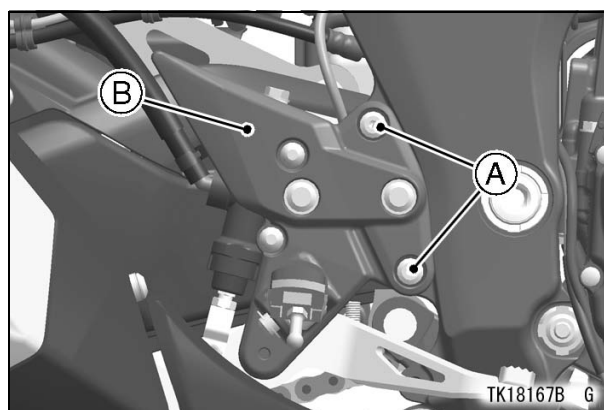

A. Bolts (D = 8, L = 20)

B Right Front Footpeg Bracket

- Bring the footpeg bracket a little bit outward.
- To adjust the rear brake light switch, move the switch up or down by turning the adjusting nut.

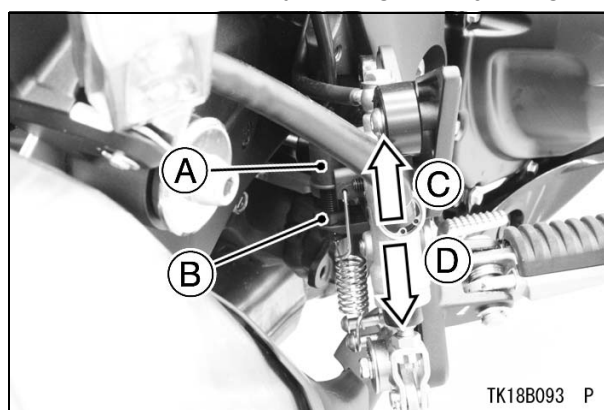

A. Rear Brake Light Switch

B. Adjusting Nut

C. Lights sooner.

D. Lights later.

NOTICE

To avoid damaging the electrical connections inside the switch, be sure that the switch body does not turn during adjustment.


- Reinstall the right front footpeg bracket.
- Tighten the right front footpeg bracket bolts to the specified torque.

Torque: 25 N·m (2.5 kgf·m, 18 ft·lb)

Idle Speed Adjustment

- Start the engine and warm it up thoroughly.
- Adjust the idle speed to 1 050 ~ 1 150 r/min (rpm) by turning the idle adjusting screw.

Idle Speed: 1 050 ~ 1 150 r/min (rpm)

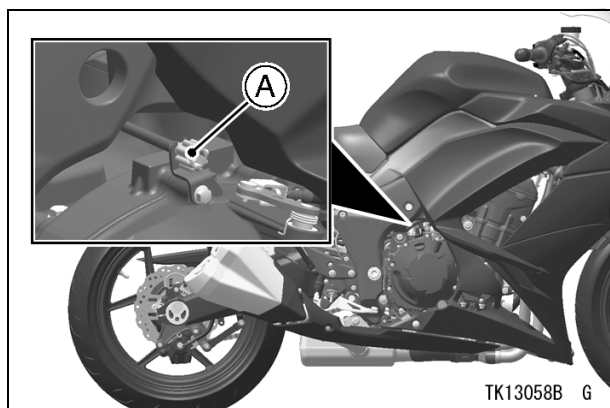

A. Idle Adjusting Screw

- Open and close the throttle grip a few times to make sure that the idle speed does not change.
- With the engine idling, turn the handlebar to each side. If handlebar movement changes the idle speed, check the throttle cable routing and free play.

⚠ WARNING

Operation with incorrectly routed or damaged throttle cable could result in an unsafe riding condition. Be sure the throttle cable is routed correctly, properly adjusted and is not damaged in any way.

- Check for any exhaust leaks and correct if necessary.

Headlight Aim

The headlight beam is adjustable both horizontally and vertically. Headlight aim must be correctly adjusted for safe riding as well as on-coming drivers. In most areas it is illegal to ride with an improperly adjusted headlights.


The left and right (high beam and low beam) headlight aim can be adjusted individually.

Horizontal Adjustment

- Turn the horizontal adjuster in or out until the beam points straight ahead.

Vertical Adjustment

- Turn the vertical adjuster in or out to adjust the headlight vertically.

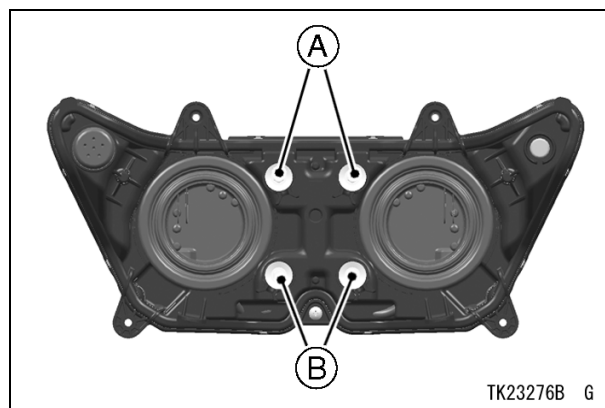


A. Horizontal Adjusters

B. Vertical Adjusters

For US and Canada Models

NOTE

- On high beam, the brightest point should be slightly below horizontal. The proper angle is 0.4 degrees below horizontal. This is a 50 mm (2.0 in.) drop at 7.6 m (25 ft) measured from the center of the headlight, with the motorcycle on its wheels and the rider seated.

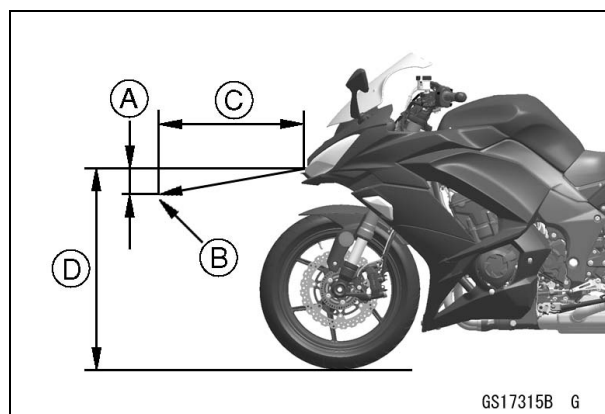

A. 50 mm (2.0 in.)

B. Center of Brightest Spot


C. 7.6 m (25 ft)

D. Height of Headlight Center

For other than US and Canada Models

NOTE

- On high beam, the brightest point should be slightly below horizontal with the motorcycle on its wheels and the rider seated. Adjust the headlight to the proper angle according to local regulation.

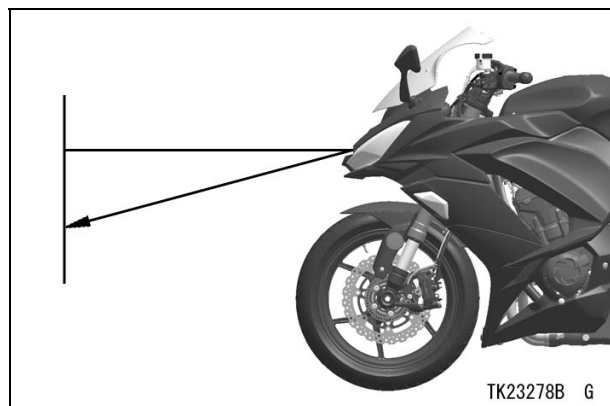


Digital Meter

Check the Unit Setting: km/h, mph

Mph·km/h Display can alternate between English and metric modes (mph and km/h) on the digital meter. Make sure that mph or km/h is correctly displayed according to local regulations before sale.

NOTE

- Do not operate the vehicle with the digital meter displaying the wrong unit (mph or km/h) of the digital meter. Shift the mph km/h display on the digital meter as follows.
- Turn the ignition switch on.
- Push the upper meter button to display the odometer in the digital meter.

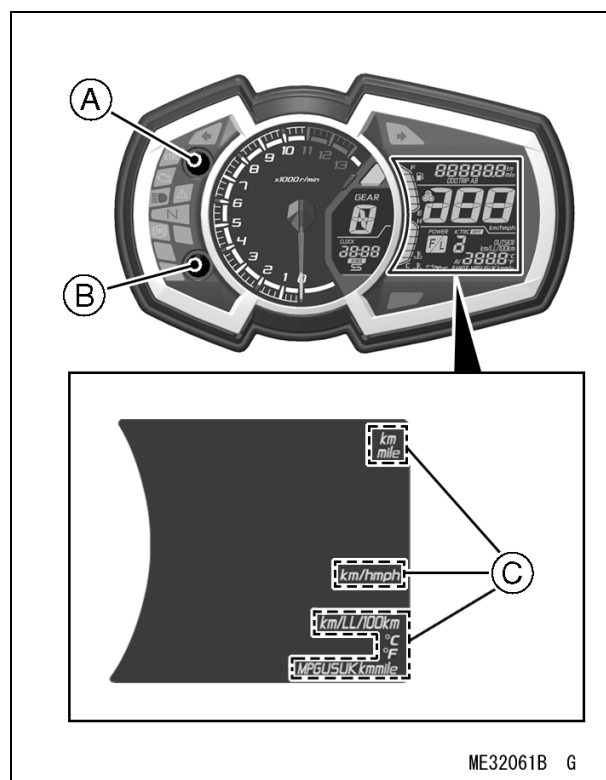


A. Upper Meter Button

B. Lower Meter Button

C. Display Units

- Push the lower meter button while pushing the upper meter button to select the meter display units. The display units can be shifted in the following order.








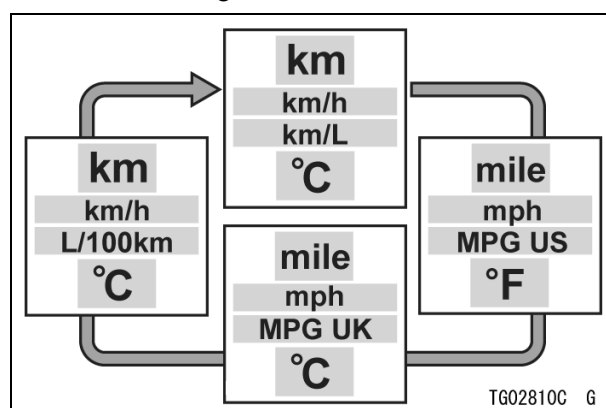


NOTE

- The data is maintained even if the battery is disconnected.

Fastener Check

- The torque values listed are for assembly and preparation items only, see the appropriate Service Manual for a more comprehensive list. Check tightness of all fasteners that are in the table before retail delivery. Also check to see that each cotter pin or circlip is in place.

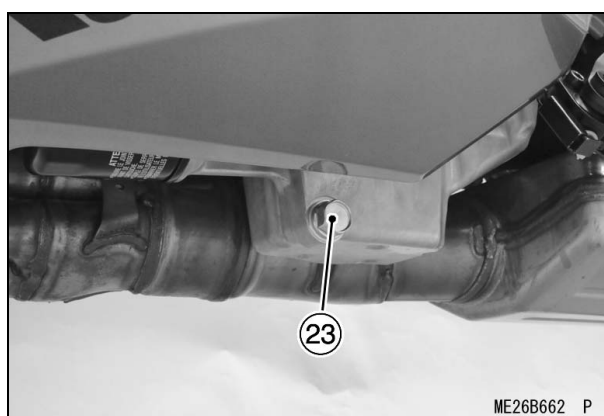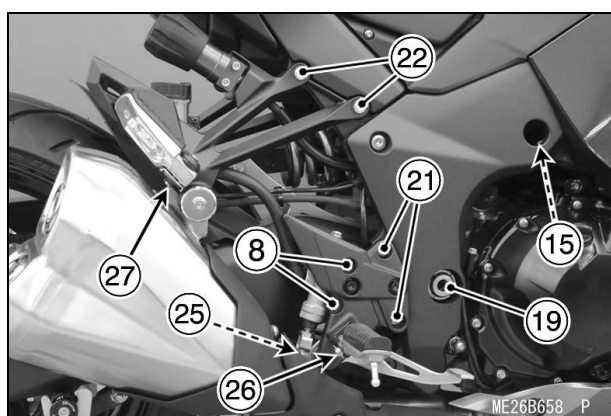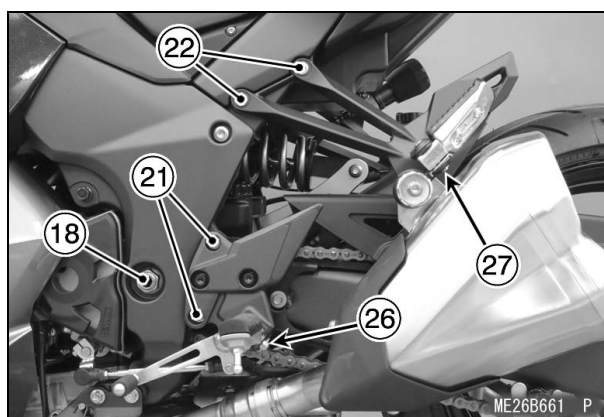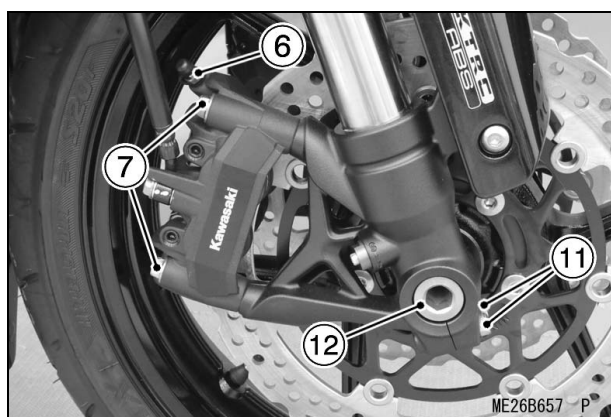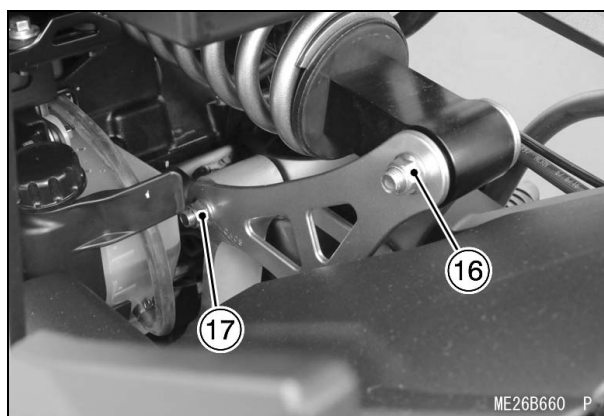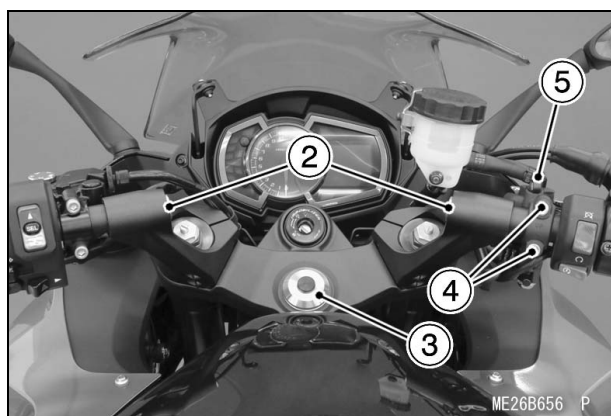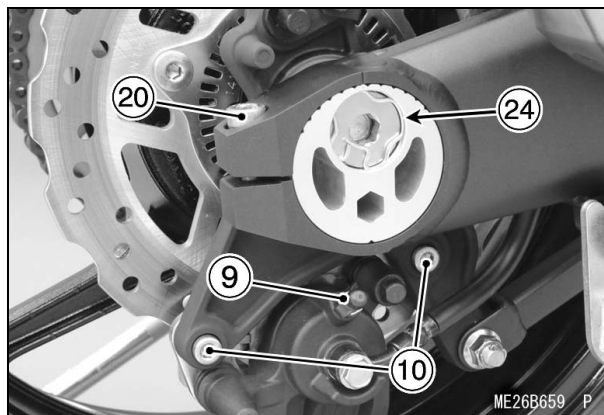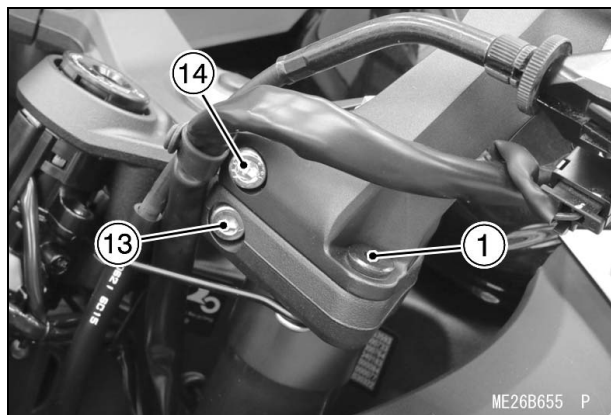

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
Frame/Steering					
1	Handlebar holder positioning bolt (Left and Right)	10	1.0	89 in·lb	
2	Handlebar bolt (Left and Right)	35	3.6	26	
3	Steering stem head bolt	110	11.2	81.1	
Brake					
4	Front master cylinder clamp bolts	11	1.1	97 in·lb	
5	Front master cylinder bleed valve	5.4	0.55	48 in·lb	
6	Front caliper bleed valve (Left and Right)	8.0	0.82	71 in·lb	
7	Front caliper mounting bolts	35	3.6	26	
8	Rear master cylinder mounting bolts	25	2.5	18	
9	Rear caliper bleed valve	8.0	0.82	71 in·lb	
10	Rear caliper mounting bolts	25	2.5	18	
Wheel					
11	Front axle clamp bolts	20	2.0	15	
12	Front axle	110	11.2	81.1	
Suspension					
13	Upper front fork clamp bolt (Left and Right)	20	2.0	15	
14	Handlebar holder clamp bolts	25	2.5	18	
15	Upper rear shock absorber bolt	35	3.6	26	
16	Lower rear shock absorber nut	35	3.6	26	
17	Tie-rod nuts	35	3.6	26	
18	Swingarm pivot shaft nut	110	11.2	81.1	
19	Swingarm pivot adjusting collar locknut	100	10.2	73.8	
20	Chain adjuster clamp bolts	65	6.6	48	
Others					
21	Front footpeg bracket bolt (Left and Right)	25	2.5	18	
22	Rear footpeg bracket bolt (Left and Right)	25	2.5	18	
Engine Oil Drain					
23	Engine oil drain bolt	29	3.0	21	
Cotter Pin or Circlip					
24	Rear axle nut circlip	—	—	—	
25	Rear master cylinder push rod cotter pin	—	—	—	
26	Front footpeg pin circlip (Left and Right)	—	—	—	
27	Rear footpeg pin circlip (Left and Right)	—	—	—	

Standard Torque Table

The tables below, relating tightening torque to thread diameter, lists the basic torque for the bolts, nuts and screws. Use these tables for the bolts, nuts and screws which are not specified the tightening torque particularly on the previous pages. All of the values are for use with dry solvent-cleaned threads.

Basic Torque for General Fasteners For Bolts and Nuts

Threads Diameter (mm)	Torque		
	N·m	kgf·m	ft·lb
5	4.5	0.46	40 in·lb
6	8.0	0.82	71 in·lb
8	20	2.0	15
10	35	3.6	26
12	60	6.1	44

For Screws, Plastic Part Tightening Portions and Plastic Washer Tightening Portions

Threads Diameter (mm)	Torque		
	N·m	kgf·m	ft·lb
4	1.2	0.12	11 in·lb
5	3.0	0.31	27 in·lb
6	4.0	0.41	35 in·lb

For Self-Tapping Screws

Threads Diameter (mm)	Torque		
	N·m	kgf·m	ft·lb
All	1.2	0.12	11 in·lb

For Wellnuts

Threads Diameter (mm)	Torque		
	N·m	kgf·m	ft·lb
4	0.2	0.02	1.8 in·lb
5	0.5	0.05	4.4 in·lb
6	1.0	0.10	8.9 in·lb

Test Ride the Motorcycle

- Complete the test ride checklist.

Control Cables:

Throttle cables must work without binding in any steering position.

Steering:

Action is free from lock-to-lock.

Suspension:

Check operation front and rear.

Engine:

Electric starter works properly and engine starts promptly. Good throttle response and return.

Transmission and Clutch:

Smooth operation.

Brakes:

Adequate, smooth stopping power, No drag.

Digital Meter:

Check operation

Electrical System:

Headlight - check high and low beams.

Taillight - check operation.

Brake Light - check operation.

Turn Signal Lights - check operation.

Horn - check operation.

Instrument Lights and Indicator Lights - Check operation.

Engine Stop Switch Works:

Starter Interlock Switch Works:

No Unusual Noises:

No Fuel, Oil, Brake Fluid, or Coolant Leaks:

PREPARATION COMPLETE.

WARNING

New tires are slippery and may cause loss of control and serious injury or death. A break-in period of 160 km (100 miles) is necessary to establish normal tire traction. During break-in, avoid sudden and maximum braking, acceleration, and hard cornering.

A & P Check List

- Complete the A & P Check List.

MODEL APPLICATION

Year	Model	Name
2017	ZX1000W	Z1000SX, Ninja 1000