



SERVICE BULLETIN

Classification: EL20-024a	Reference: NTB20-052a	Date: November 5, 2020
------------------------------	--------------------------	---------------------------

REAR DOOR ALERT SERVICE INFORMATION

**This bulletin has been amended. See AMENDMENT HISTORY on the last page.
Please discard previous versions of this bulletin.**

APPLIED VEHICLES: 2021 Rogue (T33)
 2020-2021 Sentra (B18)

SERVICE INFORMATION

This bulletin contains supplementary information related to the rear door alert system on the APPLIED VEHICLES.

Although the Electronic Service Manual (ESM) should be the primary source of information for inspection, diagnosis, and repair, the supplementary information in this bulletin will assist in these areas.

The information in this bulletin includes:

- Rear door alert description
- How to turn the rear door alert system ON and OFF
- How to turn the horn alert function ON and OFF
- Vehicle information display messages
- Rear door alert operation

NOTE: DO NOT replace the BCM for a rear door alert concern unless all information in this bulletin has been reviewed and the concern has been verified to be abnormal.

IMPORTANT: The purpose of ACTION (above) is to give you a quick idea of the work you will be performing. You MUST closely follow the entire SERVICE PROCEDURE as it contains information that is essential to successfully completing this repair.

Nissan Bulletins are intended for use by qualified technicians, not 'do-it-yourselfers'. Qualified technicians are properly trained individuals who have the equipment, tools, safety instruction, and know-how to do a job properly and safely. **NOTE:** If you believe that a described condition may apply to a particular vehicle, DO NOT assume that it does. See your Nissan dealer to determine if this applies to your vehicle.

REAR DOOR ALERT DESCRIPTION

- The rear door alert functions under certain conditions to indicate there may be an object in the rear seat.
- The rear door alert does not directly sense or detect objects in the rear seat. Instead, it can detect when the rear door is opened or closed, indicating that there may be something in the rear seat.

HOW TO TURN THE REAR DOOR ALERT SYSTEM ON AND OFF

1. Press the left or right arrow button, on the left side of the steering wheel, until **Settings** displays.
2. Press the up or down arrow button to select **Vehicle Settings**.
3. Press the **OK** button.
4. Press the up or down arrow button to select **Rear Door Alert**.
5. Press the **OK** button.



Figure 1

6. Highlight **OFF** and press the **OK** button to turn the system OFF.
7. Deselect **OFF** and press the **OK** button to turn the system ON (not shown).



Figure 2

HOW TO TURN THE HORN ALERT FUNCTION ON AND OFF

- Follow steps 1-5 on page 2 to enter the **Rear Door Alert** menu.
 - Highlight **Horn & Alert** and press the **OK** button if the horn alert function is desired.
 - Highlight **Alert Only** and press the **OK** button if the horn alert function is not desired.

NOTE: If the alert function is NOT desired, the Rear Door Alert system must be turned OFF (steps 1-6 on page 2).



Figure 3

VEHICLE INFORMATION DISPLAY MESSAGES

- When the rear door alert is active, the message in Figure 4 appears to remind the driver to check the rear seat.
 - If desired, **Dismiss Message** can be selected to clear the display.
 - If desired, **Disable Alert** can be selected to disable the rear door alert for the current trip.
 - If no selection is made, this message will disappear after a period of time.



Figure 4

REAR DOOR ALERT OPERATION

NOTE: For the rear door alert system to function, it must be turned ON in **Vehicle Settings**.

Conditions when the rear door alert will be activated

- The rear door alert system is activated when the vehicle is driven within approximately 10 minutes of opening a rear door.
 - Once the system is activated, **the horn will sound (if selected) and the vehicle information display message will display on every trip UNLESS** deactivated by one of the two methods:
 - The driver opens a rear door within a short time after arriving at their destination.
 - **Disable Alert** is selected in the vehicle information display (Figure 4).

Conditions when the rear door alert will NOT be activated

- If one of the rear doors is used, but the vehicle is not driven within approximately 10 minutes, the system will not be activated.

Exiting the vehicle with the rear door alert activated

- When the driver exits the vehicle, after arriving at a destination, a rear door **must be opened** within a short time to **deactivate the alert**.
 - If the driver exits the vehicle while the rear door alert is active, the message **Check Rear Seat for All Articles** will be displayed, and the horn will sound, (if selected as shown in Figure 3 on page 3).

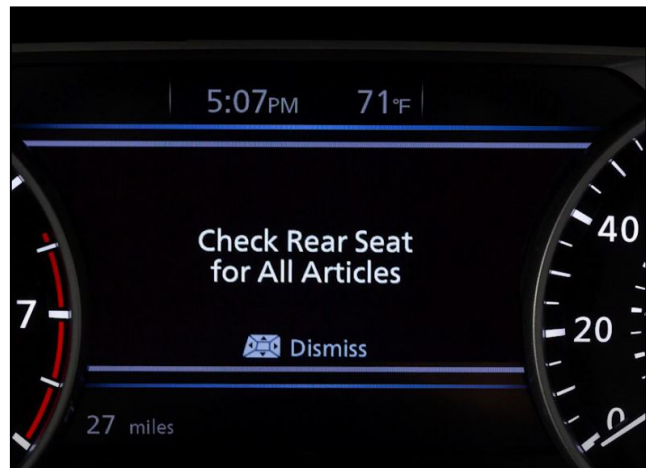


Figure 5

- If the driver exits the vehicle and the doors are locked before the alert is deactivated, the horn will sound (if selected).
- If the driver exits the vehicle and the trunk is opened before opening a rear door, the horn alert (if selected) will sound after the trunk is closed.

AMENDMENT HISTORY

PUBLISHED DATE	REFERENCE	DESCRIPTION
July 17, 2020	NTB20-052	Original bulletin published
November 5, 2020	NTB20-052a	APPLIED VEHICLES and “Conditions when the rear door alert will be activated” section on page 4 revised

