- Serviceability
- Engine
- Vehicle Lift-up



Serviceability

-A | -K | -W | -Q | -V | -N | -_

Serviceability Improvement


Work	Parts	Contents
Removal / Installation	Fuel Filter and Fuel Pump	• It is not necessary to remove the fuel tank. (*For details, refer to next slide.*) • It is possible to work from a cabin.
	Rear Bumper Cover (Rear Fender Moulding)	Adhesive tape is discontinued. (Standard type only.)

Service Point

Work	Parts	Contents
Removal / Installation	12 V Battery	Because there is a possibility of interference with the brake master cylinder reservoir, the bracket for interference prevention is provided.
Vehicle Lift-up	—	Depending on the width between plates of the lift, plate of the lift may contact with the vehicle. *(For details, refer to slide 4.)*

Engine

- Fuel Filter (M20A-FKS and A25A-FKS Engines)
  - When the fuel filter is removed/installed, it is not necessary to remove the fuel tank to improve workability.

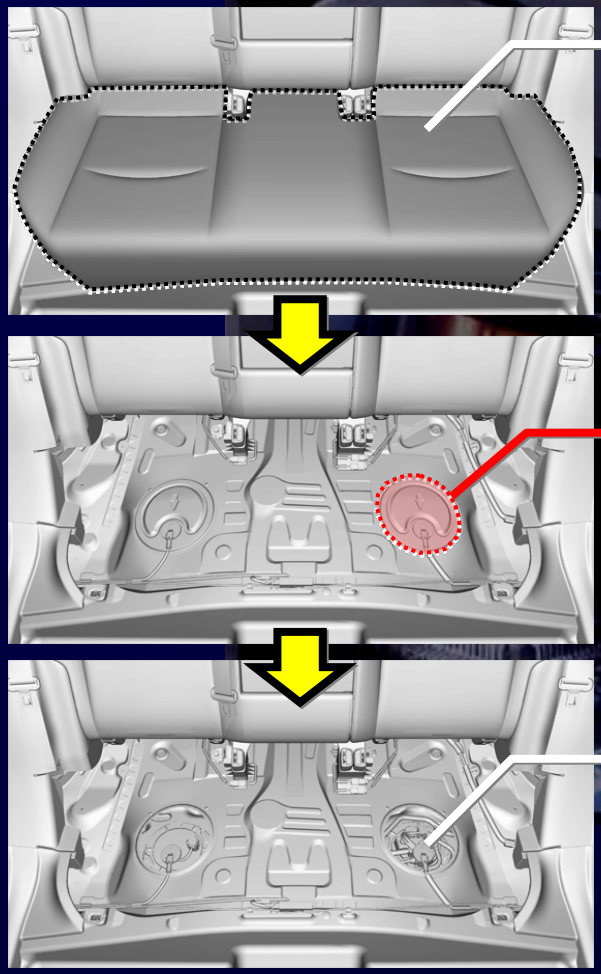

[Procedure]
1. Remove the rear seat cushion assembly.
2. Remove the rear floor service hole cover (for LH side).
3. Remove the fuel suction tube with pump and gauge assembly.



Vehicle Lift-up

- Attachment
  - Depending on the height of the attachment and width between plates of the lift, plate of the lift may contact with the vehicle when lift-up.

NOTE: Image is for illustration purposes.

