1 03 04-19

Service Information Bulletin

SUBJECT	DATE
DT12 External Component Repair - Exhaust Splash Shield	March 2019

Additions, Revisions, or Updates

Publication Number / Title	Platform	Section Title	Change
DDC-SVC-MAN-0140	DT12	Removal of the Exhaust Splash Shield	A new service part has been released.
		Installation of the Exhaust Splash Shield	


13400 Outer Drive, West, Detroit, Michigan 48239-4001
Telephone: 313-592-5000
www.demanddetroit.com

 Copyright © 2019 DETROIT DIESEL CORPORATION

2 Removal of the Exhaust Splash Shield

Remove as follows:

1. Remove the two fasteners holding the splash shield to the shift controller. See figure below.

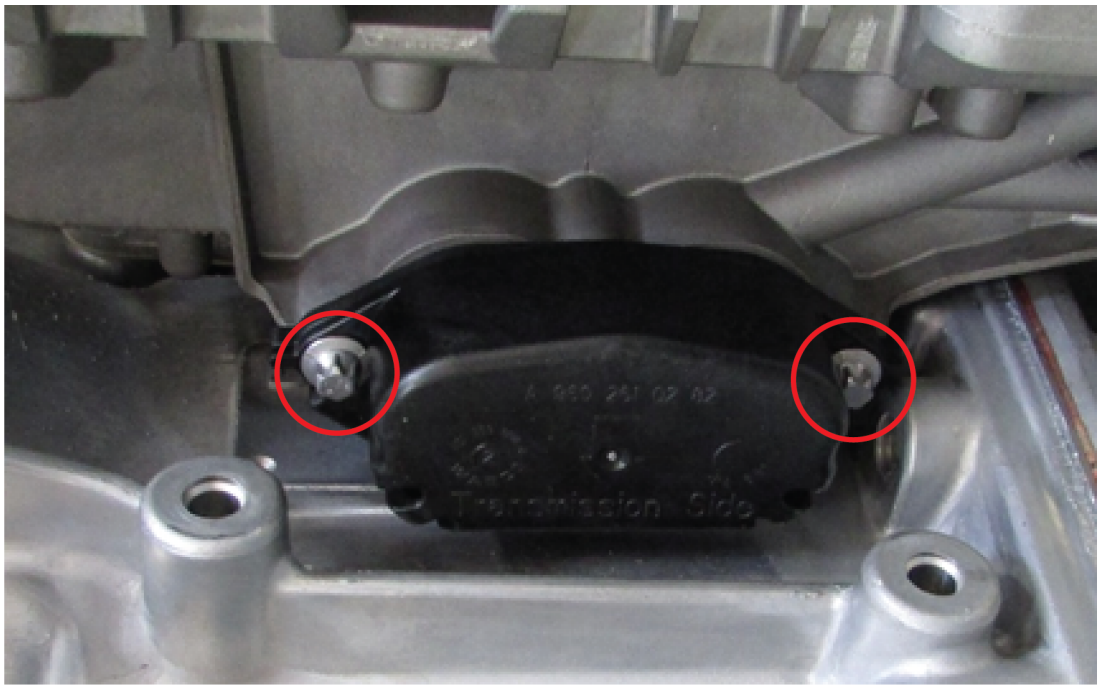

d260208

All information subject to change without notice.
Copyright © 2019 DETROIT DIESEL CORPORATION


3 Installation of the Exhaust Splash Shield

Install as follows:

1. Position the splash shield over the exhaust filter cover, following the directional arrow and text on the cover indicating the “transmission side”. See Figure below.

NOTE: The fasteners are the same length whether the shift controller is equipped with a splash shield, or not.

2. Secure the shield to the shift controller, and torque to 6 N·m (53 lb·in.).

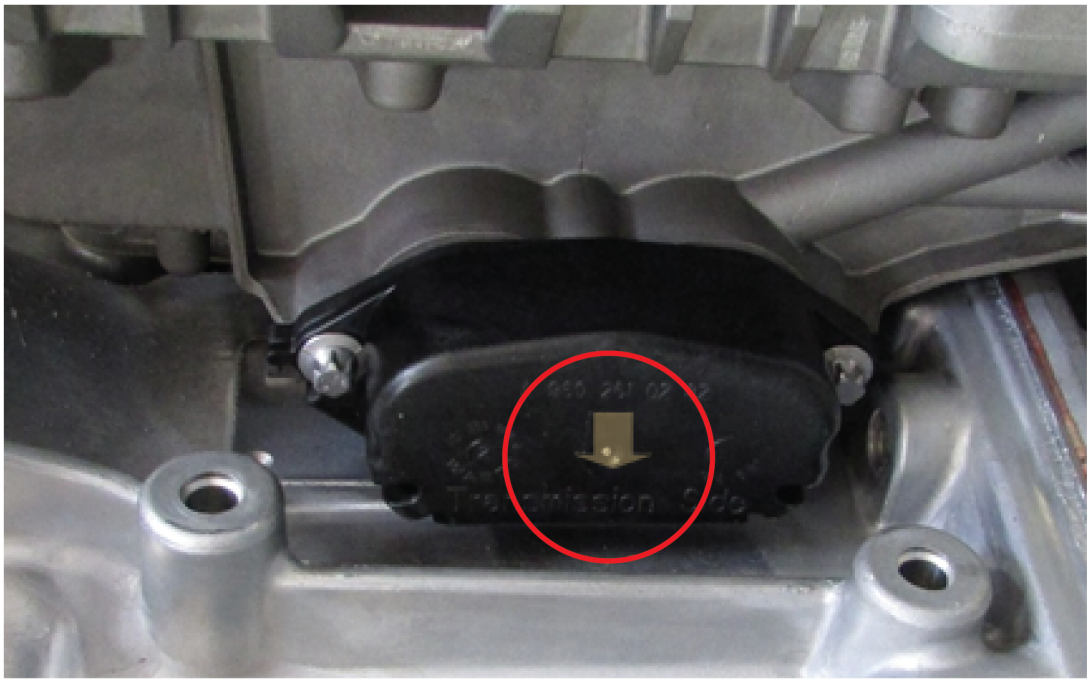

d260209

 Copyright © 2019 DETROIT DIESEL CORPORATION