
Authored Date	19/11/2024	
Doc No.	IATSB003072v2	
Title	Split Door Seal - Replace	
Affected Vehicle(s)	Grenadier	RF019106 - RF019516
This Technical Service Bulletin (TSB) should only apply to vehicles that demonstrate the described issue below.		

Reason for this document

Issue: An issue has been identified on a small percentage of the affected vehicles where the Split Door Seal may have perished (See image below).

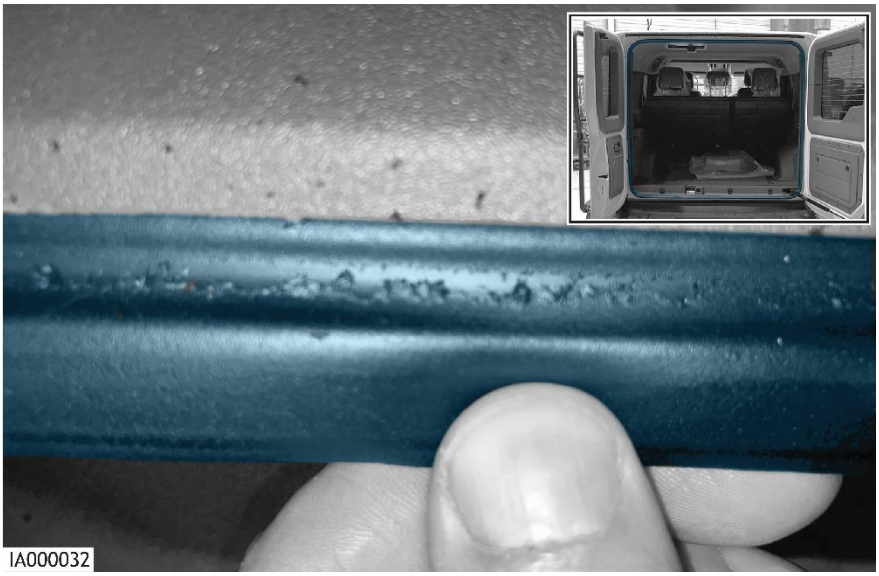

Cause: Manufacturing Issue.

Action: Follow the procedure below.

Workshop Procedure

Split Door Seal - Replace

Operation	SRO	Repair Time
Replace	XTSBSDSR001	0.4

Parts

Part Number	Description	Qty
GRA-8F00-046090	Split Door Seal	1

INEOS Automotive Limited, 15-19 Britten St, London SW3 3TY, UK
© Copyright INEOS Automotive Limited, 2022

Procedure

1	Remove the Loading Space Entrance Trim. **Refer to: TOPIC_0000002691 Loadspace Entrance Trim (Remove for access and install)**
2	Note: Leave the arrester attached to the door, rest the end that was disconnected on the floor  Using a suitable tool, release the door arrester.
3	 Remove and discard the Split Door Seal.

INEOS Automotive Limited, 15-19 Britten St, London SW3 3TY, UK
© Copyright INEOS Automotive Limited, 2022

4	Note: Make the surface is clean and free of any foreign objects Note: Do not stretch or compress the new door seal when installing. Install the new Split Door Seal.
5	Install the door arrester into its original position.
6	Install the Loading Space Entrance Trim. **Refer to: TOPIC_0000002691 Loadspace Entrance Trim (Remove for access and install)**
7	Release the vehicle.

Change History

Reference No.	Date	Description
IATSB003072	10/06/2024	First release
IATSB003072v2	19/11/2024	Second Release

INEOS Automotive Limited, 15-19 Britten St, London SW3 3TY, UK
© Copyright INEOS Automotive Limited, 2022