Supplement
Arteon USA

This supplement describes revisions that have been produced after publication of your vehicle's Owner's Manual.

Please refer to the other sections of the Owner’s Manual for all other information, descriptions, and specifications for the operation and handling of your vehicle, such as information you should know regarding your personal safety and the safety of your passengers.

Supplement
Arteon USA
V1, R1, Supplement 1, en_US
English USA: 2022.01

Driver assistance systems

Speed settings on the multi-function steering wheel

Setting the speed on the multi-function steering wheel

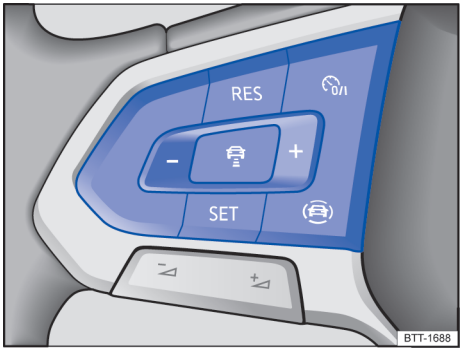

Fig. 1 Left side of the multi-function steering wheel (variant 1).

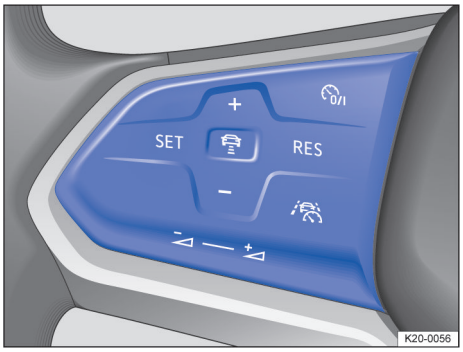

Fig. 2 Left side of the multi-function steering wheel (variant 2).

Depending on the vehicle equipment, you can adjust the speed for the following driver assistance system on the multi-function steering wheel:

— Cruise control system (CCS).

— Adaptive Cruise Control (ACC).

Setting the cruise control speed

While the cruise control system is regulating the speed:

+ 1 mph (1 km/h)**:** Press the RES button.

- 1 mph (1 km/h)**:** Press the SET button.

+ 5 mph (10 km/h)**:** Press the + button.
Steering wheel version 2: Alternatively, swipe the button from the bottom to the top. Activating for the first time changes to the next-largest tens digit (km/h) or fives digit (mph).

- 5 mph (10 km/h)**:** Press the − button.
Steering wheel version 2: Alternatively, swipe the button from the top to the bottom. Activating for the first time changes to the next-smallest tens digit (km/h) or fives digit (mph).

To change the stored speed continuously, press and hold the respective button.

While the cruise control system is not regulating the speed:

+ 5 mph (10 km/h)**:** Press the + button. Pressing for the first time changes to the next-largest tens digit (km/h) or fives digit (mph).

- 5 mph (10 km/h)**:** Press the − button. Pressing for the first time changes to the next-smallest tens digit (km/h) or fives digit (mph).