


Addendum to 04V598000 Revised 05-16-05

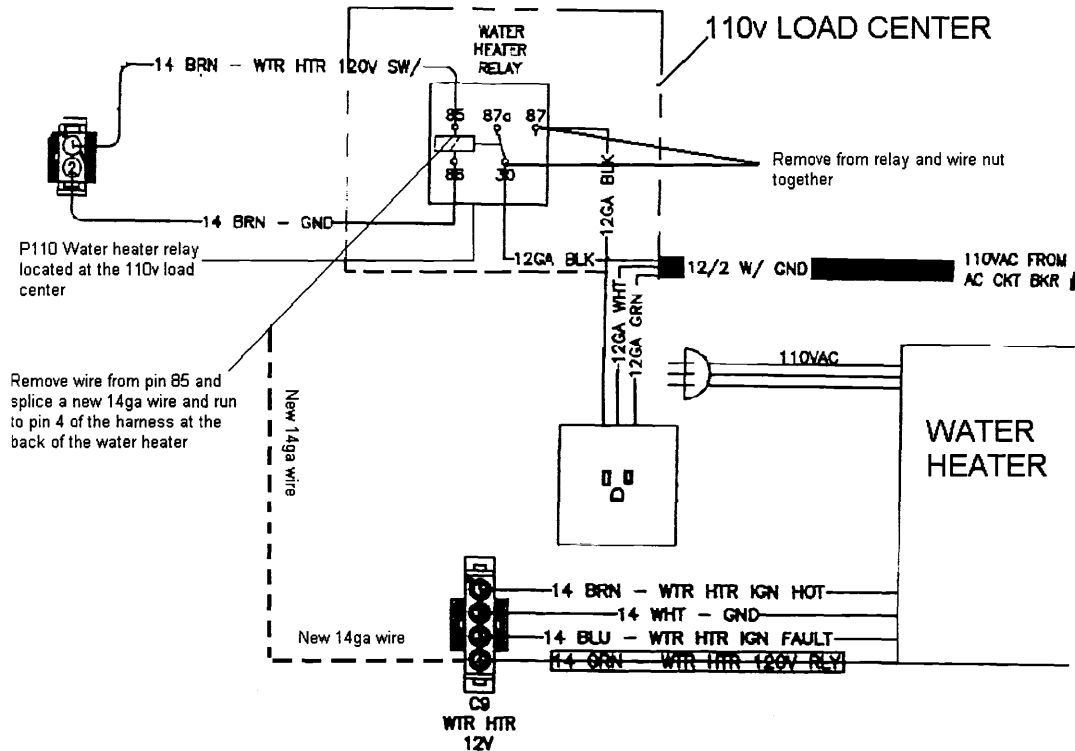

NOTE: UNPLUG UNIT AND ENSURE THAT THE GENERATOR AND INVERTOR ARE OFF, BEFORE STARTING PROCEEDURE.

When installing the new Atwood water heater it is necessary to bypass the relay, located in the 110v load center. Remove the two 12ga black wires (30&87) from the relay and connect them together with a wire nut. Then tape the nut with electrical tape. Remove the brown 14ga (may be green on some units) wire position 85 of the relay in the 110v load center. Splice a new 14ga wire to the 14ga wire removed from position 85 of the relay, and route it down to the 4th position (green wire) of the new water heater plug.