

Purpose:

To be compliant with FMVSS 210.

Perform the Following:

1. Remove driver's seat belt from mounting brackets located on either side of the seat.
2. Attach tether strap to seat belt, and install tether strap seat belt assembly onto mounting bracket using bolt, washers, and nut (as shown in Fig. 1). Torque all bolts between 35 – 45 ft lbs.
3. Drill two (2) 3/8-inch holes in floor behind driver's seat. Position holes 3.00 inches back from riser, and 2.50 inches from center line of riser (as shown in Fig. 2).
4. Align end of strap over holes and secure with bolt, washer, and nut. (as shown in Fig. 3) Torque all bolts between 35 – 45 ft lbs. Adjust strap to remove slack.

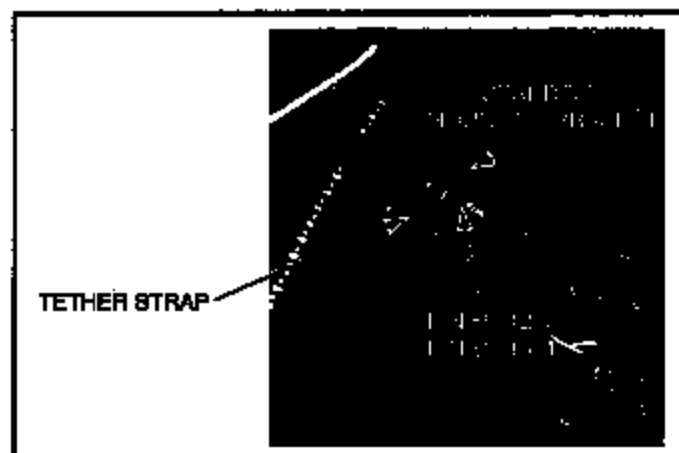


Fig. 1

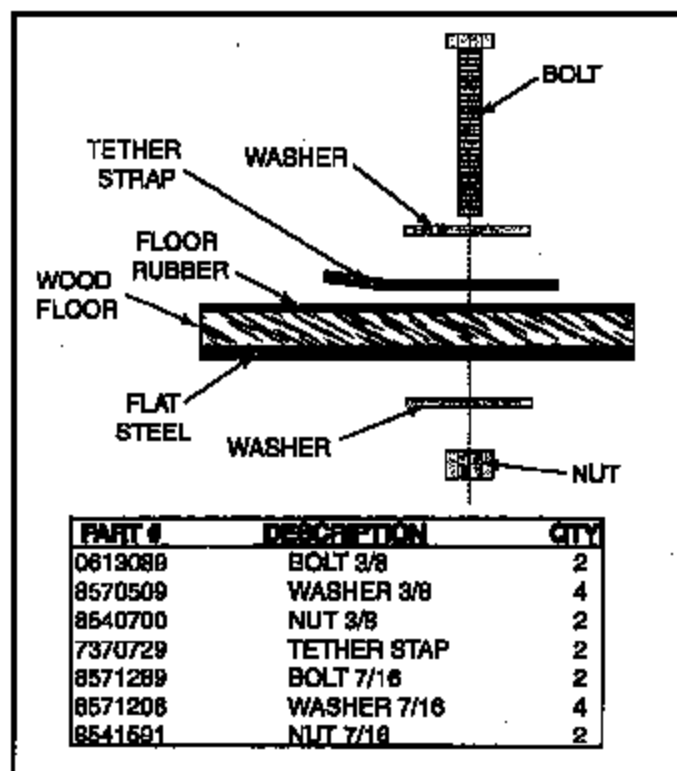


Fig. 3

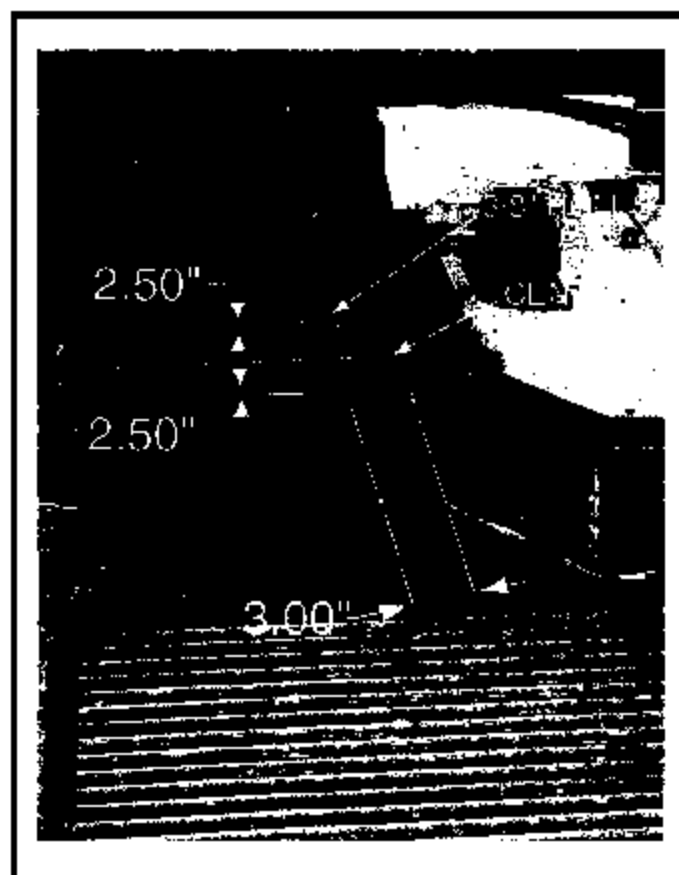


Fig. 2