



SAFETY RECALL BULLETIN

SUBJECT: AIR BAGS SYSTEM WARNING LABEL DRIVER SIDE SUNVISOR			No.: 04V-428 ENG
			Date: July 2005
			Models: 2000-2004 Nativa
CIRCULAR A:	<input checked="" type="checkbox"/> GENERAL MANAGER	<input type="checkbox"/> PARTS MANAGER	<input type="checkbox"/> SHOP TECHNICIAN
<input checked="" type="checkbox"/> SERVICE ADVISOR	<input checked="" type="checkbox"/> SERVICE MANAGER	<input checked="" type="checkbox"/> WARRANTY ANALYST	<input checked="" type="checkbox"/> SALES MANAGER

PURPOSE

This bulletin contains information concerning a Safety Recall procedure for the replacement of the Air Bags System Warning Label in certain Nativa models from years 2000 through 2004. The notification letter indicates the client to install the label included inside the envelope mailed. But also an option is given to the customer to take the unit to a dealer, so its personnel may perform the label installation free of charge.

Although the Safety Recall includes various models from several years, **only Nativa models between years 2000 to the 2004 requires the sunvisor label installation.** The remaining models will receive a customer notification letter to warn and advise them about the recall reason on other models and the printed label at the end of the letter.

The instructions included will be mailed to owners of affected units and are written in English and Spanish language. Please follow the instructions carefully. An additional amount of labels for 2000-2004 M/Y Nativa will be sent through the Service Department Representatives to hand in to the dealers, if a label is claimed as lost by the customer. An example of the label is included below for recognition of the center personnel.



(Not shown on real size.)

If you have some doubt around the procedure or the units involved, please call to Mitsubishi Motor Sales of Caribbean, Service Department - Section of Safety/Service Recalls.

.....

Listed units:

- A- No installation required, only the printed label.
 3000 GT 1999, Diamante 1998-2004, Eclipse 1998-2005, Eclipse Spyder 2000-2005,
 Endeavor 2004, Galant 1999-2003, Lancer 2002-2004, Mirage 1999-2002, Montero 1998-
 2004 & Nativa 1998-1999

- B- Includes the installation of the Sunvisor Label and the printed label.
 Nativa 2000-2004


INSTRUCTIONS FOR THE INSTALLATION OF THE LABEL ON THE DRIVERS SIDE.

PREPARATION

1. Remove the sun visor if necessary to ease the procedure.
2. Prepare two soft cloths, isopropyl alcohol and plastic spatula.
3. Prepare the replacement label


PROCEDURE

1. Place the sun visor on the flat surface.

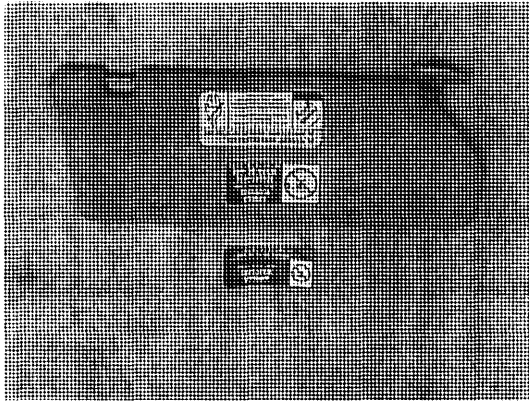

2. Softly soak a cloth with a little bit of isopropyl alcohol.

3. Clean up the existing label surface from dust, dirt or grease with the cloth above on step #2. Press softly.

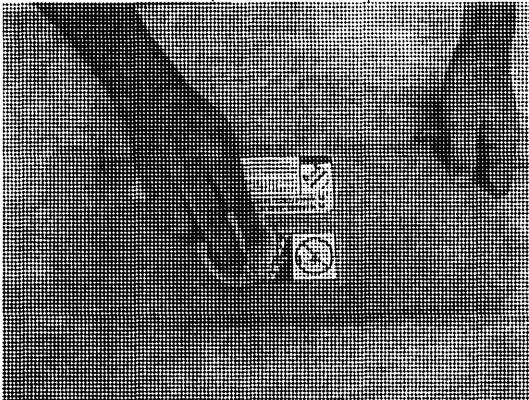

4. Dry out the alcohol for about 5 seconds.

(TURN PAGE TO CONTINUE)


INSTRUCCIONES PARA COLOCAR LA ETIQUETA DEL VISOR DEL CHOFER.

PREPARACION

1. Remueva el visor si es necesario para su comodidad.
2. Prepare dos paños, alcohol isopropílico y una espátula de plástico.
3. Prepare la etiqueta de remplazo

PROCEDIMIENTO

1. Coloque el visor en una superficie plana.

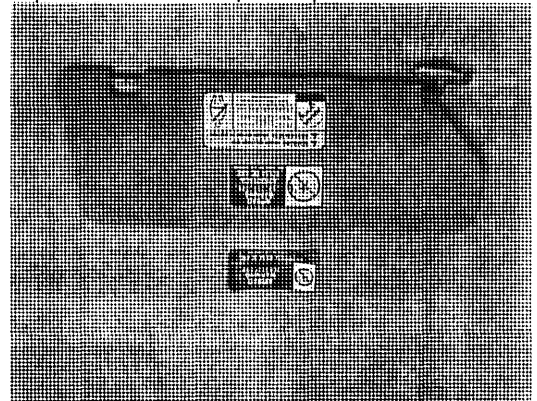

2. Humedezca uno de los paños levemente con alcohol isopropílico.

3. Limpie la superficie de la etiqueta de polvo, sucio o grasa usando el paño del paso #2. Presione levemente.



4. Deje secar el alcohol por 5 segundos.

(PASE A LA OTRA PÁGINA)

1 / 2

**INSTRUCTIONS FOR THE INSTALLATION OF
THE LABEL ON THE DRIVERS SIDE VISOR
(CONT.)**


PROCEDURE (cont.)

5. Affix procedure

- 5.1 Place the new label over the old one. (Both labels are of the same size). Hold the black side with the warning and avoid any movement of the label and remove the sticky cover from the side of the white box from the center of the label towards the edge. Using a plastic spatula, remove the air between both labels.



- 5.2 Hold the side with the white box and without moving the label; remove the sticky cover of the black side with the warning, from the center of the label towards the edge. Using the plastic spatula again, remove the air between both labels.

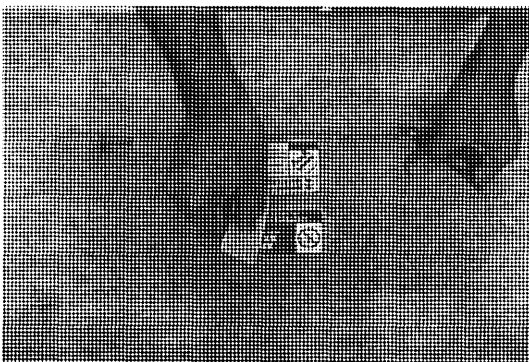


6. Press slightly the label with the dry cloth.
7. Reinstall the sunvisor.
8. End of the process.

**INSTRUCCIONES PARA COLOCAR LA ETI-
QUETA DEL VISOR DEL CONDUCTOR.
(CONT.)**


PROCEDIMIENTO (cont.)

5. Procedimiento de colocación

- 5.1 Coloque la etiqueta nueva sobre la vieja. (Ambas etiquetas son del mismo tamaño). Sujete el lado negro con el aviso y sin que se mueva la etiqueta, remueva la cubierta adhesiva del lado con el recuadro blanco desde el centro de la etiqueta hacia el borde. Utilizando la espátula plástica, remueva el aire entre ambas etiquetas.

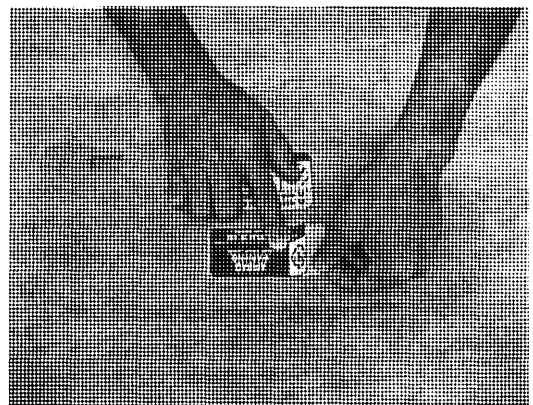

- 5.2 Sujete el lado con el recuadro blanco y sin que se mueva la etiqueta, remueva la cubierta adhesiva del lado negro con el aviso, desde el centro de la etiqueta hacia el borde. Utilizando nuevamente la espátula plástica, remueva el aire entre ambas etiquetas.

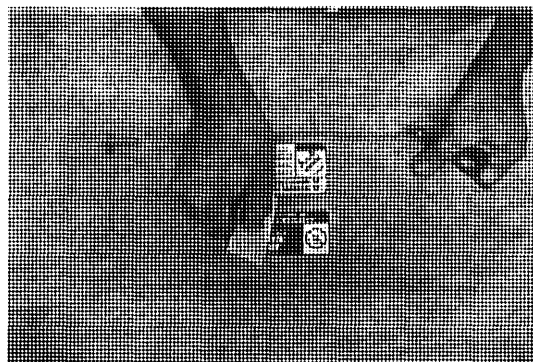

6. Presione la etiqueta con el paño seco moderadamente.
7. Reinstale el visor.
8. Fin del proceso.