


**FEDERAL RECALL 04KW8
PROCEDURE**

Page 1 of 1

- 1) Disconnect negative battery cables.
- 2) Remove 3 of the 4 screws that hold the washer bottle.
- 3) Rotate washer bottle to access the main power feed cable to the Power Distribution Box (PDBox).
- 4) Remove cable from PDBox.

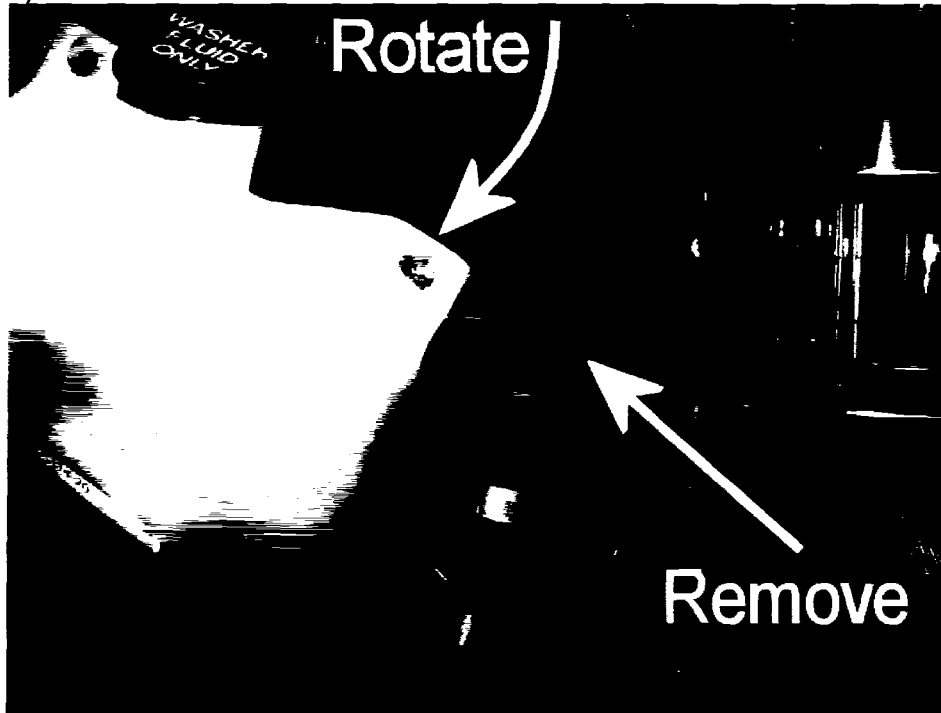

- 5) Cut ties holding the cable, following the cable to the battery box.
- 6) Disconnect cable from the 135 amp circuit breaker and also the jumper to the starter relay.
- 7) Destroy original cable by cutting both ends off.
- 8) Install new P92-1993-XXXX cable (see ECAT for XXXX length):
 - a. Connect wire number P21AL/P84SR to 135 amp circuit breaker
 - b. Connect wire number P84SR to starter relay.
 - c. Connect wire number P21AL to PDBox. Torque nut to 8 -13 Lb*ft (11 - 17.6 Nm).
- 9) Tie strap cable as factory installed and ensure at least 1/2" clearance with the steering driveline.
- 10) Reinstall washer bottle and connect negative battery cables.