


Reflector Installation Instructions

Crossroads RV
305 Hawpatch Drive
Topeka, IN. 46571

NHTSA Recall No. 09V-136
Transport Canada Recall No. 09-129


Installation kit for the models affected should include the following items:

(2) Alcohol prep pads, (2) 1 3/4" x 2 3/4" red reflective labels (SAE A 90 DOT).

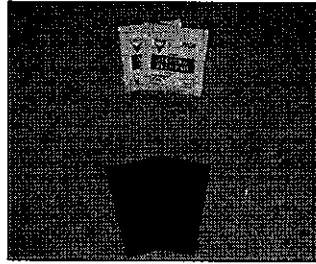

Step 1

Using the recommended area provision from Crossroads RV., locate the appropriate placement of the labels.

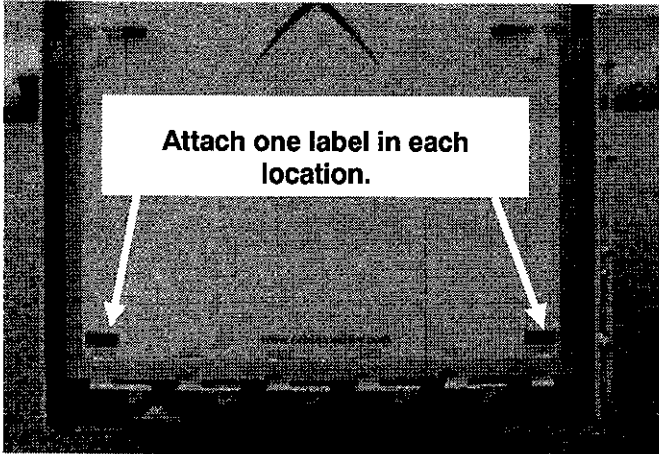


Step 2

After determining the area referenced from step 1, wipe the area where the label is to be applied by using the alcohol prep pad provided to you by Crossroads RV. If the area is dirty, wash with soap and water first and allow the area to dry before using the alcohol prep pad.



Step 3

Peel clear backing from the label as shown below.

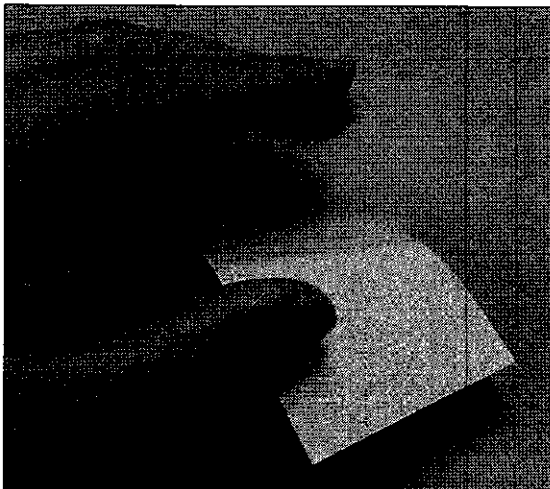

Step 4

Place the labels in the areas as directed in step 1. Ensure that labels are affixed by smoothing out the surface with your fingers as shown below.

