



#### WINDOW RECALL INSTRUCTIONS FOR

1. Egress Window Retainer Bar Installation
2. Egress Window Connecting Rod Replacement
3. Retainer Bar Fastener Inspection/Replacement

<b>Tools Needed:</b>	Phillips screw driver, ¼ inch wrench, Hammer, 1/8 pin remover (punch)
<b>Parts Needed:</b>	2- New solid connecting rods (429909), 4- #4-40 X ½ Phillips pan head machine screw (429910), 4- #4- 40 Nylok nuts (423659), Window Screw (404074)

Issue #1: Egress Window Retainer Bar Installation: For buses with Egress Windows installed, the window retainer bar next to the egress window must be checked for proper installation.

Step 1:: Check window retaining bars for correct installation. On the egress window, the edge toward the front of the bus is the hinge. The retainer bar on the edge toward the rear of the bus is approximately 1" wide (as opposed to a standard retainer bar which is 1 9/16" wide) and has the screw holes set close to one side. That side of the bar goes next to the egress window, NOT next to the adjacent window. Ensure this bar is installed correctly to properly secure the adjacent window and to allow the egress window to open.



Screws on retainer bar close to egress window.(driver's side shown, with egress window to the left)



Egress window hinge (edge toward front of bus)


Issue #2: Egress Window Connecting Rod Replacement. On vehicles equipped with egress windows, the hollow tube connecting rods with plastic yokes must be replaced with the solid connecting rod and machine screw (Provided by Collins Bus Corporation). See photo.




Step 1: Open window, unscrew 6 screws on the egress window handle as shown, remove the kit from the egress window.



Step 2: Remove existing connecting rods by grabbing the handle and the rod with a slight twisting motion.

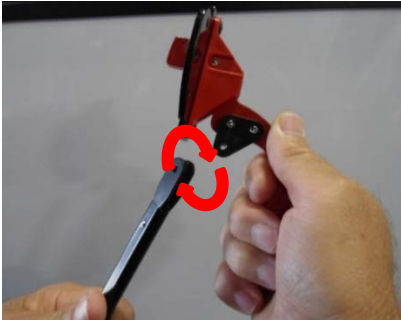

Step 3: Lay the red handle on your table/bench so you can have access to the roll pins. Remove roll pins from upper and lower handles by pushing them out with a 1/8" pin remover.

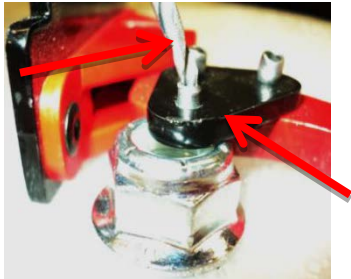

Step 4: Position new solid connecting rod on top of the handle and fasten with #4 machine screw and nylok nut.



Step 5: Reinstall the egress window connecting rod kit back on the window using the six screws that you removed in step 1.

### Issue #3: Retainer Bar Fastener Inspection/Replacement

Step 1: Check all window fasteners for screw heads missing or broken off in window retaining bar (see below). Replace damaged or missing fasteners.

