

Safety Recall Notice

Service Bulletin 38129

January 2013

Toe Pan Panel Modification




Applicable for Toyota Lowered Floor Minivan Conversions Built 5/8/2012 to 1/4/2013





Labor Allotment: 1.0 Hour

Aftermarket interior plastic panels are installed to accommodate the lowered floor configuration. Modify the toe pan plastic panel as detailed in this bulletin to ensure the accelerator pedal does not contact the panel.

1. Remove step & roll driver seat per minivan conversion operator's manual.
2. Remove accelerator pedal. Remove two 10mm nuts and disconnect harness from pedal. See Photo A.
3. Mark area of toe pan panel to be removed. See Photos B and C.

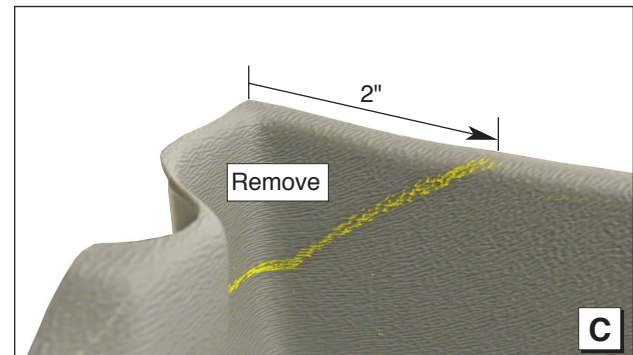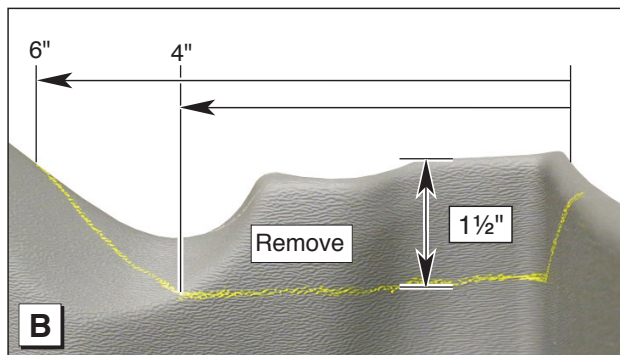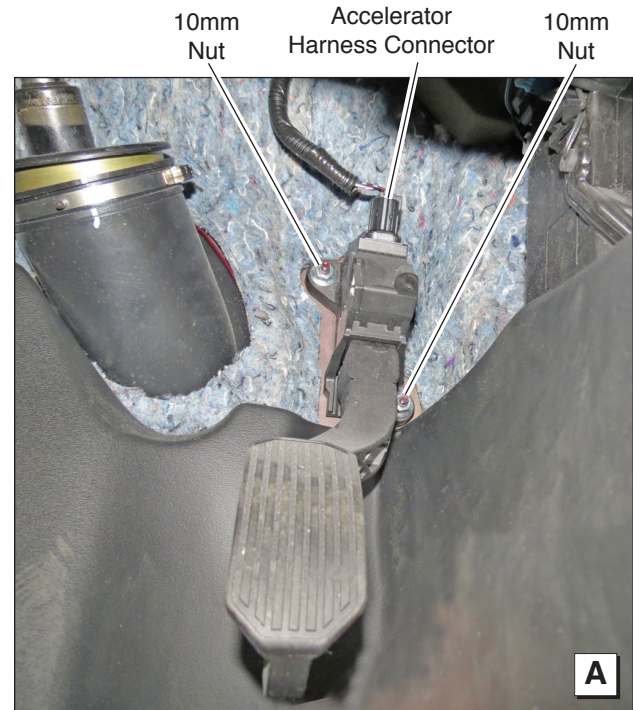

Toyota Toe Pan Modification Instruction 38129

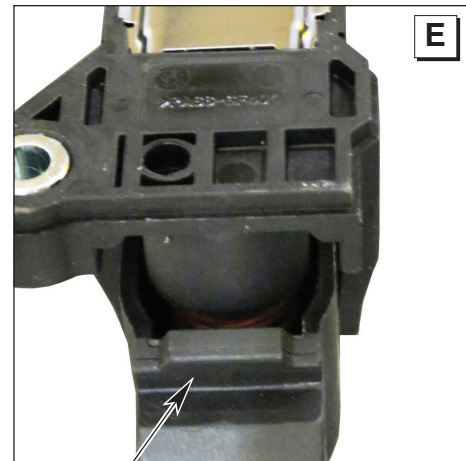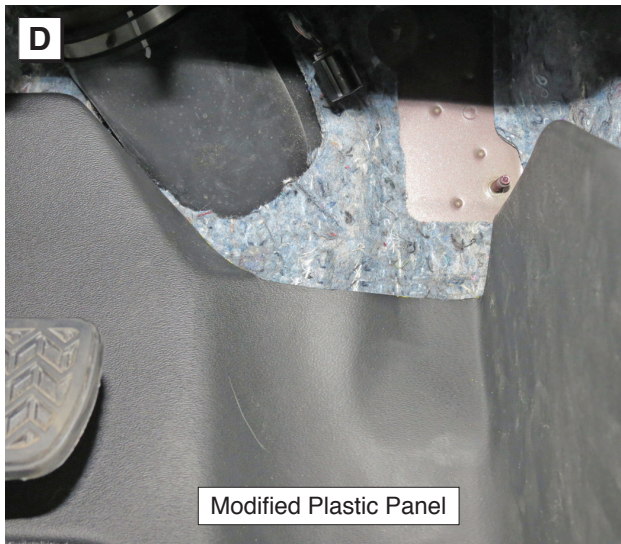

4. Remove area marked in Step 3. See result in Photo D.

5. Install accelerator pedal. Torque mounting nuts to 48 in/lbs each. Refer to Photo A.

6. Operate accelerator pedal and confirm protrusion on rear of pedal will not contact the top edge of the toe pan panel. See Photos E and F.



7. Install step & roll driver seat per the minivan conversion operator's manual.