



# Recall Campaign

NHTSA#: 13V-241

TC#: 2013-192

Job Code: 9901113

Flat Rate: 0.5 hour

**REQUIRES PARTS TO BE ORDERED FROM Jayco for every unit.**

## ACTION REQUIRED:

Add ground wire

## MODELS / UNITS:

2014 White Hawk Summit Travel Trailer

28DSBH **E14C** 0100-0101, 0104-0106, 0109, 0111, 0116-0117, 0121, 0123-0129, 0131, 0133-0135, 0140, 0143

## KIT CONTENTS

**Note: Kit can only be ordered using the order form included with this bulletin.**

- (1) Ground wire assembly  
Instruction sheet

## TOOLS/MATERIAL REQ.:


Screw gun w/square head bit  
3/8" hex head bit  
Wire stripper

## INSTRUCTIONS

1. Remove converter cover. Remove the (4) screws from the converter and pull it out of the cabinet wall.




2. Strip off approx. 1/2" of the wire casing on the ground wire. Attach the ground wire to the buss bar (**Fig. 2a**). Insert the other end of the wire through the wire feed hole in the floor (**Fig. 2b**).

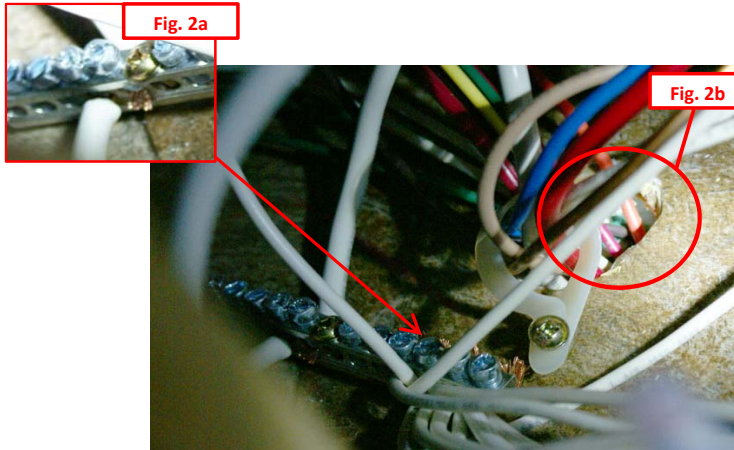

3. Locate the end of the ground wire (with the connector) under the unit. NOTE: The wire will need to be accessed and connected above the underbelly.

- Using the screw and star washer furnished with the kit, attach the ground connector to the frame (I-beam) of the unit.  
NOTE: The order of application should be screw, ground connector and star washer (**Fig. 4a**).

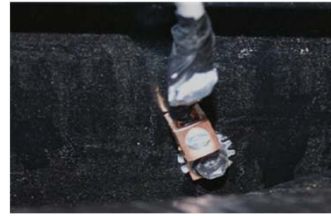

- Make sure underbelly is securely back in place.