



Recall Campaign

NHTSA#: 13V-516

TC#: 2013-362

Job Code: 9901119

Flat Rate: 0.25 hours

REQUIRES PARTS TO BE ORDERED FROM Entegra for every unit.

ACTION REQUIRED: Install split loom and secure to the basement floor using "P" clamps

MODELS / UNITS:

2010 Entegra Class A Motor Homes

Anthem

42DL **A14E** 8053, 8055
42RB **A14G** 8053, 8056, 8059-8060

Cornerstone

45DL **A16R** 8051
45RB **A16V** 8052-8054

2011 Entegra Class A Motor Homes

Anthem

42DL **B14E** 8053-8056, 8061
42RB **B14G** 8051, 8055, 8058-8060, 8062, 8065, 8067, 8070-8072, 8077
42RBQ **B14N** 8053, 8055, 8061
44SL **B14X** 8052-8053

Cornerstone

45DLQ **B16D** 8051
45DL **B16R** 8051-8054
45RB **B16V** 8051-8059, 8061

2012 Entegra Class A Motor Homes

Anthem

42RBQ **C14N** 8064-8065, 8067-8068
42DLQ **C14T** 8057
44SL **C14X** 8057

Cornerstone

45DLQ **C16D** 8051-8057, 8059
45RBQ **C16F** 8051-8059

2013 Entegra Class A Motor Homes

Anthem

44DLQ **D14D** 8051-8055, 8057-8059, 8061-8062, 8064-8066, 8068-8069, 8071-8077, 8079-8085, 8087, 8089-8098
42DEQ **D14H** 8051-8056, 8058-8059, 8061-8064, 8066-8067, 8069-8076
42RBQ **D14N** 8051, 8053-8055, 8057-8067, 8069-8078, 8080-8092, 8094-8119, 8121-8124, 8126-8130, 8132-8137, 8139, 8141-8143, 8145-8148
42DLQ **D14T** 8051-8058, 8060-8061, 8063-8064, 8066-8074, 8077-8078
44SL **D14X** 8051-8059, 8061, 8063-8065

Cornerstone

45J **D16J** 8051-8054, 8056-8059, 8061-8064, 8066-8079
45K **D16K** 8051-8060, 8062-0105

2014 Entegra Class A Motor Homes

Anthem

44DLQ **E14D** 8052-8054
42DEQ **E14H** 8051-8060
42RBQ **E14N** 8051-8062

Cornerstone

45J **E16J** 8051-8055
45K **E16K** 8051-8058

KIT CONTENTS

Note: Kit can only be ordered using the order form included with this bulletin.


5 ft. Split Loom
(2) "P" clamps
(1) Instruction sheet

TOOLS/MATERIAL REQ.: Screw gun
Electrical tape

INSTRUCTIONS

1. Locate the freezer power cord in the exterior freezer compartment.

2. Install the split loom on both cords. Tape both ends of the conduit to the cords to help keep the cords securely into place.

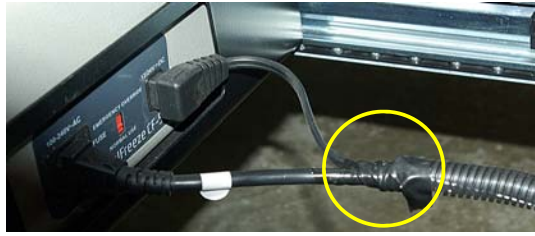

3. Install the (2) "p" clamps, screwing them to the compartment floor. Make sure the cord is positioned that the glide rails move freely without making contact with the power cord(s).

