



INSTRUCTIONS TO PERFORM CAMPAIGN 131

Models Affected:

Certain 2015 Winnebago® Vista models WFE26HE/WFE31KE and Itasca® Sunstar models IFE26HE/IFE31KE motorhomes.

These motor homes were manufactured April 26, 2014 through June 27, 2014.

Tools Required:

- Screw Gun (w/#2 Phillips Magnetic Tip)
- Slotted Screwdriver

Parts Required:

- Damper Plate

Procedure:

1. Remove (4) screws from perimeter of inside roof A/C assembly, (set aside). See figure A and B.

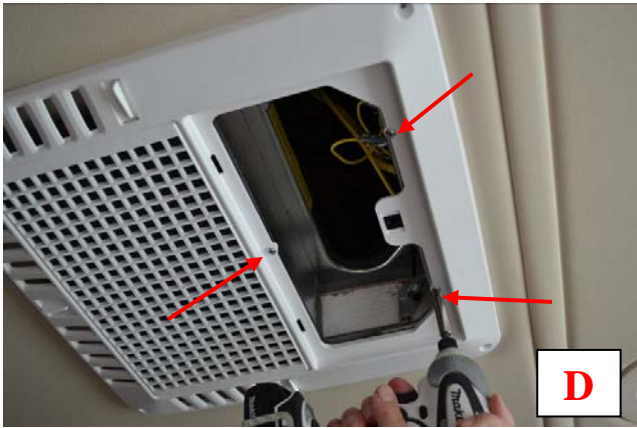


Figure (A) indicates diverter above cooktop that will be replaced with damper plate


2. Remove return air grate. See figure C.



3. Remove (3) screws located behind return air grate, (set aside). See *figure D*. This will release inside A/C shroud from the ceiling.



4. Place inside shroud on a solid surface. Using caution not to damage the retaining tabs, remove the right hand (passenger side) diverter. See *figure E and F*.

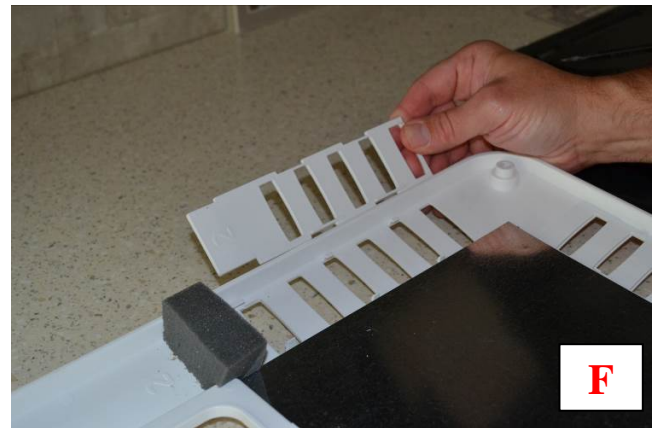

5. Using caution not to damage retaining tabs, install damper plate in place of diverter (label side up). See *figure G*.



6. Reinstall inside A/C shroud.
 - Install (3) screws under return air grate. *See figure D.*
 - Install (4) screws at perimeter of inside assembly. *See figure B.*
 - Install return air grate. *See figure C.*

7. When installation is completed, light the range, then turn on the roof air conditioner. Verify that the range flame remains constant, (even with a low flame).