


INSTALLATION INSTRUCTIONS

FOREST RIVER/COACHMEN Part #: C01206817

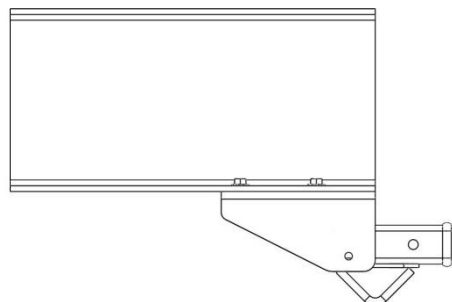


Do Not Exceed Lower of Towing Vehicle
Manufacturer's Rating or

Hitch Type	Max Gross Trailer WT (lbs)	Max Tongue WT (lbs)
Weight Distributing	N/A	N/A
Weight Carry Ball Mount	5,000	500

Hitch Shown In Proper Position

IMPORTANT NOTES:


USE ONLY PULLRITE SUPPLIED OR APPROVED BOLTS, LOCKNUTS, AND WASHERS TO INSTALL THIS HITCH. ALL BOLTS ARE GRADE 5 OR HIGHER.

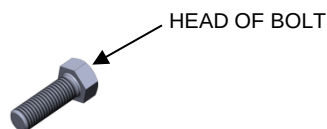

CHASSIS

WARNING:

- DO NOT LUBRICATE BOLT OR NUT THREADS.
- TORQUE BOLTS TO SPECIFIED VALUES LOCATED IN THE "INSTRUCTIONS", BOLTS MAY FAIL IF OVER TIGHTENING.
- DO NOT DRILL OR WELD THIS RECEIVER ASSEMBLY.

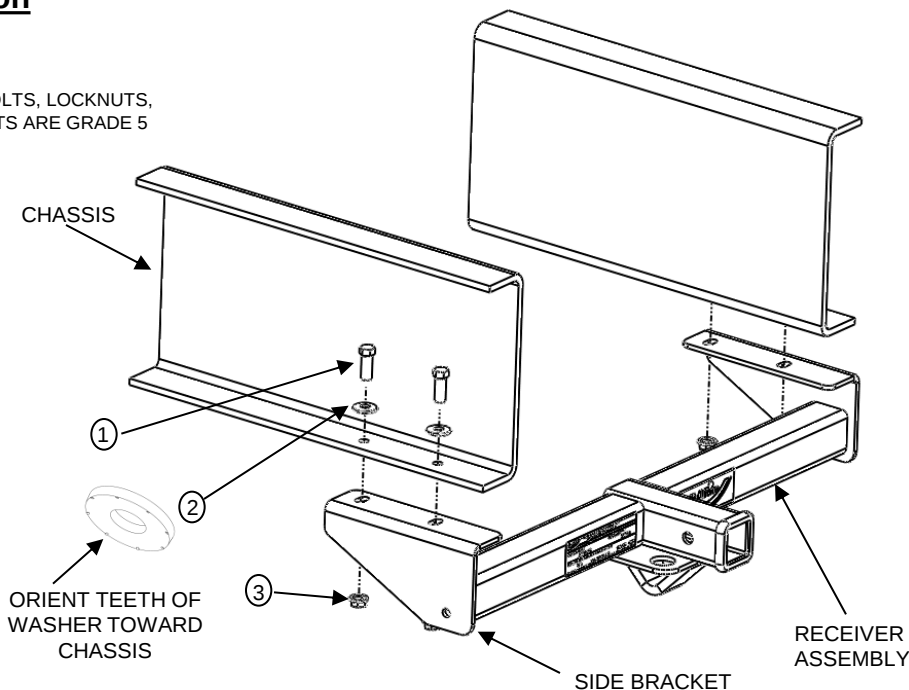

①	Qty (4)	Hex Bolt ½ - 13 x 1.50 Grade 5	③	Qty (4)	1/2" Serrated Flange Nut
②	Qty (4)	½" Conical Washer			

Instructions:

- Raise receiver assembly into position as shown. Align assembly so that the side bracket is approximately flush with rear of chassis. Reposition receiver assembly forward or reward if required.
- Install and loosely tighten ½" hex head bolts, ½" conical washers and ½" hex nut as shown above.
- Center hitch box in between chassis.
- Torque 1/2" fasteners to 75 lbs.-ft.** [Torque complete and then re-torque each. Always apply torque to fasteners from the head of the bolt and not from the nut (see **IMPORTANT NOTES**).]

Note: Check hitch frequently, making sure all fasteners and ball are properly tightened. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C. Regulation V-5 and SAE J684.