



Recall 60 Technical Tips



Ferrari
California

- The following Technical Tips apply only to the ***Ferrari California*** model and will assist you in performing recall 60
- You do not need to order the hardware parts from FNA, the hardware can be sourced locally
- Special thanks to *Ferrari of Newport Beach*



Recall 60 Technical Tips



Ferrari
California

- Removal of Dash Vents
 - Using a plastic wedge, pry the edge of the vent to loosen it



Be careful when removing the dash vents in order not to damage the vent locking clips or the leather




Recall 60 Technical Tips



Ferrari
California

- Using your fingers, grip the inside of the vent

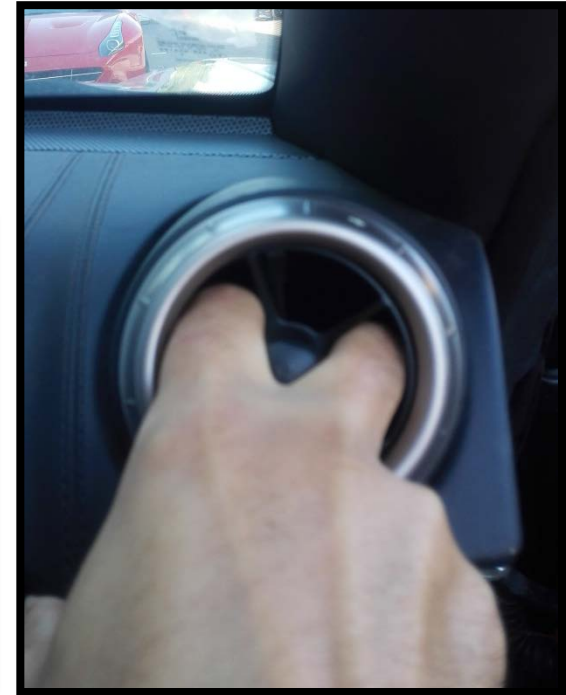

Be careful when removing the dash vents in order not to damage the vent locking clips or the leather




Recall 60 Technical Tips



Ferrari
California

- Remove the dash vent

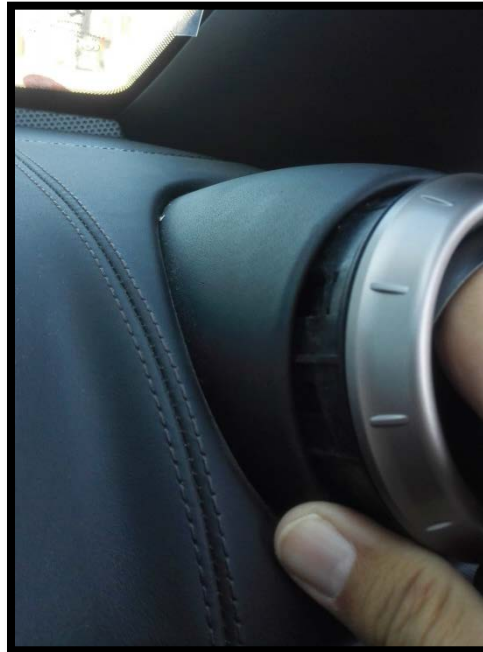

Be careful when removing the dash vents in order not to damage the vent locking clips or the leather



Recall 60 Technical Tips



Ferrari
California

- Remove the Glovebox





Recall 60 Technical Tips



Ferrari
California

- Remove the defrost vent tube





Recall 60 Technical Tips



Ferrari
California

- Remove the lower dash bracket and vent tube






Recall 60 Technical Tips



Ferrari
California

- Remove the foam
- When removing the foam pad (13) be careful of the **wiring** behind it

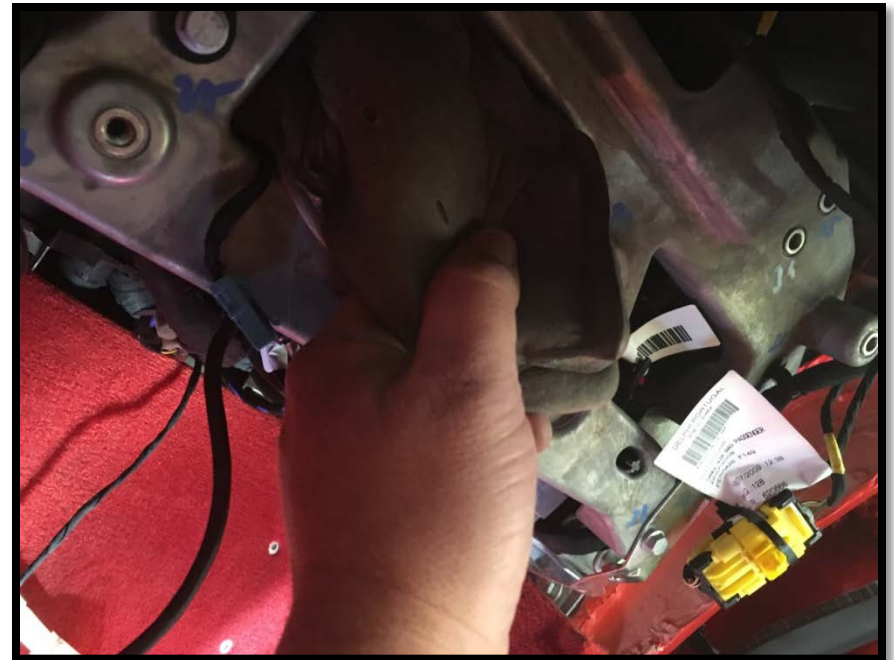



Recall 60 Technical Tips



Ferrari
California

- Bracket Removal and Installation
 - Remove 4 bolts from airbag mounting bracket
 - Removal of tack welded nuts
 - Installation of bracket
 - Reinstallation



Recall 60 Technical Tips



Ferrari
California

- Removal of airbag with bracket
 - Once the bracket (1) is removed, the two nuts which are tack welded to the bracket must be removed






Recall 60 Technical Tips



Ferrari
California

- Remove 4 airbag bracket bolts
 - You can use a swivel/wobble socket with extension to break tack welds.

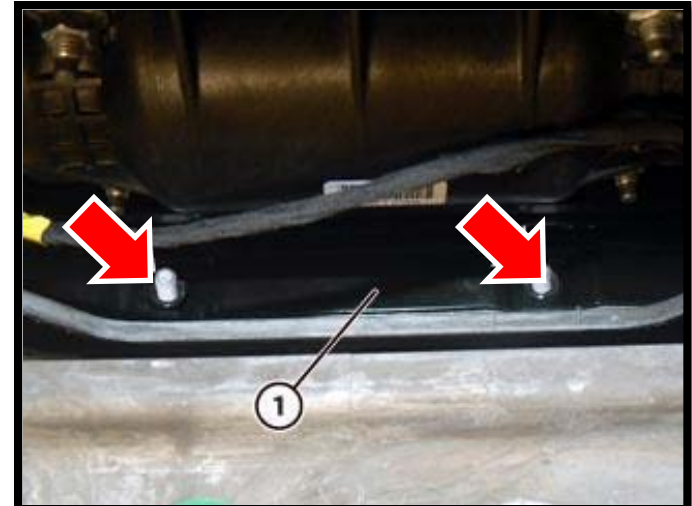



Recall 60 Technical Tips



Ferrari
California

- Reinstall airbag and bracket
- Install 4 nuts attaching airbag to dash
- Install 4 bolts attaching bracket to airbag
- Install front two bolts for airbag bracket using original bolts but replacement nuts with 6mm nuts and lock washers (replaced tack weld)





Recall 60 Technical Tips



Ferrari
California

- Reinstall foam
- Reinstall vent tube and bracket under dash
- Reinstall outer vent tube
- Reinstall glovebox





Recall 60 Technical Tips

Ferrari
California



- Submitting documentation
 - Take pictures of old and new airbag labels
 - Submit traceability form, NAB full cycle, and Picture(s) of airbags to a Red-On-Line

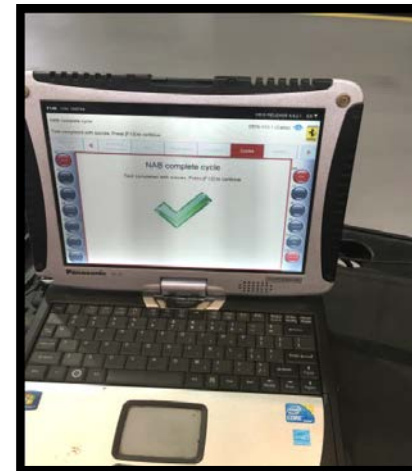
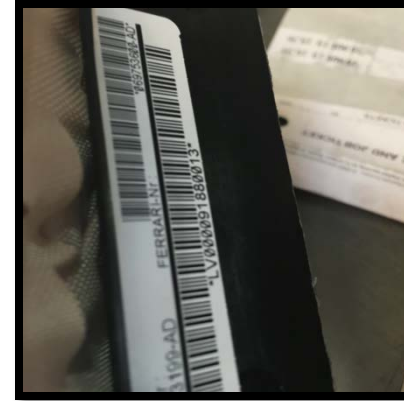


Fig. A