



Recall Campaign

NHTSA#: 16V-761

TC#: 2016-538

Job Code: 9903329

Flate Rate: 1hr

Date of Publication: November 2016

PARTS ORDER IS REQUIRED

Action Required

Replace Tempurpedic Sealy King Mattress w Sleep Number Mattress
DO NOT RETURN THE RECALLED MATTRESS TO JAYCO

**DO NOT INSTALL THE RECALLED TEMPURPEDIC MATTRESS IN A RV
 THE MATTRESS IS NOT COMPLIANT TO FMVSS CODE 302 "Flammability of Interior Materials"**

Model / Serial Numbers

2016 Anthem MH	G1	4A8051-8058	2017 Anthem MH	H1	4A8051-8064
		4B8051-8189			4B8051-8141
		4D8052-8074			4D8051-8060
		4H8051-8075			4H8051-8069
		4L8054-8062			4N8051-8076
4N8051-8109					
2016 Cornerstone MH	G1	6A8052-8076	2017 Cornerstone MH	H1	6A8051-8059
		6B8051-8141			6B8051-8107
		6J8051-8056			6J8051-8053
		6K8051-8080			6K8051-8066
					6W8052-8059



Parts Kit 16V-761

1 King size Sleep Number Mattress


Shop Supplies/Tools

1-1/4" Spade wood bit
 Drill

- 1 Set the front passenger seat back as far as it will go.
 Remove the Tempurpedic mattress from the bed platform.

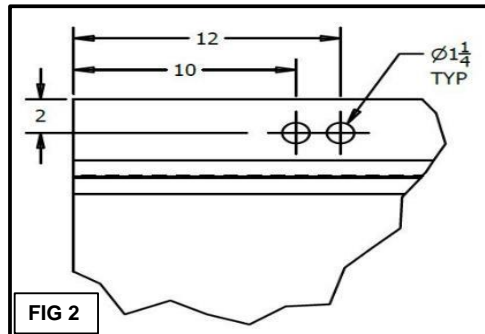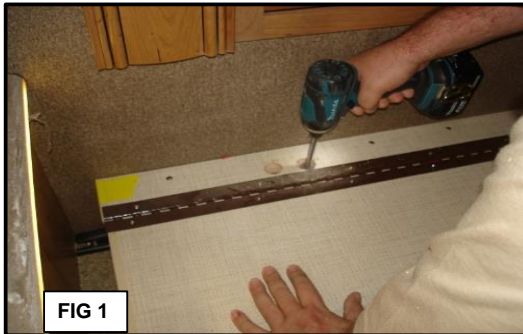


- 2 **Fig 1:** Drill holes in the bed platform according to the dimensions shown in **Fig 2**.
Fig 2: Two 1 1/4" holes for the air tubing.
 Holes are 2 inches down from the head of the bed platform.
 First hole is 10 inches in from the upper left side of the bed platform.
 Second hole is 12 inches from the upper left side of the bed platform.

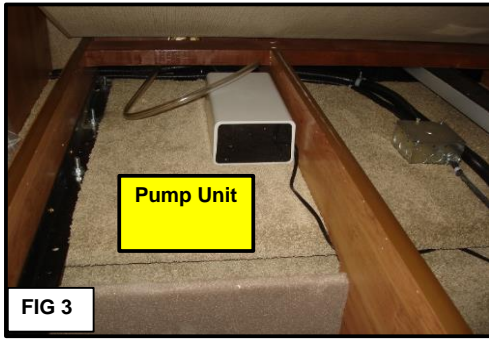

3 **Fig 3:** Standing at the foot of the bed, place the pump in the upper left corener under the bed platform. It will not be attached or screwed down.



Fig 4: Route the power cord of the pump under the middle wood support of the bed platform.

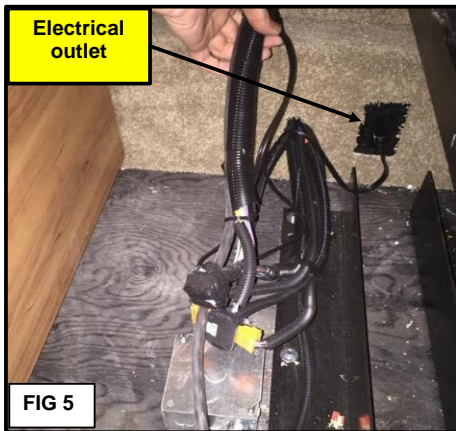

4 **Fig 5:** Plug the pump into the outlet.


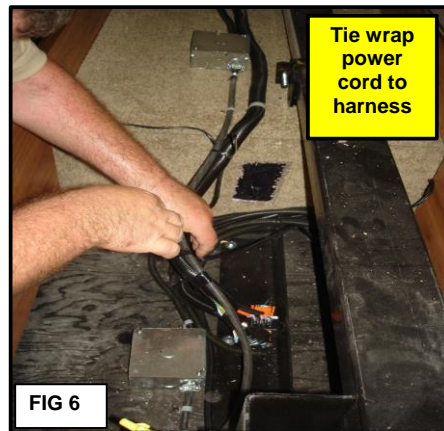


Fig 6: Wire tie the power cord to the harness.

Make sure the slideout will move in and out without damaging the harness or power cord.

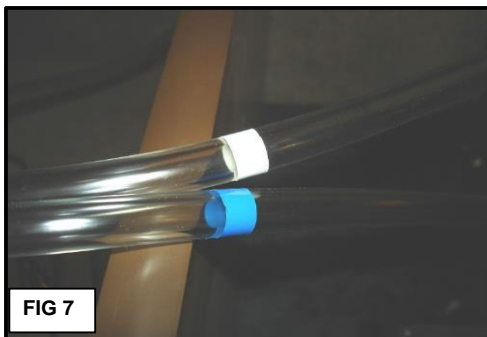

5 **Fig 7:** The air tubes for the pump are color coded.

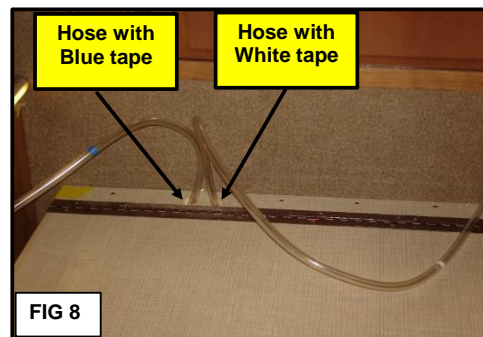


Fig 8: Feed the tube with blue tape into the lefthand hole of the bed platform Fig 1.

Feed the tube with white tape into the righthand hole of the bed platform Fig 1.



6 **Fig 9:** Lay the mattress on the platform with the zipper in the upper lefthand corner (where the holes are). Unzip the mattress cover completely and remove.



Fig 10: Leave the bottom portion of the mattress laying on the platform.



FIG 11



FIG 12

- 6 **Fig 11:** Install the foam sidewall pieces.
 Side pieces have the "notches" on the ends.
 End pieces are rounded at each end.
Fig 12: Pieces fit together and should fit tightly against the sides of mattress.
 Pull the sides of the mattress cover up over the foam sidewall pieces.



FIG 13

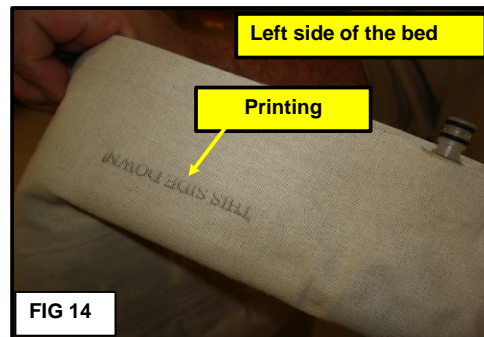


FIG 14

- 7 **Fig 13:** Lay the air bladders down between the foam sidewall pieces.
 The hose connectors go to the head end of the bed where the hoses are located.
 Air hose connectors lie on the bottom of the bed.
Fig 14: Locate The air bladder that states "This Side Down" on the left side of the bed

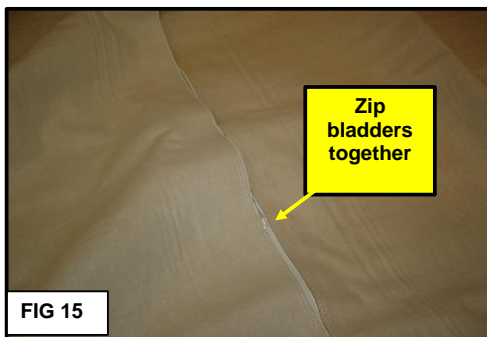


FIG 15




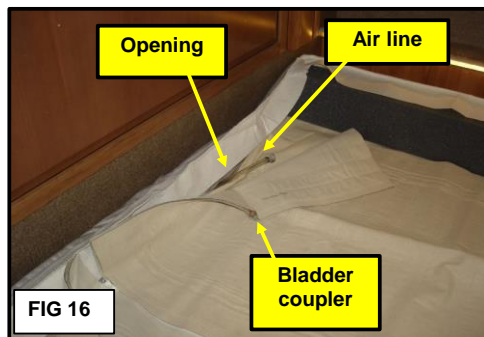


FIG 16

- 8 **Fig 15:** Zip the two air bladders together
Fig 16: There is an opening at the head of the mattress for the tubes to attach to each bladder coupler.
 The blue tube on the lefthand side and the white tube on the righthand side.

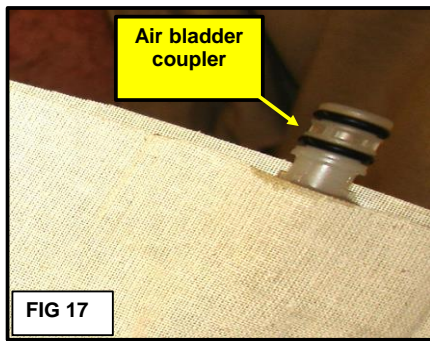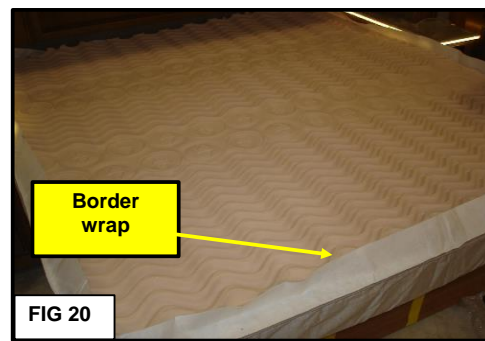

- 9 **Fig 17:** Inflate both the air bladders. Using the bed pump will take approximately 20 minutes.
Fig 18: Using an air compressor and an air blow gun only a minute or two.
 Use an air blow gun similar to this one with a tapered tip that will fit tightly to the air bladder coupler.
 Hold the tip of the blow gun to the coupler and fill one of the bladders.
 Fill it **ONLY** to the point where it is almost the height of the foam sidewalls.
DO NOT OVER-INFLATE THE BLADDERS!

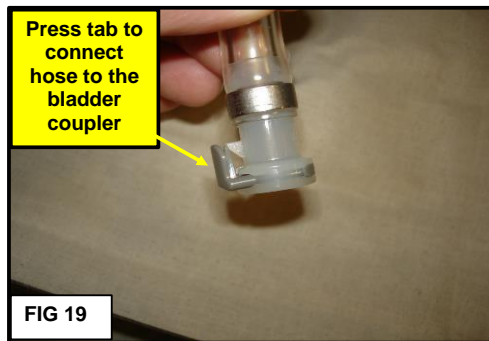

- 10 **Fig 19:** When you have the bladder inflated, quickly attach the bed air hose to the bladder coupler. Press the small tab on the air hose fitting and slide it over the bladder coupler, it clicks when installed properly. Repeat steps 9 and 10 for the other air bladder.
Fig 20: Put the foam comfort layer on top of the air filled bladders. The border wrap should lay over the comfort layer all the way around the bed.



- 11 **Fig 21:** Zip the top mattress cover back on the bed.
Fig 22: Before installing batteries in the remote control, make sure you have 110VAC power to the bed pump. If you install batteries and the pump is not connected to 110VAC the remote will indicate connectivity error: The bed and the remote will not be able to sync properly.