

RECALL 20V605 REMEDY INSTRUCTIONS – GEORGETOWN ONLY

	Make(s): GEORGETOWN Model(s): MANY Model Year(s): 2021	Repair Code: RC-098-01-00-003807 Allotted Time: GT5 1.0 hrs /GT7 2.0 hrs. Inspection Code: N/A Allotted Time: N/A
	Concern: The motor in the P2K Bunk System has a potential to fail due to an internal gear failure.	Photo(s) Required: NO Prior Authorization Required: YES Part(s) Kit Number: Part(s) Return: YES

Disconnect the vehicles' battery Positive and Negative, disconnect any House battery(s) Positive and Negative, if equipped with a generator ensure it is off and lastly, ensure the vehicle is disconnected from shore power. Block any tires/wheels to prevent the vehicle from rolling. Failure to do so may result in electrocution, fire or other personal injury, property damage and/or death.

ON THE GT5 SERIES, PRIOR TO CONDUCTING THE LCI REMEDY:


RAISE THE BUNK ALL THE WAY UP;

REMOVE THE BOTTOM PANEL FROM THE BUNK BY REMOVING THE BUTTON CAPS AND REMOVING THE SCREWS. SET THE BOTTOM PANEL, BUTTON CAPS AND SCREWS ASIDE;

REMOVE THE PLASTIC COVER ON THE BOTTOM OF THE BUNK TO EXPOSE THE MOTOR;

NOW MOVE ON TO THE LCI REMEDY INSTRUCTIONS;

ONCE COMPLETED, REINSTALL THE BUNK BOTTOM PLASTIC FIRST, THEN THE BOTTOM PANEL USING THE MATERIALS SET ASIDE.

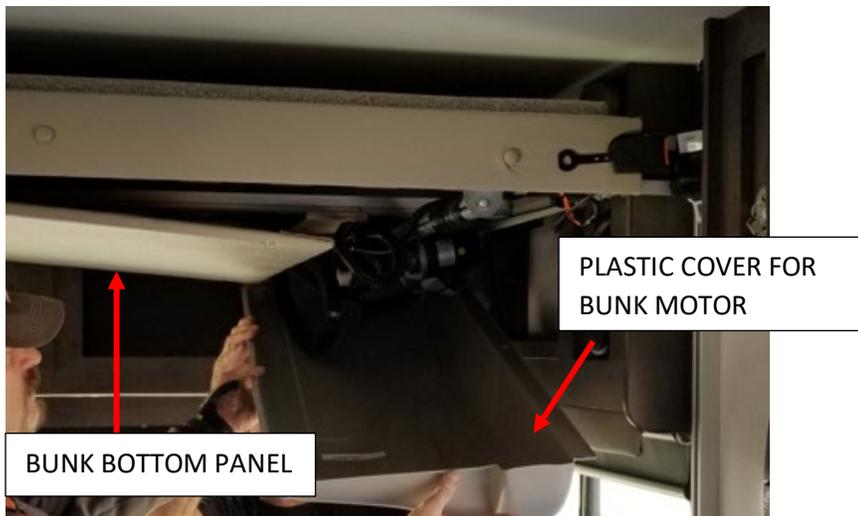

RECALL 20V605 REMEDY INSTRUCTIONS – GEORGETOWN ONLY



Make(s): GEORGETOWN
Model(s): MANY
Model Year(s): 2021

Concern:
The motor in the P2K Bunk System has a potential to fail due to an internal gear failure.

Repair Code: RC-098-01-00-003807
Allotted Time: GT5 1.0 hrs /GT7 2.0 hrs.
Inspection Code: N/A
Allotted Time: N/A
Photo(s) Required: NO
Prior Authorization Required: YES
Part(s) Kit Number:
Part(s) Return: YES

ON THE GT7 SERIES, PRIOR TO CONDUCTING THE LCI REMEDY:


LOWER THE BUNK ALL THE WAY DOWN UNTIL IT CONTACTS THE BOTTOM STOPS;

CLIMB ONTO THE BUNK AND FIND THE RECTANGULAR PANEL INSTALLED ON A CABINET FACE ON THE DOOR SIDE WALL, ABOVE THE BUNK;

REMOVE THE PANEL FROM THE CABINET, SET THE PANEL AND SCREWS ASIDE TO EXPOSE THE BUNK MOTOR;

NOW MOVE ON TO THE LCI REMEDY INSTRUCTIONS;


ONCE COMPLETED, REINSTALL THE PANEL AND SCREWS USING THE MATERIALS SET ASIDE.

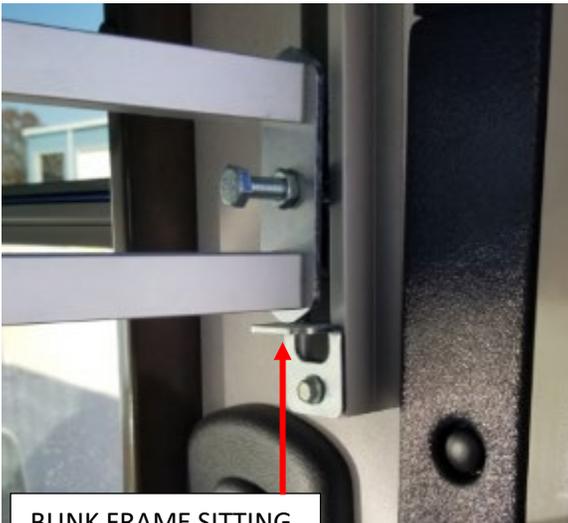

BUNK FRAME SITTING ON BOTTOM STOPS



PANEL COVERING BUNK MOTOR

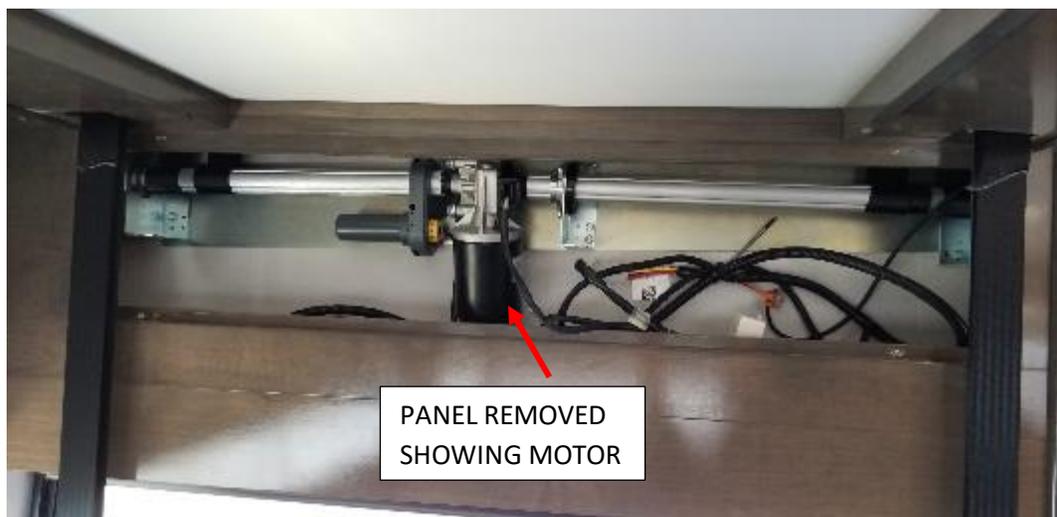

PANEL REMOVED SHOWING MOTOR