

# Recall Work Instruction

Please read the entire Work Instruction before proceeding with any work. Contact Rosenbauer America if there are any concerns with information contained in this document.

Subject: Remedy Work Instructions for Recall Number 21V-290

Applies To: Certain 2015-2021 Rosenbauer and Commercial Chassis

Condition: On a small number of fire trucks, the taillights may be too bright. This could make it difficult for a following driver to tell when the brake lights turn on.

**Correction:** The installation of a diffuser will ensure the lamps are not too bright.

Parts needed: A diffuser provided by Rosenbauer

**Tools Needed:** Phillips Screwdriver

**Time Allowed:** .25 hours per diffuser

#### **Installation and Mounting Instructions:**

Step 1. Turn off truck.

- Step 2. Remove the four screws on the lens as indicated in Figure 1.
- Step 3. Remove the clear lens from the unit.
- Step 4. Remove the backing paper from the provided diffuser as shown in Figure 2 & Figure 3
- Step 5. Place the diffuser in the lens as shown in Figure 4. Ensure the diffuser is placed so that the side that had the paper backing is facing up.
- Step 6. Reinstall the lens to the unit as shown in Figure 5.
- Step 7. Secure the unit using the four screws removed in step 1.
- Step 8. Write the Recall # 21V-290 on the recall decal and stick to the officer side kick plate.

Figures are on the next page.

# **R** rosenbauer



Figure 1



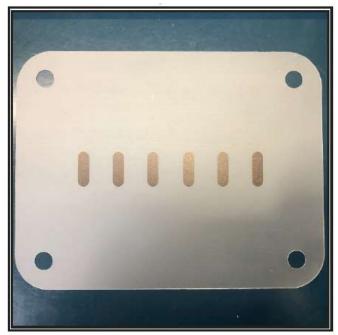


Figure 3

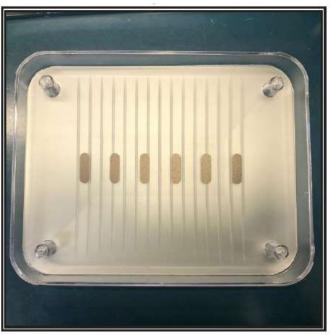


Figure 4

## www.rosenbaueramerica.com





Figure 5

### Safety Recall Decal Installation Instruction

Located in officer side kick panel.





#### www.rosenbaueramerica.com