


Service Bulletin – Install RIG tag on Polar Brand Semi-Trailer

Instruction for installing the certification tag on the Rear Impact Guard (RIG) in accordance with Polar NHTSA Recall #23V585.

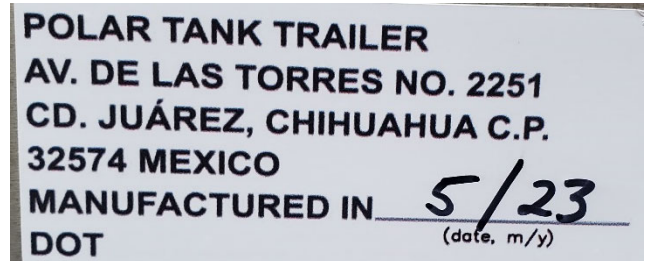

- 1) Tag will be installed on the passenger side of the RIG, on the *forward* side.



- 2) Self-Adhesive tag is to be applied approximately 10" from the edge of the tube as shown. Clean the dirt and grease from the tube before applying the tag using isopropyl alcohol, or similar cleaner.
- 3) Important: The manufacturing date must be written on the tag in permanent marker as shown above. The date to be used is the same as the trailer manufacturing date listed on the trailer data plate, which is on the drivers side near the support legs.
- 4) Once the installation is complete, notify Peter Weis at Polar Tank Trailer. Since this is a Federal Recall, we will be following up to assure that the tag has been installed. Contact information:
 - a. E-mail pweis@entransinternational.com, or
 - b. Phone 320 746 3471 (leave message)