

GO-ES SpaceSaver Foldaway Service Instructions

20240130











Overview


Inspection

Rework

Inspection Step 1

Bring seat back cushion from stowed position (seat back cushion is folded down against seat cushion) to first engagement point of the back lock (most upright position of the seat back cushion)


Add a piece of tape on the dump cover shroud so that it touches the handle

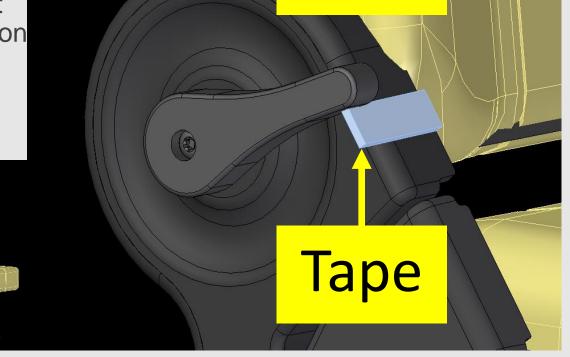

Front

Inspection Step 2

Pull the handle to release the seat back and actuate the back into the most reclined position

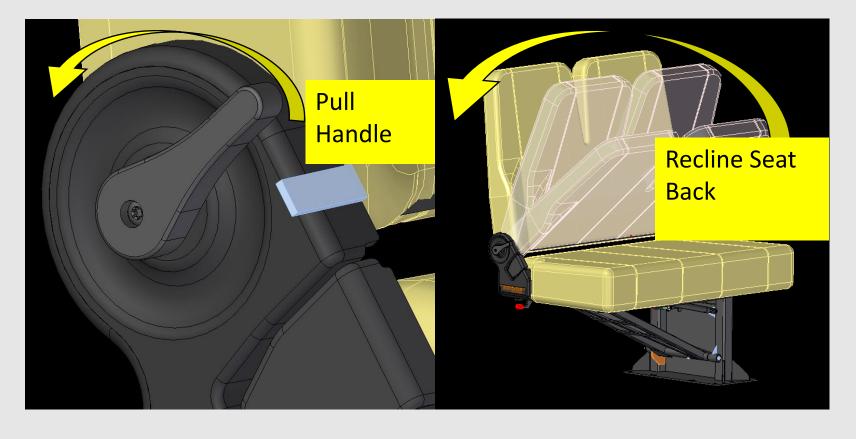


Inspection Step 3

Release handle and pull seat back forward

If handle returns back to original position, no additional work needed


If handle does not return back to the original position then seat will need to be reworked

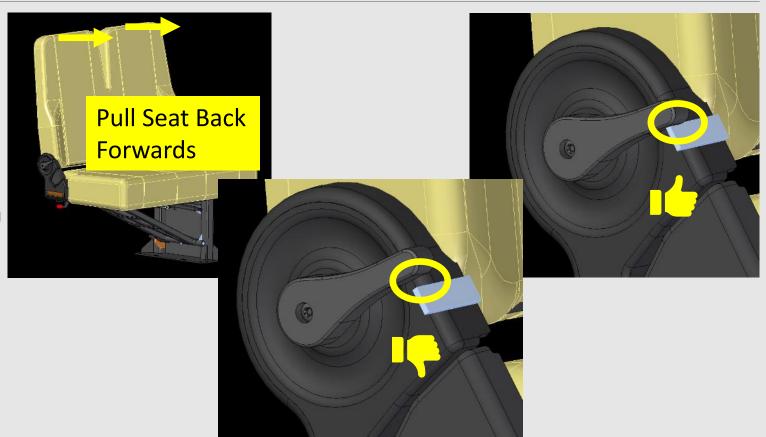

Rework Step 4


3/21/2024

Fold the seat back down to the cushion to expose the stop brackets

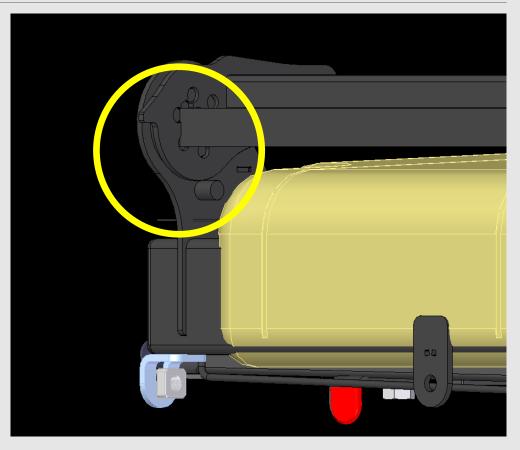

Rework Step 5

On the stop bracket adjacent to pin, use a Dynafile or similar tool to grind off up to 1/32" off of the face of the stop

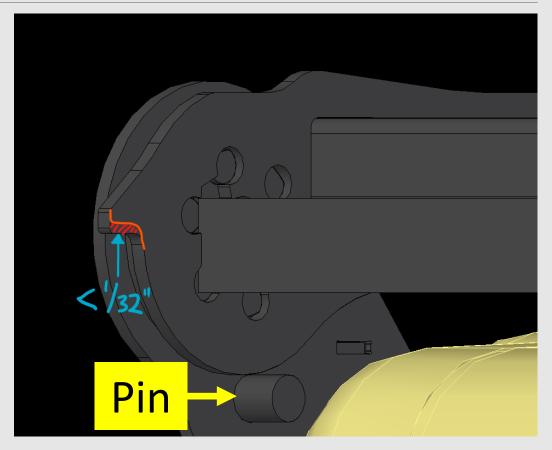

Rework and Final Inspection Step 6

Repeat step 3 to recheck handle and if necessary repeat steps 4-5 to get handle to appropriately lock



Thank you

Will O'Connor

Lead Engineer - New Product Design

(773)-524-2440x321 / Will.OConnor@FreedmanSeating.com









