




# CLIP-ON BRACKET

REPLACEMENT INSTRUCTIONS FOR STP56-015

REPLACEMENT KIT | STP54-080

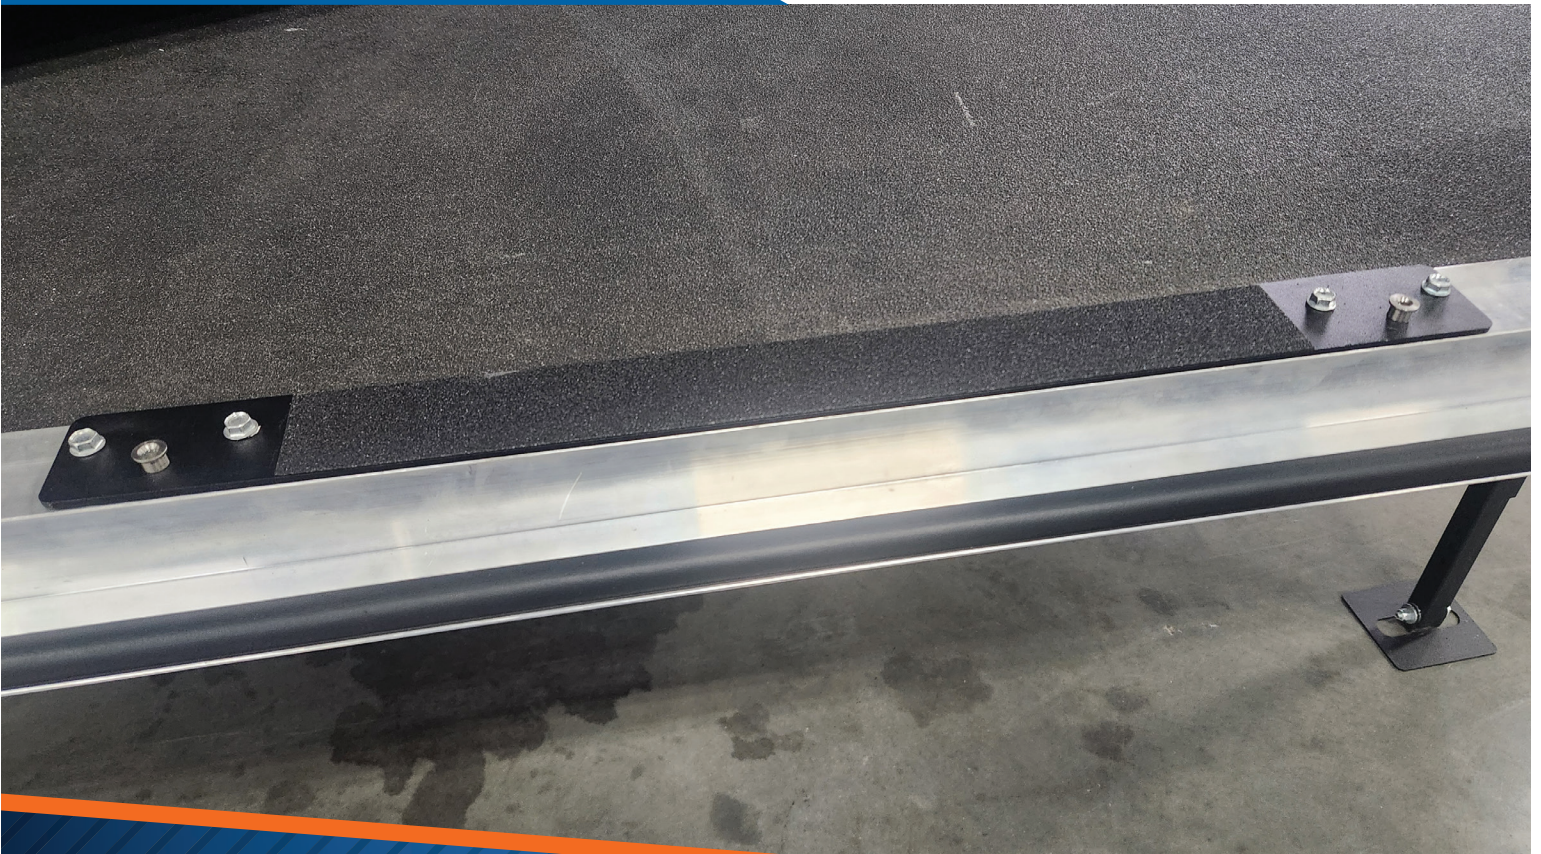

Above. Beyond. Always.

574.293.1581  
[www.MORryde.com](http://www.MORryde.com)

# CLIP-ON BRACKET

## INSTALLATION INSTRUCTIONS


### Tools Required:

- 3/8" Wrench/Ratchet
- Drill with 3/8" Driver Bit

### STEP 1

Remove the four mounting screws that secure the STP56-015 mounting bracket. Once removed, discard the original mounting bracket.

**Note:** It is OK to use a drill for the removal of each of the screws.

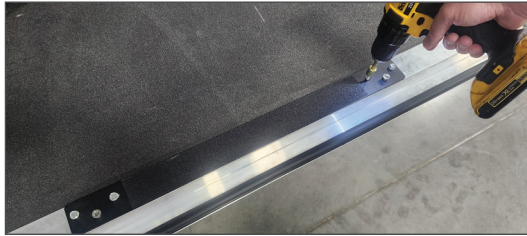

### STEP 2

Use the replacement kit (STP54-080) to attach the new mounting bracket. To install the new bracket, start by installing four mounting screws into the four original holes.

**Note:** The above mentioned holes will line up with the holes from the bracket that was removed.

**Note:** To avoid over-torquing these screws, it is necessary that final tightening be by hand with a 3/8" wrench.



### STEP 3

Use a drill and 3/8" driver to install the outer two new screws in the mounting brackets.

**Note:** To avoid over-torquing these screws, it is necessary that final tightening be by hand with a 3/8" wrench.

