


Required Parts Kit

2 Red High Temp Plastic Ties


2 Additional 1 3/4" Brackets

2 1/4" Bolts and Locking Nuts

1 Foil Wrapped Protective Cover

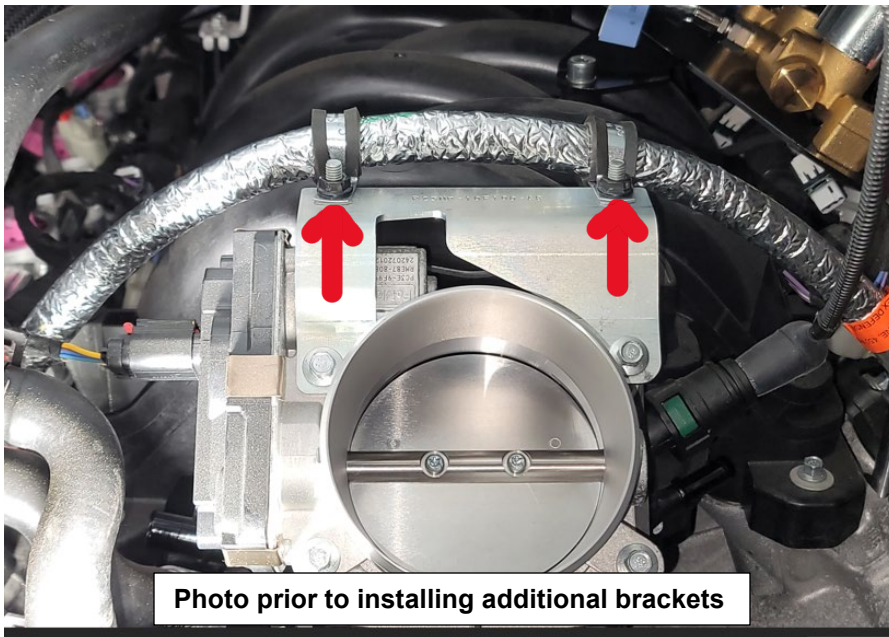

1 Remove the 2 nuts from the Front Crossover Fuel Line retention bracket.

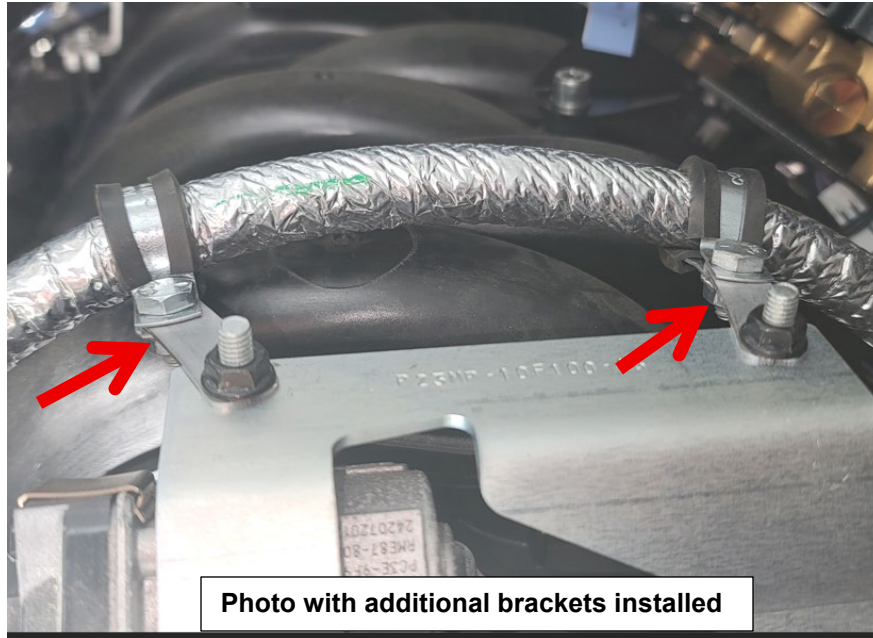

- 2** Add the 2 additional brackets to move the 2 P clamps holding the Front Crossover Fuel Line towards the rear of the engine. Align the additional brackets until proper clearance between the Front Crossover Fuel Line and the alternator is obtained, then tighten the fasteners in place at 10 NM +/-2.

- 3** Apply the foil wrapped protective cover with 2 high temp plastic ties to the concerned area of the Front Crossover Fuel Line as a precautionary measure.

- 4** Reinstall all removed components.

- 5** Once the inspections and the needed repairs are completed contact Coach and Equipment Mfg. Corp. at (800)-724-8464 for reimbursement.