

## CONTOURE COOKTOP Baffle INSTALLATION PROCEDURE



Step 1: Turn off gas to appliances

Step 2: Open glass lid and lift off burner grate



Step 3: Remove lid assembly by removing two small screws at rear of cooktop. Once screws are removed lift from rear and slide back to remove cover.



Step 4: Remove four mounting screws from the side of the cooktop assembly



Step 5: Slide assembly forward and lift up. Be careful not to bend copper gas line.




Step 6: Install baffle pan under cooktop assembly. Pan should be tight to the front inside surface of the cabinet. Make sure wires are through the gas line notch.



Step 7: Seal the gas line notch around the wires and gas line with foil tape.



Step 8: Push cook top assembly back and down and reinstall screws removed in step 4.

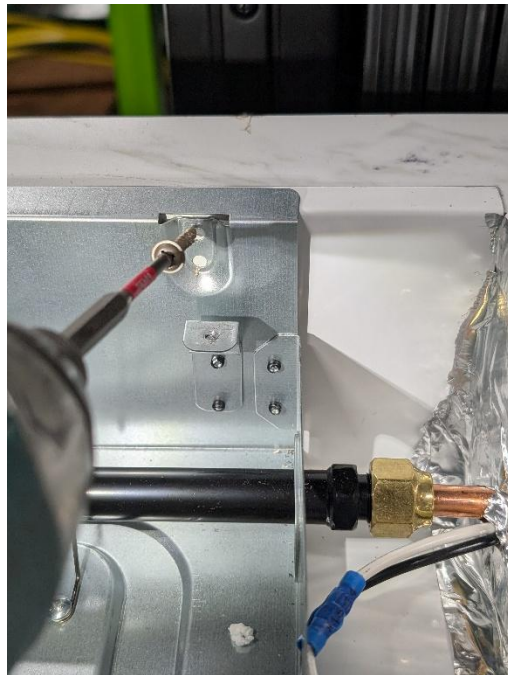

Step 9: Reinstall glass lid assembly and the two screws removed in step 3. Do not overtighten the screws.



Step 10: Reinstall the grill.



Step 11: Turn gas on to the appliances. Light the burners and start the furnace under the galley cabinet. When the furnace fan starts there should be no noticeable change in the burner flame.

