RECALL 26V295 REMEDY INSTRUCTIONS

FOREST RIVER	Make(s): Crusader Model(s): CSFFAM37 Model Year(s): 2026	Repair Code: RC-632-03-00-004829 Allotted Time: 1.50 HRS Inspection Code: RC-632-05-00-004828 Allotted Time: .10 HRS
	Concern: The waste water holding tank(s) ventilation pipe may not be terminated to the exterior of the vehicle.	Photo(s) Required: No Prior Authorization Required: Yes Part(s) Kit Number: Source Locally Part(s) Return: N/A

Turn off LP Gas at LPG Tank(s). Disconnect the vehicles' battery Positive and Negative, disconnect any House battery(s) Positive and Negative, if equipped with a generator ensure it is off and lastly, ensure the vehicle is disconnected from shore power. Block any tires/wheels to prevent the vehicle from rolling. Failure to do so may result in electrocution, fire or other personal injury, property damage and/or death.

1. REMOVE REAR BATHROOM DOOR, DOOR JAMB AND SLIDER DOOR HARDWARE.
2. LOOSEN THE PANEL TO WHERE YOU CAN ACCESS THE VENT PIPE AND ROOFLINE OF THE WALL. LOOSEN PANEL INSIDE OF THE BATHROOM. FIGURE 1 & 2 SHOW THE LOCATION OF THE VENT PIPE
3. USE A 1 ¾" HOLE SAW TO DRILL THROUGH THE WALL HEADER AND THE ROOF. DRILL HOLES DIRECTLY ABOVE UNFINISHED VENT PIPE IN THE WALL.
    A. RECOMMENDED TO DRILL WALL HEADER OUT, THEN ENSURE NO WIRES ARE VISIBLE BEFORE DRILLING THROUGH THE ROOF
4. USE A 1 ½" PIPE COUPLER TO GLUE EXISTING VENT PIPE AND A 24" PIECE OF 1 ½" PIPE THROUGH THE ROOF
    A. ENSURE BOTH SIDES OF COUPLER ARE GLUED
5. ON THE ROOF, INSTALL A VENT PIPE COVER WITH BUTYL TAPE UNDER THE SCREW HOLES
6. AFTER VENT PIPE IS SCREWED DOWN, USE APPROVED SELF-LEVELING SEAL TO SEAL TO ROOF MEMBRANE
    A. ENSURE ALL EDGES AND SCREW HOLES ARE COVERED WITH SEAL
7. AFTER VENT PIPE IS INSTALLED
    A. REATTACHED PANEL
    B. REINSTALL DOOR JAMB, DOOR HARDWARE AND DOOR
    C. TRIM, PUTTY, AND CLEAN AS NEEDED
8. CLAIM REPAIR CODE

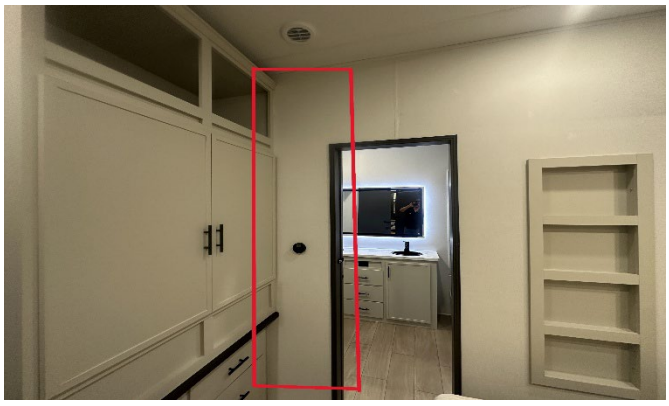


Figure 1 LOOKING INTO BATHROOM



FIGURE 2 INSIDE OF BATHROOM