



Dinette Floor Bracket

Bulletin Type:	Recall	Publication Date:	July 2026
Bulletin #(s):	26V-416	Make(s):	Jayco & Entegra Coach
Job Code(s):	9903659	Model(s):	Seneca & Accolade
Flat Rate(s):	9903659 - .50 HR Dinette Floor Bracket Installation	Model Year(s):	2027

Incident:	Bracket securing the dinette to the slide floor is not installed.
Affected Units:	2027 Jayco Seneca & 2027 Entegra Coach Accolade
Parts Kit:26V-416	Parts Kit #: 26V-416
	Qty 2 – BRACKET,DIN BK SPRT 2.50X29.00 .095 AL ANG Qty 14 – SCREW,RW QUAD 8.00X1.00 TWFS ZC Qty 12 – SCREW,MACH PAN PHP .25-20X.75 ZC
Misc. Tools & Supplies:	Screw gun with Square head & Phillips bits.
Parts Return Information:	N/A


DINETTE FLOOR BRACKET INSTALLATION INSTRUCTIONS

1. Remove the back and seat cushions from the rear (of the coach) side of the dinette. Open the lid so the interior of the dinette is accessible.
2. Remove the machine screws from the interior of the dinette front.
 - a. Note: The machine screws may not be in the dinette. If they are not in the dinette, use the machine screws provided to secure the bracket to the dinette.



Fig. 1.1



3. Place one of the brackets on the floor inside of the dinette. (Figure 1.1) Line up the top holes on the bracket with the machine threaded holes in the dinette. (Figure 1.2)

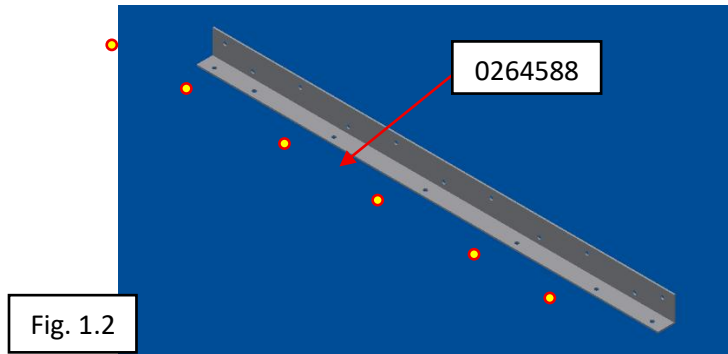



4. Hand tighten the machine screws through the bracket and into the dinette.
 - a. **Note: The bracket may need to be slightly tipped at an angle to get the bolts started. Tightening them with a screw gun will pull the bracket tight to the dinette.**
5. Go back through with a screw gun and Phillips bit and fully secure each machine screw into the dinette.
6. With your screw gun, swap out for the square head bit and use 7 fasteners to secure the bracket to the floor. (Figure 2.1 & Figure 2.2)

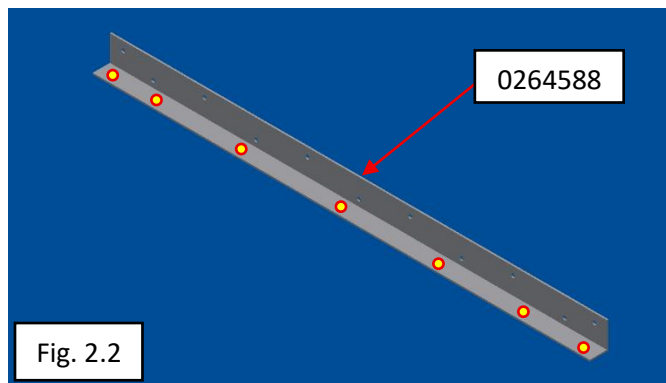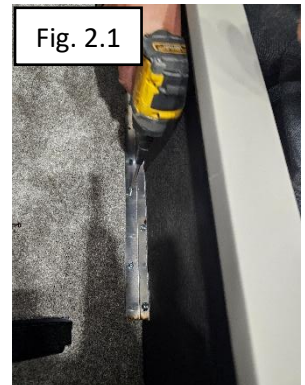

7. Close the rear side of the dinette and place the cushions back on.
 - a. **Note: Make sure to route the seat belts through the dinette and cushions so they are visible on the cushions.** (Figure 3)



8. Remove the back and seat cushions from the front (of the coach) side of the dinette. Open the lid so the interior of the dinette is accessible.
9. Use a screw gun with square head bit to free the p-clamp with the small harness bundle from the floor.
 - a. **Note: This can be moved out of the way of the bracket for installation and will be re-secured at the end of the repair. (Figure 4)**
10. Repeat steps 2-6 to install the bracket on the front dinette.
11. With the bracket installed, re-secure the wire harness bundle that was moved in step 9. (Figure 5)

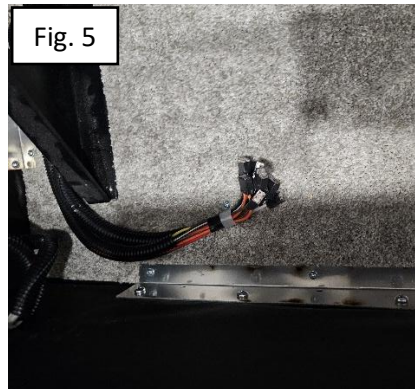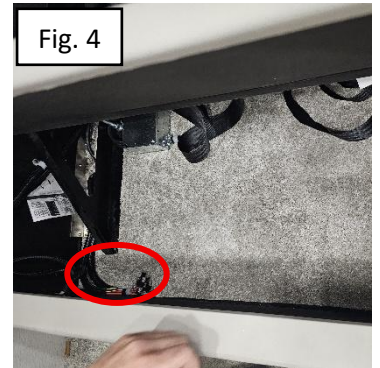

12. Close the front side of the dinette and place the cushions back on.
 - a. **Note: Make sure to route the seat belts through the dinette and cushions so they are visible on the cushions.** (Figure 3)

Jayco's sole obligation under our limited warranty is to repair or replace defective materials and/or workmanship deemed our responsibility as determined by Jayco in our sole discretion. Jayco reserves the right to use new and/or remanufactured parts or materials of similar quality to complete any work, and to make parts and/or design changes as appropriate without notice to anyone. Jayco designs and/or materials changes are done without obligation to incorporate such changes in previously manufactured product. Jayco makes every reasonable effort to ensure field remedies will not adversely affect performance and/or safety of the unit. This field remedy is not intended to extend to future performance of this RV, or any of its materials, components or parts beyond the standard warranty period. The RV owner's obligation to notify Jayco, or one of its independent, authorized dealers, of a claimed defect does not modify any obligation placed on the RV owner to contact Jayco directly when attempting to pursue remedies under state or federal law.

903 South Main Street • P.O. Box 460 • Middlebury, IN 46540